


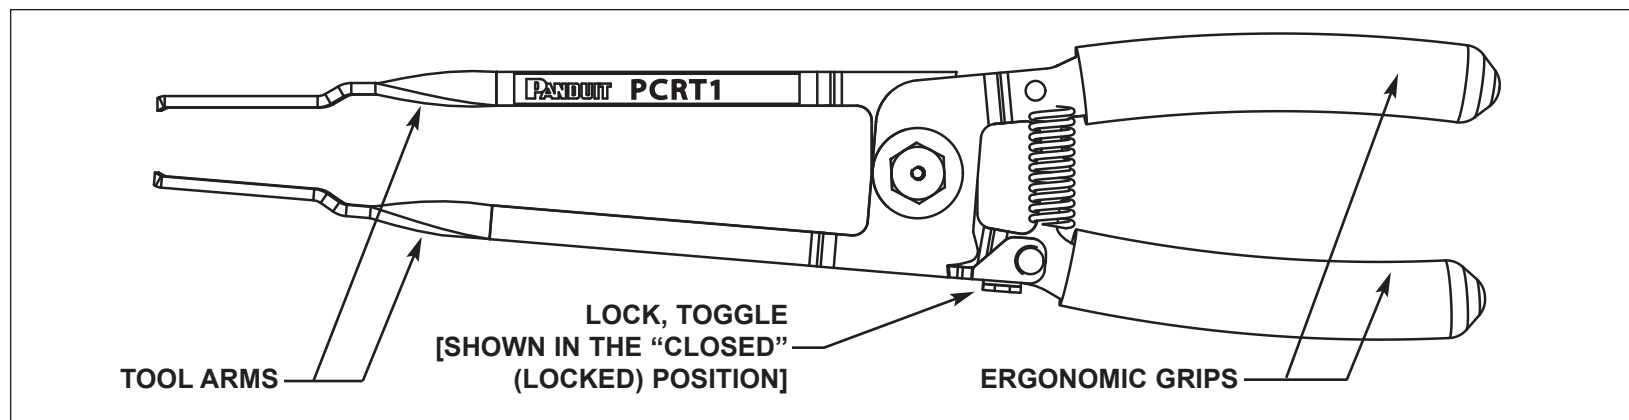


- The open arms allow the operator to pass over cabling that interferes with plug accessibility
- PCRT1 can be used “open” (unlocked) for copper patch cord plugs
- PCRT1 can be used “closed” (locked) for fiber optic patch cord connectors
- PCRT1 can be used by either right or left handed operators

PCRT1 is supplied with three different style connector boots:





- (2) for LC/SC fiber optic patch cord connectors, color: black
- (2) for ST fiber optic patch cord connectors, color: black
- (1) for PVIQ copper patch cord plugs, color: off-white

OPERATION

1. If working with fiber optic patch cord connectors, apply desired boots to the tool arms.
2. Place the arms on the fiber optic patch cord connector or copper patch cord plug-latch (see figures below); the tool grip is squeezed lightly to obtain a firm grip on the connector/plug.
3. Pulling the tool in a backwards direction will remove the connector/plug from the module.
4. To install connector/plug, place connector/plug in arms, lightly squeeze grip (tool will hold connector/plug-latch), and push connector/plug into module with latch on the bottom.

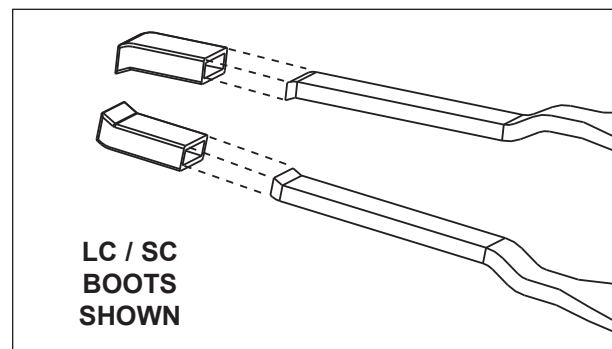

NOTE: No boots are required for installing or removing standard RJ45 copper patch cord plugs.

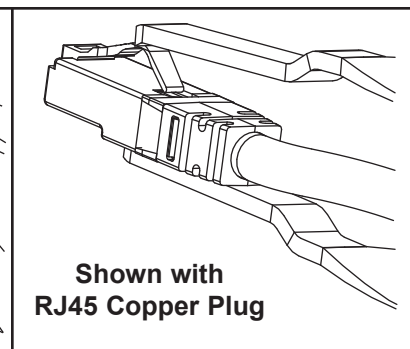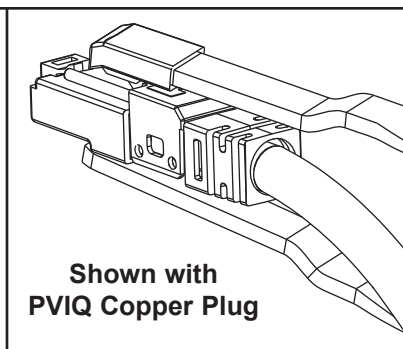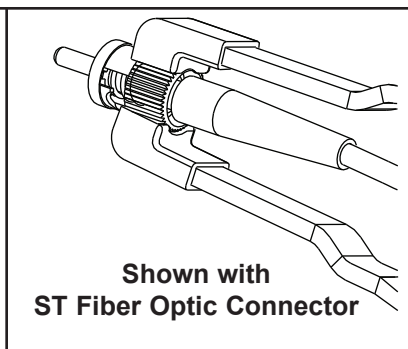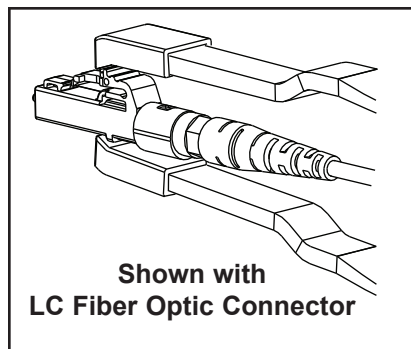

PANDUIT

PATCH CORD REMOVAL TOOL

Part No.:
PCRT1

FOR INSTALLING OR REMOVING:
COPPER PATCH CORD PLUGS AND
FIBER OPTIC PATCH CORD CONNECTORS



WARNING:

When using this tool (as with any tool) in a static sensitive area, the operator should use an industry approved, standard grounding wrist strap system.



PANDUIT

www.panduit.com

Technical Support:
1-888-506-5400, ext. 86914
E-mail:
techsupport@panduit.com

Panduit Europe, EMEA Service Center
Almelo, Netherlands
Tel: +31 (0) 546-580-452 • Fax: +31 (0) 546 580 441
EU Website: www.panduit.com/emea
E-mail: emeatoolservicecenter@panduit.com

Panduit Latin America Headquarters
Guadalajara, Jalisco, Mexico
Tel: +52 (33) 3777-6000 • Fax: +52 (33) 3777-6010
Página web: www.panduit.com
Correo electrónico: cs-la@panduit.com

Panduit Australia, Melbourne (Head Office)
Dandenong, VIC
Aus. Tel: 1-800-PANDUIT / 1-800-726-384
Fax: 1-800-637-889
Email: cs-aus@panduit.com

Panduit United Arab Emirates
Dubai Internet City, Dubai
Tel: +971 4 3625435 /6 • Fax: +971 4 3908830
E-mail: cs-uae@panduit.com

Panduit China, Beijing
Xuanwumen Xidajie Xicheng District
Beijing, China
Tel: 8610 6641 0371 • Fax: 8610 6641 0375
Toll Free Customer Service:
North China: 10800 6500 211
South China: 10800 2650 211
E-mail: cs-ap@panduit.com

Panduit Singapore - Sales Office
Singapore, Republic of Singapore
Tel: 65 6379 6700 • Fax: 65 6379 6759
E-mail: cs-ap@panduit.com

お問い合わせ先：パンドウイトコーポレーション

• Tel: 03-6863-6050 • Fax: 03-6863-6100


Website: <http://www.panduit.co.jp/>

E-mail: cs-japan@panduit.com

NOTE:

In the interest of higher quality and value, Panduit products are continually being improved and updated. Consequently, pictures may vary from the enclosed product.

PCRT1 TOOL shown with KPCRT1-FL Flashlight Kit

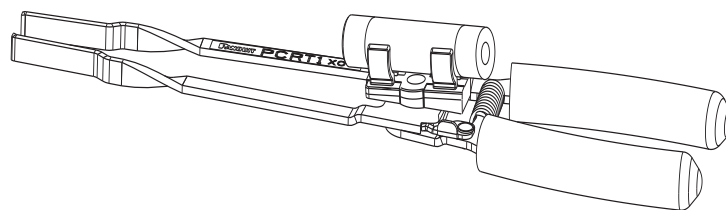

REPLACEMENT KITS AVAILABLE
(Sold Separately)

KPCRT1-FL Flashlight Kit
KPCRT1-TK PCRT1 Replacement Tip Kit