



KRN50 Series

50mm Compact Hybrid Recorders

■ Features

- 50mm thermal transfer method of paper recorder
- Data logger function for recording without paper
- 2-channel simultaneous recording
 - graphic mode, digital mode
- RS485 communication and dedicated communication port to set or monitor parameters in real-time by PC/PLC
- Multi-input with high accuracy 0.2% level (TC, RTD, Voltage, Current(shunt))
- Various option I/O function
- Small size (W96×H96×L100mm), light weight



 Please read "Safety Considerations" in the instruction manual before using. 

■ Manuals

- For more information and instructions, refer to the user manual. Visit our website (www.autonics.com) to download the manuals.
- The user manual includes product specifications, functions, and operations.


■ Comprehensive Device Management Program (DAQMaster)

- DAQMaster is comprehensive device management program for convenient management of parameters and multiple device data monitoring.
- Visit our website (www.autonics.com) to download user manual and comprehensive device management program.

< Computer specification for using software >

| | |
|------------|--|
| Item | Minimum requirements |
| System | IBM PC compatible computer with Intel Pentium III or above |
| Operations | Microsoft Windows 98/NT/XP/Vista/7/8/10 |
| Memory | 256MB+ |
| Hard disk | 1GB+ of available hard disk space |
| VGA | Resolution: 1024×768 or higher |
| Others | RS-232 serial port (9-pin), USB port |

< DAQMaster screen >

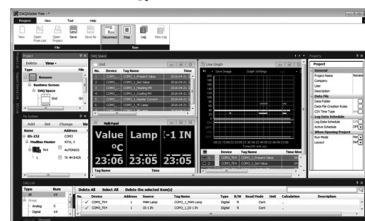

■ Ordering Information

| | | | | | | | | | |
|-------|---|---|---|---|---|---|---|---|------------------------------------|
| KRN50 | — | 2 | 0 | 0 | 4 | — | 4 | 0 | |
| | | | | | | | | | Power supply |
| | | | | | | | | | 0 100-240VAC 50/60Hz |
| | | | | | | | | | 1 24VDC |
| | | | | | | | | | Option output |
| | | | | | | | | | 0 None |
| | | | | | | | | | 4 RS485 communication output |
| | | | | | | | | | Alarm output |
| | | | | | | | | | 0 None |
| | | | | | | | | | 2 Alarm output: 2 ^{※1} |
| | | | | | | | | | 4 Alarm output: 4 ^{※2} |
| | | | | | | | | | CH2 control output |
| | | | | | | | | | 0 None |
| | | | | | | | | | CH1 control output |
| | | | | | | | | | 0 None |
| | | | | | | | | | Number of input channels |
| | | | | | | | | | 1 1-channel |
| | | | | | | | | | 2 2-channel |
| | | | | | | | | | Item |
| | | | | | | | | | KRN50 Thermal Line Recorder (50mm) |

※ 1. When selecting this for 2 CH model, two alarm outputs for CH1 are available. In other words, you cannot set one for CH1 and one for CH2.

※ 2. It is selectable only for 2 CH model.

50mm Compact Hybrid Recorders

■ Specifications

| | | |
|-------------------------|---------------------|--|
| Series | | KRN50 |
| Power supply | AC voltage | 100-240VAC~ 50/60Hz |
| | DC voltage | 24VDC= |
| Allowable voltage range | AC voltage | 85 to 110% of rated voltage |
| | DC voltage | 90 to 110% of rated voltage |
| Power consumption | AC voltage | Max. 34VA |
| | DC voltage | Max. 79W |
| Display method | | LCD Dot matrix Display (resolution 128×32 Dot) |
| Input type | RTD | JPt100Ω, DPt100Ω, DPt50Ω, Cu100Ω, Cu50Ω (5 types) |
| | TC | K, J, E, T, B, R, S, N, C, G, L, U, PLII (13 types) |
| | Analog | · Voltage: -50.0-50.0mV, -199.0-200.0mV, -1.000-1.000V, -1.00-10.00V (4 types) · Current: 0.00-20.00mA, 4.00-20.00mA (2 types) ※ For current input, connect external 50Ω B class (0.1%) high-accuracy resistor |
| Event input | Contact | Input ON: max. 1kΩ, OFF: min. 100kΩ |
| | Non-contact | Input ON: residual voltage max. 1V, OFF: leakage current max. 0.05mA |
| | Outflow current | Approx. 0.3mA |
| Display accuracy*1 | RTD | At room temperature (25°C±5°C): ±0.2% F.S. ±1-digit |
| | TC | Out of room temperature: ±0.3% F.S. ±1-digit |
| | Analog | (TC-K2 has same accuracy within -200 to 1350°C of TC-K1.) |
| Record accuracy | | ±0.5%F.S. |
| Alarm output | | CH1 (AL1, AL2), CH2 (AL1, AL2) Relay output (250VAC~/30VDC= 3A 1a) |
| Alarm output hysteresis | | ON/OFF interval setting for alarm output: 1 to 999-digit variable |
| Communication output | | RS485 communication output (Modbus RTU protocol) |
| Set method | | Setting by front keys |
| Sampling cycle | | 500ms/channel×2 channels = 1000ms |
| Dielectric strength | | 2300VAC 50/60Hz for 1 min (charging terminal of the other polarity) |
| Vibration | | 0.75mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 1 hour |
| Relay life cycle | | Mechanical: over 5,000,000 operations, Electrical: over 100,000 operations |
| Insulation resistance | | Over 100MΩ (at 500VDC megger) |
| Noise immunity | | ±2kV the square wave noise (pulse width 1μs) by the noise simulator |
| Print | Method | Direct thermal line print |
| | Resolution | 8-dot/mm |
| | Dots | 384-dot/Line |
| | Life cycle | 50km |
| Record | Graphic mode | · Record speed (recording paper speed): 10, 30, 60, 120, 240, 480, 960mm/hour · Memo cycle: 30s, 1m, 5m, 10m, 15m, 30m, 1h, 2h, 3h, 4h, 8h, 16h, 24h |
| | Digital mode | TEXT mode record cycle: 00m 05s to 99m 59s |
| | Paper | Thermal Direct Receipt Paper (57mm×16m) |
| | Paper supply method | Clamshell type |
| | Language | Korean, English |
| Environment | Ambient temperature | 0 to 50°C, storage: -20 to 60°C |
| | Ambient humidity | 35 to 85%RH, storage: 35 to 85%RH |
| Approval | | CE |
| Weight*2 | | Approx. 700g (approx. 470g) |

※ 1. ◎ At room temperature (25°C±5°C)

- Thermocouple J (-200≤T≤100): (±0.2% F.S. or ±2.7°C, select the higher one) ±1-digit
- Thermocouple R, S, C, G (0≤T≤100): (±0.2% F.S. or ±5.2°C, select the higher one) ±1-digit
- Thermocouple U, T (-200≤T≤100): (±0.2% F.S. or ±3.5°C, select the higher one) ±1-digit
- Thermocouple U, T (-100≤T≤400): (±0.2% F.S. or ±2.5°C, select the higher one) ±1-digit
- Thermocouple B type, below 400°C: there is no accuracy standards.
- All thermocouples, below -100°C: (±0.4% F.S.) ±1-digit

※ 2. The weight includes packaging. The weight in parenthesis is for unit only.

※ Environment resistance is rated at no freezing or condensation.

KRN50 Series

Input Type and Range


| Input type | | Dot | Display | Input range (°C) | Input range (°F) |
|--------------|-----------------|------------------|-----------------|--|------------------|
| Thermocouple | K(CA) | 1 | TC-K1 | -200 to 1350 | -328 to 2462 |
| | | 0.1 | TC-K2 | -199.9 to 999.9 | -199.9 to 999.9 |
| | J(IC) | 1 | TC-J1 | -200 to 800 | -328 to 1472 |
| | | 0.1 | TC-J2 | -199.9 to 800.0 | -199.9 to 999.9 |
| | E(CR) | 1 | TC-E1 | -200 to 800 | -328 to 1472 |
| | | 0.1 | TC-E2 | -199.9 to 800.0 | -199.9 to 999.9 |
| | T(CC) | 1 | TC-T1 | -200 to 400 | -328 to 752 |
| | | 0.1 | TC-T2 | -199.9 to 400.0 | -199.9 to 752.0 |
| | B(PR) | 1 | TC-B | 100 to 1800 | 212 to 3272 |
| | R(PR) | 1 | TC-R | 0 to 1750 | 32 to 3182 |
| | S(PR) | 1 | TC-S | 0 to 1750 | 32 to 3182 |
| | N(NN) | 1 | TC-N | -200 to 1300 | -328 to 2372 |
| | C(TT)*1 | 1 | TC-C | 0 to 2300 | 32 to 4172 |
| | G(TT)*2 | 1 | TC-G | 0 to 2300 | 32 to 4172 |
| | L(IC) | 1 | TC-L1 | -200 to 900 | -328 to 1652 |
| | | 0.1 | TC-L2 | -199.9 to 900.0 | -199.9 to 999.9 |
| U(CC) | 1 | TC-U1 | -200 to 400 | -328 to 752 | |
| | 0.1 | TC-U2 | -199.9 to 400.0 | -199.9 to 752.0 | |
| Platinel II | 1 | TC-P | 0 to 1390 | 32 to 2534 | |
| RTD | Cu50Ω | 0.1 | CU50 | -199.9 to 200.0 | -199.9 to 392.0 |
| | Cu100Ω | 0.1 | CU100 | -199.9 to 200.0 | -199.9 to 392.0 |
| | JPt100Ω | 1 | JPT1 | -200 to 600 | -328 to 1112 |
| | | 0.1 | JPT2 | -199.9 to 600.0 | -199.9 to 999.9 |
| | DPt50Ω | 0.1 | DPT50 | -199.9 to 600.0 | -199.9 to 999.9 |
| | DPt100Ω | 1 | DPT1 | -200 to 600 | -328 to 1112 |
| 0.1 | | DPT2 | -199.9 to 600.0 | -199.9 to 999.9 | |
| Analog | Voltage | -50.0 - 50.0mV | 50mV | -1999 to 9999 (display range depends on the decimal point position) | |
| | | -199.9 - 200.0mV | 200mV | | |
| | | -1.000 - 1.000V | 1V | | |
| | | -1.00 - 10.00V | 10V | | |
| | Current (shunt) | 0 - 20mA | 0-20 | | |
| | | 4 - 20mA | 4-20 | | |

※ 1. C(TT): Same as existing W5(TT) type sensor.

※ 2. G(TT): Same as existing W(TT) type sensor.

50mm Compact Hybrid Recorders



■ Connections

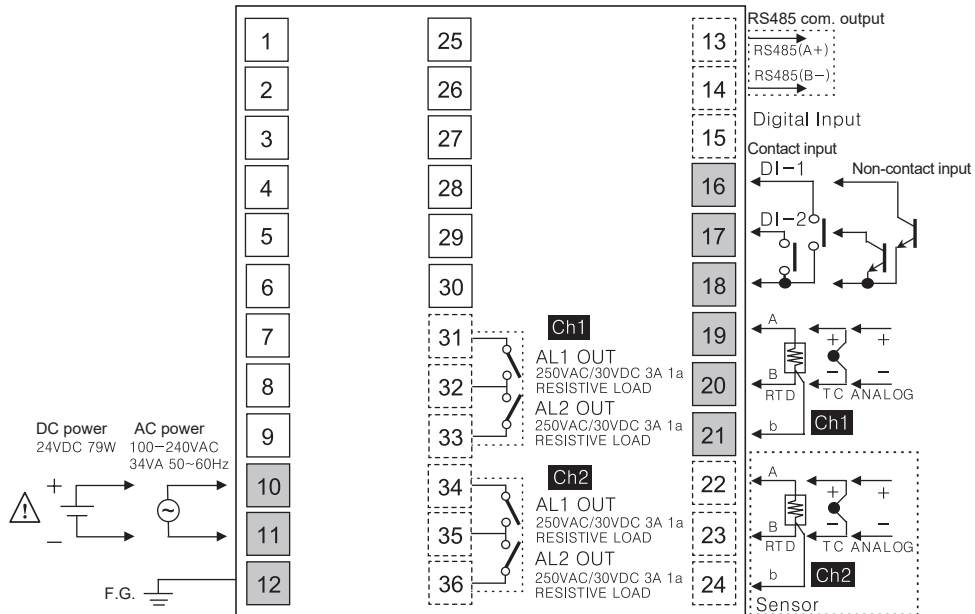


- ※ Shaded terminals are for the standard model. (power terminal, CH1 input terminal, DI input terminal)
- ※ Dot line terminals are for the option model. (CH2 input terminal, alarm output terminal, communication output terminal)
- ※ The DC power model does not have F.G.
- ※ When using 2-wire RTD, short B and b terminals.
- ※ For current input, connect external 50Ω B class (0.1%) high-accuracy resistor.

■ Dimensions

(unit:mm)

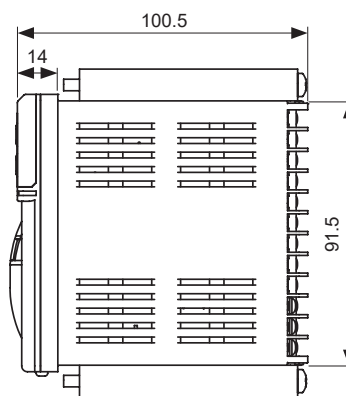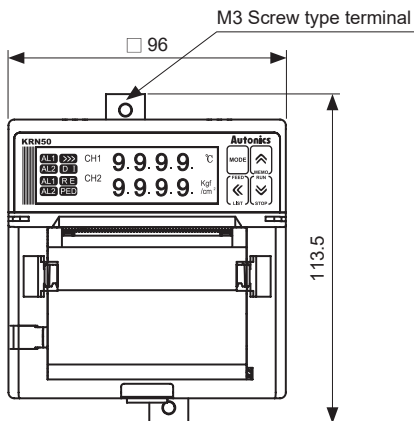

● Panel cut-out

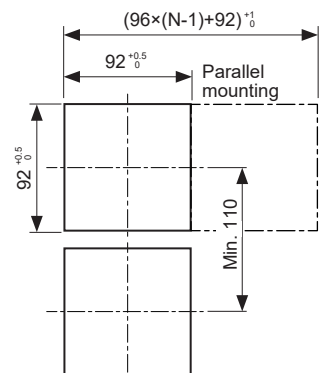

- N = Quantity
- Panel thickness: 1 to 4 mm

KRN50 Series

■ Sold Separately

◎ Communication converter

● SCM-WF48

(Wi-Fi to RS485-USB wireless communication converter)



● SCM-US48I

(USB to RS485 converter)



● SCM-38I

(RS232C to RS485 converter)




● SCM-US

(USB to Serial converter)



■ Unit Descriptions

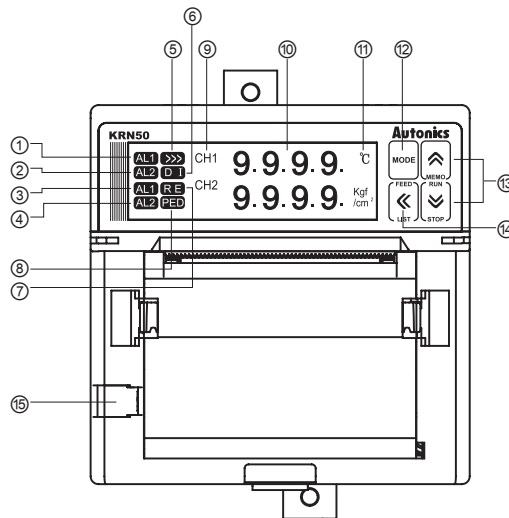

- ① CH 1 alarm (AL1) output indicator: Turns ON when AL1 of input channel 1 operates.
- ② CH 1 alarm (AL2) output indicator: Turns ON when AL2 of input channel 1 operates.
- ③ CH 2 alarm (AL1) output indicator: Turns ON when AL1 of input channel 2 operates.
- ④ CH 2 alarm (AL2) output indicator: Turns ON when AL2 of input channel 2 operates.
- ⑤ Recording start (▶▶▶)/Recording stop (■) indicator: ▶▶▶ turns ON when start recording (RUN). ■ turns ON when stopping recording (STOP).
- ⑥ Digital input indicator: Turns ON when setting digital input.
- ⑦ Recording reservation (RE) indicator: RE turns ON when recording reservation operates.
- ⑧ Recording paper status (PED) indicator: PED turns ON if running out of recording paper during recording (RUN).
- ⑨ Channel (CH) display part: Displays input channel of currently displayed PV on the PV display part.
- ⑩ PV display part: In RUN mode, displays PV of the current channel.
In setting mode, displays parameters and mode setting values.
- ⑪ Unit display part: Unit of relevant channel is indicated.
- ⑫ MODE key: Used to enter setting mode and changing SV mode.
- ⑬ ◀, ▶ key: Used to move parameters or increase/decrease digits.
- ◀ key: Digital memo key, ▶ key: Recording Run/Stop key
- ⑭ ⏪, ⏩ key: Used to move parameters to upper group or move digits
- Paper feeding key (STOP), printing parameter setting information key (RUN)
- ⑮ PC loader port: It is a PC loader port for serial communication to set or monitor parameters by PC.
Used to connect SCM-US (USB to Serial converter, sold separately).

■ Functions

■ Input unit and Scale of temperature sensor

◎ Temperature unit setting by input type

[CH□ Temp Unit]

You can set the temperature unit as Celsius (°C), or Fahrenheit (°F) for each input temperature sensor.

When changing temperature unit for temperature sensor input (Celsius[°C] ↔ Fahrenheit[°F]) current PV is also changed by the conversion calculation.

For analog input type, this parameter [CH□ Temp Unit] is not displayed.

When changing temperature unit, the related bias value is initialized as 0. The other parameter values except bias maintains the existing values.

- Set range: °C / °F
- Factory default: °C (unit: -)

◎ Graph high/low-limit scale value

For temperature sensor input type (TC, RTD), this function is to set the scale value of the recorded graph on recording paper. You can set the recording range to record the specified section detailed with curve of graph.

When the input exceeds the graph high/low limit scale range, it is recorded on the empty space of recording paper of at the left/right side of graph (approx. 1mm).

At the starting point of digital memo recording, even though input exceeds graph high/low limit scale range, the input within high/low limit input range is recorded as its actual value.

◎ Graph low-limit scale value [CH□ Lo Graph]

This function is to set low limit scale value of graph within input range of each input type.

- Set range:
Min. range by each sensor input type to Graph high limit scale value [CH□ Hi Graph]- F.S. 5%
- Factory default: -200 (unit: digit)

※ For analog input type, this parameter is not displayed.

◎ Graph high-limit scale value [CH□ Hi Graph]

This function is to set high limit scale value of graph within input range of each input type.

- Set range:
Graph low limit scale value [CH□ Lo Graph] + F.S. 5% to Max. range by each sensor input type
- Factory default: 1350 (unit: digit)

※ For analog input type, this parameter is not displayed.

■ User input range

For analog input type, this function is to set input range.

Set low limit input value [CH□ Lo Range] and high limit input value [CH□ Hi Range] to limit the input range.

- Set range
Low limit input value: Min. input range to High limit input value -5% F.S.
High limit input value: Low limit input +5% F.S. to Max. input range
- Factory default
Low limit input value: Min. input range
High limit input value: Max. input range

■ Input correction [CH□ In Bias]

This function is to correct the error occurring from TC, RTD or analog input out of allowable error range of this unit.

This is also available to correct error when a sensor cannot contact the subject position by calculating the error temperature.

Variable temperature sensors have accuracy level. Because high accuracy type is expensive, standard thermocouples are generally used. By executing this function, you can get more accurate temperature from standard thermocouples.

When executing input correction function, you should measure the error from a sensor accurately. If the measured error is not correct, error may be greater.

Set input correction value to each channel. [CH1 In Bias, CH2 In Bias]

When changing temperature unit (°C ↔ °F) for temperature sensor input type (TC or RTD), or input type, correction value is initialized as 0.


- Set range: -999 to 999
- Factory default: 0000 (unit: digit)

■ Functions

■ Display scale

For analog input, this function is to set (-1999 to 9999) for particular high/low limit value in order to display high/low limit value of measurement input. If measurement inputs are 'a' and 'b' and particular values are 'A' and 'B', it will display a=A, b=B as below graphs.


- Set range:
Low limit scale, High limit scale: within F.S. range
- Factory default:
Low limit scale: 0.0, High limit scale: 100.0

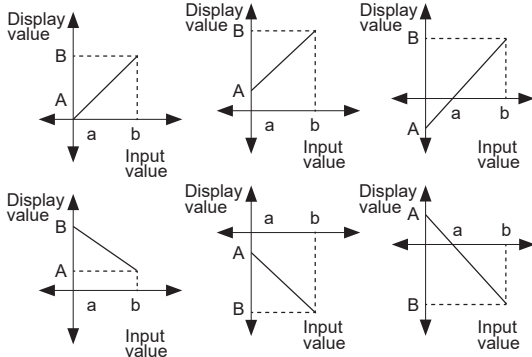


Display scale function is able to change display value for max./min. measured input by setting high limit scale [Hi Scale] and low limit scale [Lo Scale].

Ex) Set high/low scale value (input range is 0 to 10V)


- Lo Scale = 0.00
- Hi Scale = 5.00, 10.00, 15.00, -10.00

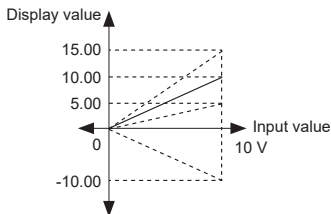

- Lo Scale = 10.00, Hi Scale = -10.00

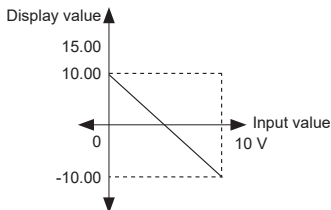

- Lo Scale = -5.00, Hi Scale = 5.00

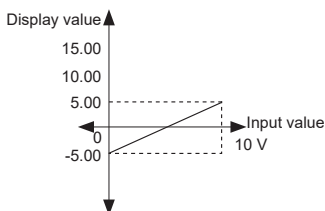

※ When changing input type, high/low scale is changed as factory default.

◎ Scale decimal point [CH □ Sc Point]

It is able to change decimal point position for high/low limit scale value. It changes decimal point position of display value (PV and SV, etc).

- Set range: 0 / 0.0 / 0.00 / 0.000
- Factory default: 0.0 (unit: -)

◎ Display unit [CH □ Dp Unit]

This function is to set unit for recording and displaying. This parameter is displayed only for analog input type at [CH □ In Type] parameter.

Even though changing analog input unit, PV is not converted different with temperature unit changing.

- Set range:
°C, °F, %, ppm, V, mV, mA, Pa, kPa, pH, psi, kgf/cm², m³/h, mmHg, mmH₂O, us0 to us9
- Factory default: % (unit: -)

50mm Compact Hybrid Recorders

■ Functions

■ Alarm output [Alarm Setup]

Alarm output operates too high or low temperature/scale value of the subject during displaying temperature/scale value. When occurring alarm output by each channel, the related alarm indicators (CH1 = AL1, AL2 CH2 = AL1, AL2) turn ON.

If alarm output occurs during recording, it records that time, PV, and alarm information (AL HI =↑, AL LO =↓, SBA = B, P.End = P) on recording paper.

To divide HI and LO marks of AL1 and AL2, AL1 marks (↑↓) and AL2 marks (↓↑).

◎ Alarm operation [CH□AL□ Type]

| Mode | Name | Record | Operation | Description |
|-------|--------------------|----------------|-----------|--|
| Off | No alarm | — | — | — |
| PV.Hi | High limit alarm | AL1=↑ AL2=↓ | | PV ≥ high limit alarm temperature (AL1.H) , alarm output is ON |
| PV.Lo | Low limit alarm | AL1=↓ AL2=↑ | | PV ≤ low limit alarm temperature (AL1.L) , alarm is ON |
| SBA | Sensor break alarm | AL1=B AL2=B | — | When input is not connected or disconnected during recording, alarm output is ON. You can check the input break using external alarm output contact by buzzer or others. |
| P.End | Paper end alarm | AL1=P AL2=P | — | If running out of recording paper during recording, alarm output is ON. (measured value is saved at system memory) When recording paper is replaced, alarm is cleared automatically (standard alarm) and P is printed on recording paper when printing back up data. |

- Factory default: CH AL1 Type(PV.Hi), CH AL2 Type(PV.Lo)

◎ Alarm option [CH□AL□ Opt]

| Option | Name | Description |
|--------|----------------------------------|--|
| None | Standard alarm | If it is an alarm condition, alarm output is ON. Unless an alarm condition, alarm output is OFF. |
| Latch | Alarm latch | If it is an alarm condition, alarm output is ON. An ON condition is latched. (Holding the alarm output) |
| StBy | Standby sequence | First alarm condition is ignored. From the second alarm condition, standard alarm operates. When power is ON and it is not an alarm condition, standard alarm operates. |
| La+St | Alarm latch and standby sequence | If it is an alarm condition, it operates both alarm latch and standby sequence. When power is ON and it is an alarm condition, it is ignored. From the second alarm condition, alarm latch operates. |

- Factory default: None (unit: -)

◎ Alarm temperature setting [CH□AL□ Lo], [CH□AL□ Hi]

Set alarm value for each alarm output operation, if current value is the alarm value, alarm output is ON.

According to the alarm output operation mode [CH□AL□Type] setting, [CH□AL□Lo], [CH□AL□Hi] parameters of the channel is displayed.

※ When selecting high limit alarm [PV.Hi], only [CH□AL□High] is displayed.

※ When selecting low limit alarm [PV.Lo], only [CH□AL□Low] is displayed.

※ When changing Input Type Setup[CH□In Type], [CH□AL□High] or [CH□AL□Low] value is changed within the input range of [CH□In Type].

※ For temperature input type (TC or RTD), if burn occurs by sensor open when alarm temperature is set as [CH□AL□Low], the alarm operates.

- Set range: Within input type and range

- Factory default: [CH□AL□Lo]: Low limit scale value / [CH□AL□Hi]: High limit scale value (unit: °C/°F)

■ Functions


◎ Alarm output hysteresis [CH □ Alarm Hys]

"H" of alarm output operation mode is hysteresis. Set ON and OFF interval of alarm output.


- Set range: 001 to 999
(decimal point position is same with that of input decimal point)
- Factory default: 001 (unit: digit)

◎ Example of alarm output

● High limit alarm [PV.Hi]

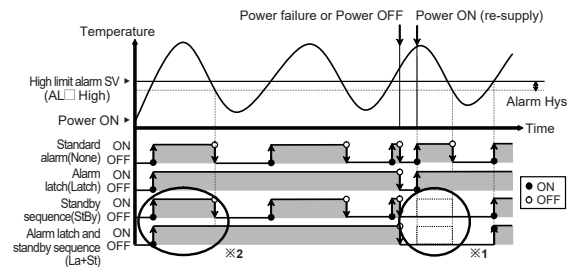

● Low limit alarm [PV.Lo]

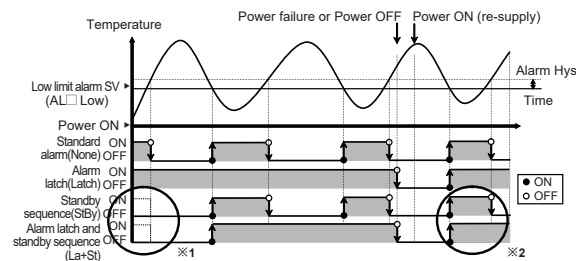

※ Standby sequence

When power is ON and it is alarm condition, this condition is ignored. From the second alarm condition, standard alarm operates. (Refer to ※1. of the above graph.)

When power is ON and it is not an alarm condition, standard alarm operates from the first condition. (Refer to ※2. of the above graph.)

- Conditions of re-applied standby sequence after occurring standby sequence:

Power ON, changing alarm value, or alarm clear forced

※ Alarm latch

If it is an alarm condition, alarm output is ON even though it is out of alarm range. (Holding the alarm output)

- Conditions of clear alarm latch:

To clear alarm latch, press the + keys for 3 sec when PV is below alarm value. For alarm latch by sensor break alarm (SBA) and no paper alarm (P.End), press the + keys for 3 sec to clear the alarm.

※ When changing alarm output operation mode [CH □ AL □ Type], alarm values [CH □ AL □ High, Low] are initialized as max./min. value automatically.

※ When changing alarm output option, the alarm value maintains the existing value.

■ Record mode [Rec Mode]

There are two modes; graph mode and digital mode to record current PV on recording paper.


- Set range: Graph / Digital
- Factory default: Graph (unit: -)

◎ Graph mode [Graph Mode]

Graph mode records PV with graph of curve on recording paper.

It records current date (year-month-day), high/low limit scale value of each channel by every 1 hour.

Depending on the set digital memo period [Memo Period], it records current time (hh:mm:ss) and PV of each channel periodically.

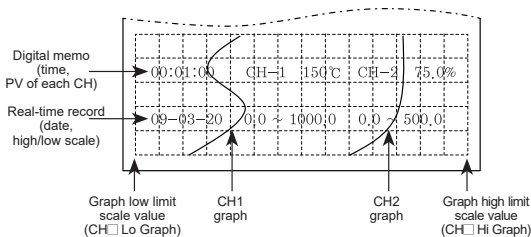

◎ Digital mode [Digital Mode]

Digital mode records PV with numerical value on recording paper. It records current time (hh:mm:ss) and PV of each channel periodically by the set print/record period [Rec Period].

For digital model, it records current date (year-month-day), high/low limit scale value of each channel by every 24 hours.

It records current PV by digital memo function through the front key (key for 3 sec), DI input terminal (DI-2, 1sec) or communication.

| | | | | |
|----------|----------|------|---------|-------|
| 00:02:00 | CH-1 | 110℃ | CH-2 | 75,0% |
| 00:03:00 | CH-1 | 110℃ | CH-2 | 75,0% |
| 00:01:00 | CH-1 | 150℃ | CH-2 | 75,0% |
| 09-03-20 | 0 ~ 1000 | | 0 ~ 500 | |
| 23:59:00 | CH-1 | 150℃ | CH-2 | 72,0% |
| 23:58:00 | CH-1 | 120℃ | CH-2 | 70,0% |
| 23:57:00 | CH-1 | 80℃ | CH-2 | 58,0% |

■ Functions

■ Reservation record [Reservation]

Set the reservation record time in advance and it starts to record at the set record start time (RUN) and stops to record at the set record stop time (STOP).

•Ex) Record Setup Record Mode: Digital
 Record Speed: 5sec
 Start Time: 12:00
 Stop Time: 12:02

(Record Start) 12:00:00 → 12:00:05
 12:01:55 → 12:02:00 (Record Stop)

To using reservation record function, set [Reservation] as 「On」 and record start time (Start time) and record stop time (Stop time) parameters are displayed. It records during the set time.

When returning to RUN mode after setting reservation record, it stops recording and the Recording reservation (RE) indicator turns ON in display part.

When power is re-supplied by power failure during recording by reservation, if the time is within the reservation, it records continuously. Or not, it stops recording.

When setting [Reservation] as 「Off」 and record start time (Start time) and record stop time (Stop time) parameters are not displayed.

- Set range: Off (not using reservation record function)
 On (using reservation record function)
- Factory default: Off

■ External digital input terminal

◎ DI-1 function [Digital Input 1]: Record start (RUN)

This function is to operate record start (RUN) by external digital input terminals (16, 18).

When setting [Digital Input1] as 「Run」, it operates recording at the set time of print/record period [Rec Period] on recording paper while external digital input terminal is short.

When starting DI-1 function at first, it records the current date and time as below.

- Korean: 현재시간 2009년03월19일 12시30분00초
- English: DATE 03-19-2009 12:30:00


When setting [Digital Input1] as 「Off」, it does not operate any other function.

- Set range: Off / Run
- Factory default: Off (unit: -)

◎ DI-2 function [Digital Input 2]: Digital memo

This function is to operate digital memo by external digital input terminals (17, 18).

When setting [Digital Input2] as 「Memo」, it operates recording. It records current PV of each channel and current time (hh:mm:ss) when one signal is input to the external digital input terminal.

It is same memo function with by the front key ( key, 3sec).

When setting [Digital Input2] as 「Off」, it does not operate any other function.

- Set range: Off / Memo
- Factory default: Off (unit: -)

■ Data save and re-recording when running out of recording paper

This recorder saves the measured data in inner memory and records it at recording paper after supplying the power. When running out of recording paper (P.End), this recorder cannot record the data but saves it.

After replacing recording paper, the message for whether record the un-recorded data at the display part.

Select All or Part and the recorder records the un-recorded data which is from the time of running out of recording paper. After recording this, normal recording continues.


Record previous data
in memory ?
All Part Cancel

- All (all of unrecorded data): Records/Prints the whole range data from the time of paper end to current time
- Part (part of unrecorded data): Records/Prints the set part (start time/stop time) data of the after time of paper end.
- Cancel (ignores not recording): Not record/print the saved data in memory and returns to RUN mode.
- Set range: All / Part / Cancel (unit: -)
- Factory default: Cancel

When running out of recording paper during recording (RUN) state, recording (RUN) state changes stop recording (STOP) state automatically.

■ Parameter setting information print [List Print]

This function is to record the parameter setting information on recording paper.

Press the  key for over 3 sec during recording, and it stops recording PV. After recording setting information of each menu, it records PV again.

- Recorded parameter:
 tag name, input type, display unit, input range,
 display range, alarm operation mode, alarm value,
 communication

When starting record, depending on the setting of [RUN On State] parameter, it records parameter setting information.

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|---------------------|------------|------|------|------|-------|--|----|------|---|--|---|------|-----------|------|--|------|-------|--------|--|-------|------|------|--|-------|-----|-----|--|-------|-----|-----|--|-------|-----|-----|--|------|-------|------------|--|--|------|------|----------|--------------|-------|-------------|------|------------|-------|-------------------|-------|-----------------|---------|--------------|-------|--------------|---------|-------------|-------|-------------|-----------|---------------------|
| <p style="text-align: center;">현재시간 09년03월10일 12시10분10초</p> <p style="text-align: center;">* 파라메타 설정 *</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">채널명칭</td> <td style="width: 30%;">TEMP</td> <td style="width: 30%;">채널 2</td> <td style="width: 10%;">HUMI</td> </tr> <tr> <td>입력사양</td> <td>TC-K1</td> <td></td> <td>mA</td> </tr> <tr> <td>표시단위</td> <td>℃</td> <td></td> <td>%</td> </tr> <tr> <td>입력범위</td> <td>-200~1350</td> <td>4~20</td> <td></td> </tr> <tr> <td>기록범위</td> <td>0~400</td> <td>0~1000</td> <td></td> </tr> <tr> <td>경보1모드</td> <td>HIGH</td> <td>HIGH</td> <td></td> </tr> <tr> <td>경보설정값</td> <td>300</td> <td>900</td> <td></td> </tr> <tr> <td>경보2모드</td> <td>LOW</td> <td>LOW</td> <td></td> </tr> <tr> <td>경보설정값</td> <td>150</td> <td>700</td> <td></td> </tr> <tr> <td>통신기능</td> <td>RS485</td> <td>Modbus RTU</td> <td></td> </tr> </table> <p style="font-size: small;">소형기록계 KRN50 www.autonics.com A/S : 032-820-2356-7</p> | 채널명칭 | TEMP | 채널 2 | HUMI | 입력사양 | TC-K1 | | mA | 표시단위 | ℃ | | % | 입력범위 | -200~1350 | 4~20 | | 기록범위 | 0~400 | 0~1000 | | 경보1모드 | HIGH | HIGH | | 경보설정값 | 300 | 900 | | 경보2모드 | LOW | LOW | | 경보설정값 | 150 | 700 | | 통신기능 | RS485 | Modbus RTU | | <p style="text-align: center;">DATE 03-10-2009 12:10:10</p> <p style="text-align: center;">* SETUP PARAMETER *</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">CH 1</td> <td style="width: 30%;">CH 2</td> </tr> <tr> <td>TAG NAME</td> <td>TEMP HUMI</td> </tr> <tr> <td>INPUT</td> <td>TC-K1 mA</td> </tr> <tr> <td>UNIT</td> <td>℃ %</td> </tr> <tr> <td>RANGE</td> <td>-200~1350 4~20</td> </tr> <tr> <td>SCALE</td> <td>0~400 0~1000</td> </tr> <tr> <td>ALARM 1</td> <td>HIGH HIGH</td> </tr> <tr> <td>VALUE</td> <td>300 900</td> </tr> <tr> <td>ALARM 2</td> <td>LOW LOW</td> </tr> <tr> <td>VALUE</td> <td>150 700</td> </tr> <tr> <td>INTERFACE</td> <td>RS485 Modbus RTU</td> </tr> </table> <p style="font-size: small;">Recorder KRN50 www.autonics.com A/S : 82-32-820-2356-7</p> | CH 1 | CH 2 | TAG NAME | TEMP HUMI | INPUT | TC-K1 mA | UNIT | ℃ % | RANGE | -200~1350 4~20 | SCALE | 0~400 0~1000 | ALARM 1 | HIGH HIGH | VALUE | 300 900 | ALARM 2 | LOW LOW | VALUE | 150 700 | INTERFACE | RS485 Modbus RTU |
| 채널명칭 | TEMP | 채널 2 | HUMI | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 입력사양 | TC-K1 | | mA | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 표시단위 | ℃ | | % | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 입력범위 | -200~1350 | 4~20 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 기록범위 | 0~400 | 0~1000 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 경보1모드 | HIGH | HIGH | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 경보설정값 | 300 | 900 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 경보2모드 | LOW | LOW | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 경보설정값 | 150 | 700 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 통신기능 | RS485 | Modbus RTU | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| CH 1 | CH 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TAG NAME | TEMP HUMI | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| INPUT | TC-K1 mA | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| UNIT | ℃ % | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| RANGE | -200~1350 4~20 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| SCALE | 0~400 0~1000 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ALARM 1 | HIGH HIGH | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| VALUE | 300 900 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ALARM 2 | LOW LOW | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| VALUE | 150 700 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| INTERFACE | RS485 Modbus RTU | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

<Korean>

<English>

50mm Compact Hybrid Recorders

■ Functions


■ Error

This product displays error messages when error occurs.

| Message | Description |
|--------------|---|
| HHHH | <p>When input value is higher than the rated range, flashes in 0.5 sec. (automatically cleared when input value is within the rated range)</p> <p>• Analog input Within $\pm 10\%$ of input range F.S., LCD screen displays only PV and it records PV and HH or LL at the same time on recording paper as the 'a' of below figure. Over $\pm 10\%$ of input range F.S., LCD screen and recording paper display HHHH, HH or LLLL, LL as the 'b' of below figure.</p> <p>For scale value, when Hi, Lo scale value is Hi < Lo, it displays in reverse. For 0-20mA input, when Hi scale is set as 0, Lo scale is set 100 and input value is out of 20mA, it displays LLLL, not HHHH. (HHHH, LLLL are not displayed in analog input 1V.)</p> <p>• TC, RTD input Set Hi, Lo Graph values within the temperature range of each temperature sensor. When PV is over Hi, Lo Graph value, LCD screen displays only PV and it records PV and HH or LL at the same time on recording paper as the 'c' of below figure. Set Hi, Lo Graph values same as the temperature range of each temperature sensor. When PV is over Hi, Lo Graph value, LCD screen and recording paper display HHHH or LLLL as the 'd' of below figure.</p> |
| LLLL | <p>When input value is lower than the rated range, flashes in 0.5 sec. (automatically cleared when input value is within the rated range)</p> <p>In case of analog input, it flashes over 10%. (HHHH, LLLL are not displayed in analog input 1V.)</p> |
| BURN | <p>Flashes when input is disconnected except 10V input. When input is connected, it cleared automatically.</p> |
| Time Set!! | <p>Displayed by wrong time setting for record backup and re-record of P.End or same start and stop time for reservation record. Press the MODE key to clear it and it returns to existing settings.</p> |
| Over range!! | <p>Displayed when setting value is over high/low limit value during setting Hi, Lo Graph and range in Input Type Setup. Press the MODE key to clear it and it returns to existing settings.</p> |
| Hi < Lo!! | <p>Displayed if setting value is Hi<Lo or it is not within the rated range during setting Hi, Lo Graph and range in Input Type Setup. (ex: For TC-K1 of -200 to 1350°C, the range of high limit scale value is low limit scale value+F.S. 5% to max. input range of each input sensor 1350 to -122.5°C. In this case, SV is -123°C and Hi < Lo!! error displays.) Press the MODE key to clear it and it returns to existing settings.</p> |

When the related channel generates error operation, the corresponding message is recorded at the recording time of the channel.

As the below figure, HH and LL message displays when alarm does not occurs.

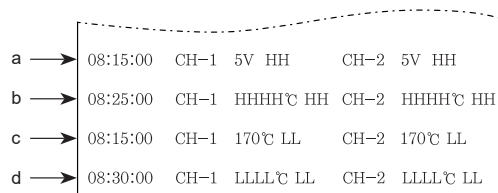

■ Communication

This function is to set or monitor parameters from external upper system (PC, PLC, etc) or transmit data to external devices by communication.

Communication is available by terminals or the front PC loading port. (refer to the connections for connecting terminals.)

You cannot use communications by terminals and the front front PC loading port at the same time. When connecting the front PC loading port with communication device, communication by terminals (transmission function of master) is blocked automatically.

◎ Interface

| | |
|--------------------------|---|
| Comm. protocol | Modbus RTU |
| Connection type | RS485 |
| Application standard | Compliance with EIA RS485 |
| Max. connections | 31units (address: 01 to 99) |
| Comm. synchronous method | Asynchronous |
| Comm. method | Two-wire half duplex |
| Comm. distance | Within max. 1 Km |
| Comm. speed | 1200, 2400, 4800, 9600, 19200, 38400, 57600 bps |
| Comm. respond wait time | 0.05 to 0.99sec |
| Start bit | 1-bit (fixed) |
| Data bit | 8-bit (fixed) |
| Parity bit | None, Odd, Even |
| Stop bit | 1 or 2-bit |

◎ Communication address [Address]

- Set range: 01 to 99
- Factory default: 01 (unit: -)

◎ Communication speed (Bit Per Second) [Baud Rate]

- Set range: 1200, 2400, 4800, 9600, 19200, 38400, 57600
- Factory default: 9600 (unit: bps)

◎ Parity Bit [Parity Bit]

- Set range: None, Even, Odd
- Factory default: None

◎ Stop Bit [Stop Bit]

- Set range: 1, 2
- Factory default: 2 (unit: Bit)

◎ Communication response wait time [Resp Time]

- Set range: 0.05 to 0.99
- Factory default: 0.05 (unit: sec)


■ Functions

◎ Communication write enable/disable [Com Write]

This function is to enable or disable to change/write SV of the saved parameter by communication (PC/PLC). Reading of parameters is available.

- Enable: Enables to change/write SV of each parameter
- Disable: Disables to change/write SV of each parameter
- Set range: Enable / Disable
- Factory default: Enable (unit: -)

◎ Application of system organization

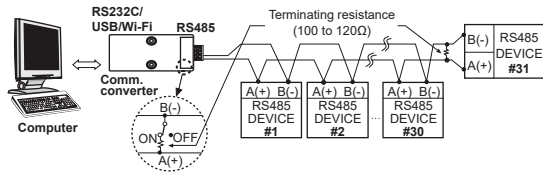

※ Only for RS485 communication output model.

※ It is recommended to use Autonics communication converter; SCM-WF48 (Wi-Fi to RS485-USB wireless communication converter, sold separately), SCM-US48I (USB to RS485 converter, sold separately), SCM-38I (RS232C to RS485 converter, sold separately), SCM-US (USB to Serial converter, sold separately). Please use twisted pair wire, which is suitable for RS485 communication, for SCM-WF48, SCM-US48I and SCM-38I.

■ Image download

◎ User unit download

You can download the desired unit as 16×16 size image (through DAQMaster, the integrated device management program). Select the user unit in setting mode.

◎ User logo download

User logo is recorded at the dotted box (384×80 size) of the below figure. You can download the desired logo as 384×80 size image (through DAQMaster, the integrated device management program) and check this when printing the list.

| DATE 03-10-2009 12:10:10 | | | | DATE 03-10-2009 12:10:10 | | | |
|---------------------------------|-----------|------------|--|--------------------------|-----------|------------|--|
| ※ SETUP PARAMETER ※ | | | | ※ SETUP PARAMETER ※ | | | |
| TAG NAME | TEMP | HUMI | | TAG NAME | TEMP | HUMI | |
| INPUT | TC-K1 | mA | | INPUT | TC-K1 | mA | |
| UNIT | °C | % | | UNIT | °C | % | |
| RANGE | -200~1350 | 4~90 | | RANGE | -200~1350 | 4~90 | |
| SCALE | 0~400 | 0~1000 | | SCALE | 0~400 | 0~1000 | |
| ALARM 1 | HIGH | HIGH | | ALARM 1 | HIGH | HIGH | |
| VALUE | 300 | 900 | | VALUE | 300 | 900 | |
| ALARM 2 | LOW | LOW | | ALARM 2 | LOW | LOW | |
| VALUE | 150 | 700 | | VALUE | 150 | 700 | |
| INTERFACE | RS485 | Modbus RTU | | INTERFACE | RS485 | Modbus RTU | |
| Recorder KRN50 www.autonics.com | | | | Autonics | | | |
| A/S : 82-32-820-2356-7 | | | | | | | |

<Before input>

<After input>

※ Be sure that downloading the user logo of 384×80 size may cause the problem due to increased current consumption and this image may not be printed normally. Please refrain from the image which has lots of dots. It is recommended to download the image which consists of characters as above.

◎ LCD booting image download

You can download the desired booting image to display on LCD screen (approx. 3 sec) when supplying the power.



<Basic image>




<User-made image>

- To download the image, use DAQMaster, the integrated device management program. (When initializing boot image download function of DAQMaster, the booting logo image changes as the left basic image.)
- Basic boot image displays program revision date as fixed.
- Image size should be 128×32 size.

※ For more functions, refer to the user manual of KRN50.

50mm Compact Hybrid Recorders

Parameters

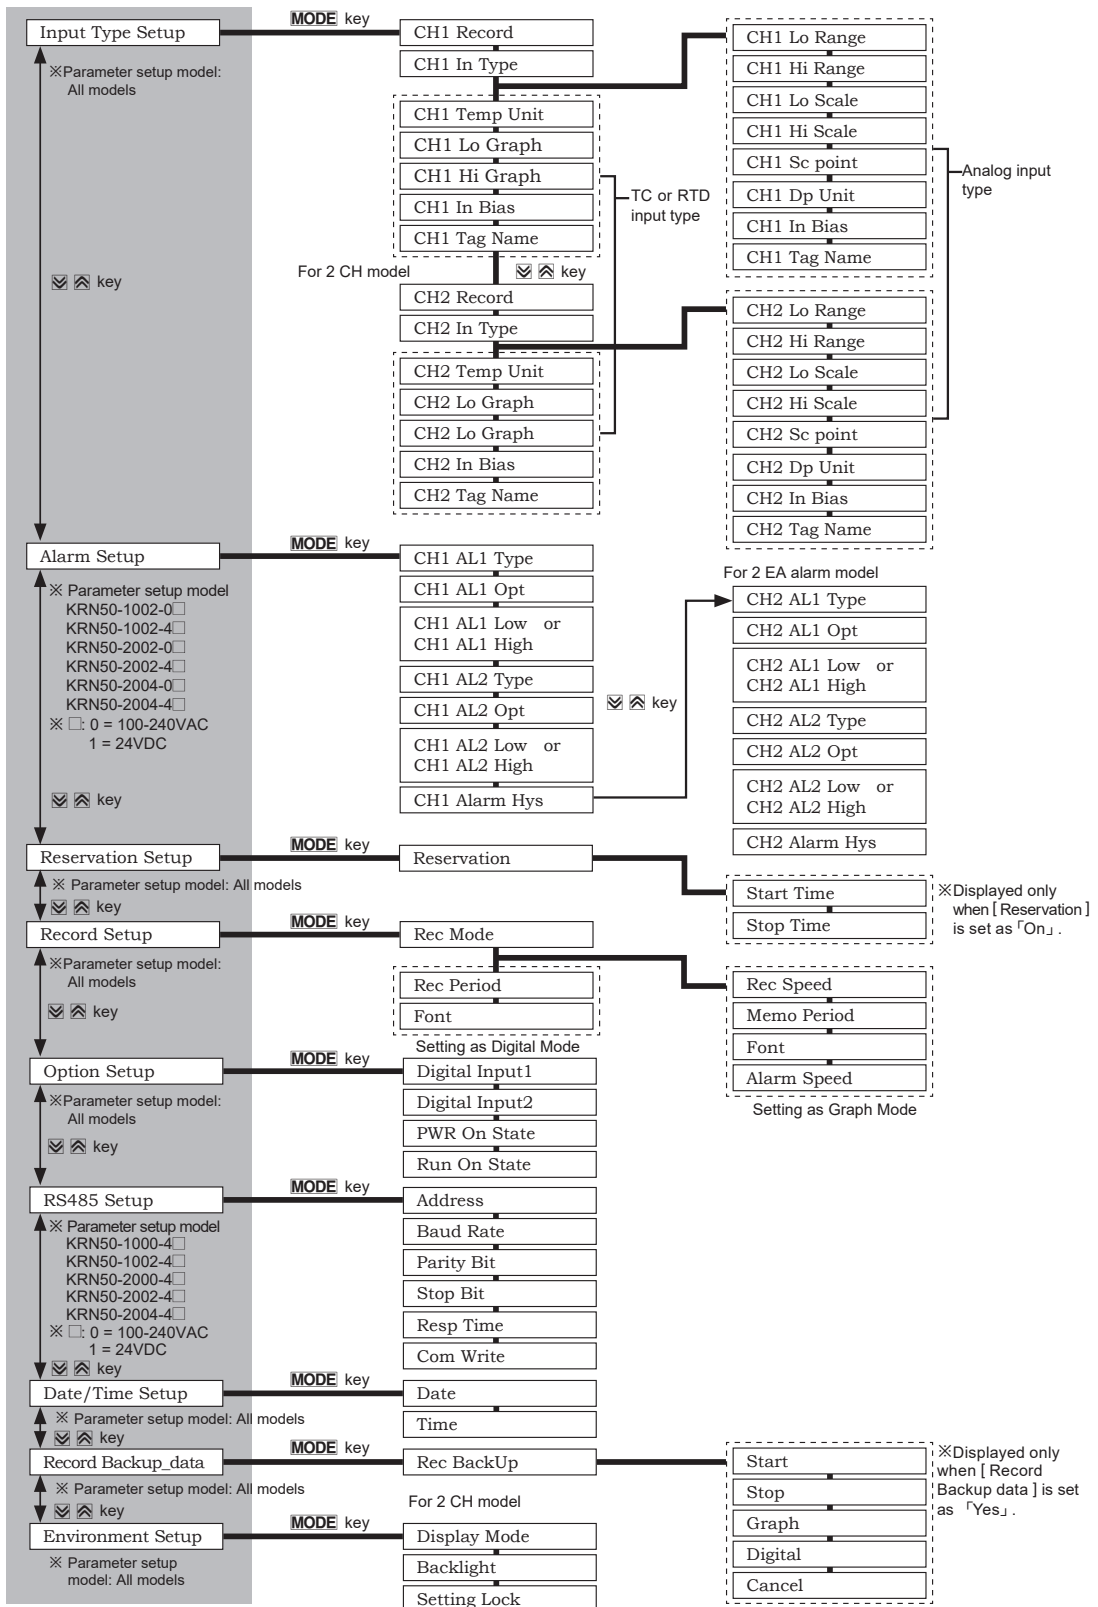

KRN50 Series

■ Factory Default

■ Input type setup group [Input Type Setup]

| Parameter | Default | Parameter | Default | Parameter | Default | Parameter | Default |
|------------------|---------|----------------------------------|---------|------------------|---------|----------------------------------|---------|
| CH1 Record | On | CH1 Lo Scale ※2 | 000.0 | CH2 Record ※3 | On | CH2 Lo Scale ※3 | 000.0 |
| CH1 In Type | TC.K1 | CH1 Hi Scale ※2 | 100.0 | CH2 In Type ※3 | TC.K1 | CH2 Hi Scale ※3 | 100.0 |
| CH1 Temp Unit ※1 | ℃ | CH1 Hi Scale Decimal Point ※2 | 0.0 | CH2 Temp Unit ※3 | ℃ | CH2 Hi Scale Decimal Point ※3 | 0.0 |
| CH1 Lo Graph ※1 | -200 | CH1 DP Unit ※2 | % | CH2 Lo Graph ※3 | -200 | CH2 DP Unit ※3 | % |
| CH1 Hi Graph ※1 | 1350 | CH1 In Bias | 0000 | CH2 Hi Graph ※3 | 1350 | CH2 In Bias ※3 | 0000 |
| CH1 Lo Range ※2 | — | CH1 Tag Name | CH-1 | CH2 Lo Range ※3 | — | CH2 Tag Name ※3 | CH-2 |
| CH1 Hi Range ※2 | — | | | CH2 Hi Range ※3 | — | | |

※ 1. Displayed only when input type (In Type) is temperature sensor (TC or RTD).

※ 2. Displayed only when input type (In Type) is analog (voltage/current).

※ 3. Displayed only for 2-channel model

■ Alarm output setup group [Alarm Setup]

| Parameter | Default | Parameter | Default | Parameter | Default | Parameter | Default |
|-----------------|---------|-----------------|---------|-------------------|---------|--------------------|---------|
| CH1 AL1 Type | PV.Hi | CH1 AL2 Opt | None | CH2 AL1 Type ※2 | PV.Hi | CH2 AL2 Opt ※2 | None |
| CH1 AL1 Opt | None | CH1 AL2 Low ※1 | -200 | CH2 AL1 Opt ※2 | None | CH2 AL2 Low ※1,※2 | -200 |
| CH1 AL1 Low ※1 | -200 | CH1 AL2 High ※1 | 1350 | CH2 AL1 Low ※1,※2 | -200 | CH2 AL2 High ※1,※2 | 1350 |
| CH1 AL1 High ※1 | 1350 | CH1 Alarm Hys | 001 | CH2 AL1 High | 1350 | CH2 Alarm Hys ※2 | 001 |
| CH1 AL2 Type | PV.Lo | | | CH2 AL2 Type ※2 | PV.Lo | | |

※ These parameters are displayed only for alarm output model.

※ 1. These are related with the setting of alarm output operation mode (AL□ Type) .

· CH□AL□ Type (Off, SBA or P.End): CH□AL□Low, CH□AL□High parameters are not displayed.

· CH□AL□ Type (PV.Hi): CH□AL□High parameter is not displayed.

· CH□AL□ Type (PV.Lo): CH□AL□Low parameter is not displayed.

※ 2. Displayed only for 2-channel model.

■ Reservation record setup group [Reservation Setup]

| Parameter | Default | Parameter | Default | Parameter | Default |
|----------------|---------|------------|---------|--------------|---------|
| Reservation ※1 | Off | Start Time | 00:00 | Stop Time ※1 | 00:01 |

※ 1. Displayed only when (Reservation) is set as 「On」 .

■ Record mode setup group [Record Setup]

| Parameter | Default | Parameter | Default | Parameter | Default |
|--------------|---------|----------------|---------|-------------|---------|
| Rec Mode | Graph | Memo Period ※1 | 30min | Font | English |
| Rec Speed ※1 | 10mm/h | Rec Period ※2 | 01m00s | Alarm Speed | 10mm/h |

※ 1. Displayed only when (Rec Mode) is set as 「Graph」 .

※ 2. Displayed only when (Rec Mode) is set as 「Digital」 .

■ Option setup group [Option Setup]

| Parameter | Default | Parameter | Default | Parameter | Default | Parameter | Default |
|-----------------|---------|-----------------|---------|--------------|---------|--------------|---------|
| Digital Input 1 | Off | Digital Input 2 | Off | PWR On State | Run | Run On State | List |

■ RS485 communication setup group [RS485 Setup] (Read Only)

| Parameter | Default | Parameter | Default | Parameter | Default |
|-----------|---------|------------|---------|---------------|---------|
| Address | 01 | Parity bit | None | Response Time | 0.05s |
| Baud Rate | 9600bps | Stop Bit | 2 | Com Write | Enable |

■ Environment setup group [Environment Setup]

| Parameter | Default | Parameter | Default | Parameter | Default |
|--------------|---------|-----------|---------|--------------|---------|
| Display Mode | 2CH | Backlight | Temp | Setting Lock | Off |

50mm Compact Hybrid Recorders

■ Proper Usage

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Install a surge absorber at each end of inductive load coil when controlling high-capacity power relay or inductive load (e.g. magnet).
- 24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Check the polarity of the terminals before wiring the temperature sensor.
For RTD temperature sensor, wire it as 3-wire type, using cables in same thickness and length.
For thermocouple (CT) temperature sensor, use the designated compensation wire for extending wire.
- Keep away from high voltage lines or power lines to prevent inductive noise.
In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This unit may be used in the following environments.
 - ① Indoors (in the environment condition rated in 'Specifications')
 - ② Altitude max. 2,000m
 - ③ Pollution degree 2
 - ④ Installation category II