

LabVIEW® API for PCAN©-Basic 4.x
by
KDI Kunze Digital Instrumentation

CONTENTS

Purpose and scope	3
License constraints	3
Installation and VI locations	3
Controls	6
Examples for CAN FD and CAN 2.0B.....	6
Migration from LabVIEW® PCAN®-Basic API to LabVIEW® PCAN®-Basic 4.0 API.....	8
Changed controls	9
Recommendations	10
Revision changes	10
References	11
Copyright	11

PURPOSE AND SCOPE

This document describes the easy-to-use LabVIEW® API. This API uses the PCAN®-Basic 4.x API from PEAK-System to establish one or more CAN networks. Using the LabVIEW® API, you can exchange CAN messages via CAN 1.0/2.0B and CAN FD with the PCAN® hardware. CAN FD is supported by the PEAK device driver from version 4 and the PCAN®-Basic API also from version 4.x. The LabVIEW® API is strongly related to the PCAN®-Basic 4.0 help files and supports LabVIEW® 2014 or any higher version.

LICENSE CONSTRAINTS

The LabVIEW® PCAN®-Basic FD 4.x API (API) is a floating license and can be installed on different computers without additional licensing fees. LabVIEW® developers have the right to build applications with this API without additional license fees.

Using the same API license simultaneously on different computers for development purposes require additional licenses. The number of licenses depends on the number of simultaneously used APIs.

INSTALLATION AND VI LOCATIONS

How do you get the PCAN® Basic FD API?

From PEAK: <https://www.peak-system.com/fileadmin/media/files/pcan-basic.zip>

How do you get the PCAN® driver


From PEAK: <https://www.peak-system.com/produktcd/Drivers/PeakOemDrv.exe>

What do I have to do than?

- 1) Install the PeakOEMDrv.exe
- 2) Open the pcan-basic.zip file
 - a. If you have a 32bit system:
 - i. Copy the PCANBasic.dll from the Win32 folder into the /Windows/System32 folder
 - b. If you have a 64bit system
 - i. Copy two DLLs from folder to folder
 1. Win32/PCANBasic.dll => /Windows/SysWOW64
 2. X64/ PCANBasic.dll => /Windows/System32
- 3) Install the LabVIEW API for PCAN® Basic FD
 - a. Open LabVIEW®
 - i. Hoover to Tools => VI Package Manager and start the VIP.
 1. Update the VIP to the most recent VIP version
 - b. Close the VI Package Manager
 - c. Double click on the file labview_api_for_pcan_basic_fd-x.x.x.vip and install the API

*Remark:

Links on the PEAK web-site may change without notification. This documentation doesn't grant immediate access and correctness of the web links.

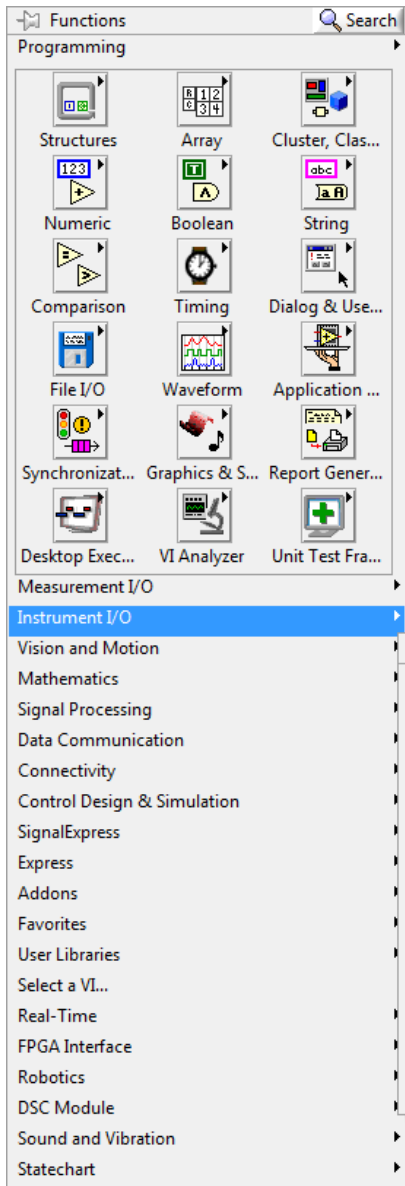


Once installed, the VIs are located in the Instrument I/O function palette.

In the PCAN®-Basic FD palette, you can find the VIs and examples for CAN 1.0/2.0B and CAN FD.


There are also sub palettes for the Get and Set functions according to the PCAN®-Basic 4.0 API. Since all Get and Set functions are combined in two polymorphic VIs there is no need to use the VIs from the sub palette.

Four examples are included to demonstrate how to send receive CAN messages. Two examples for CAN 1.0/2.0B and two additional examples for CAN FD are available.


Each and every VI has a context help in English and German. Activate the context help by pressing CTRL + h or STRG + h on the keyboard.

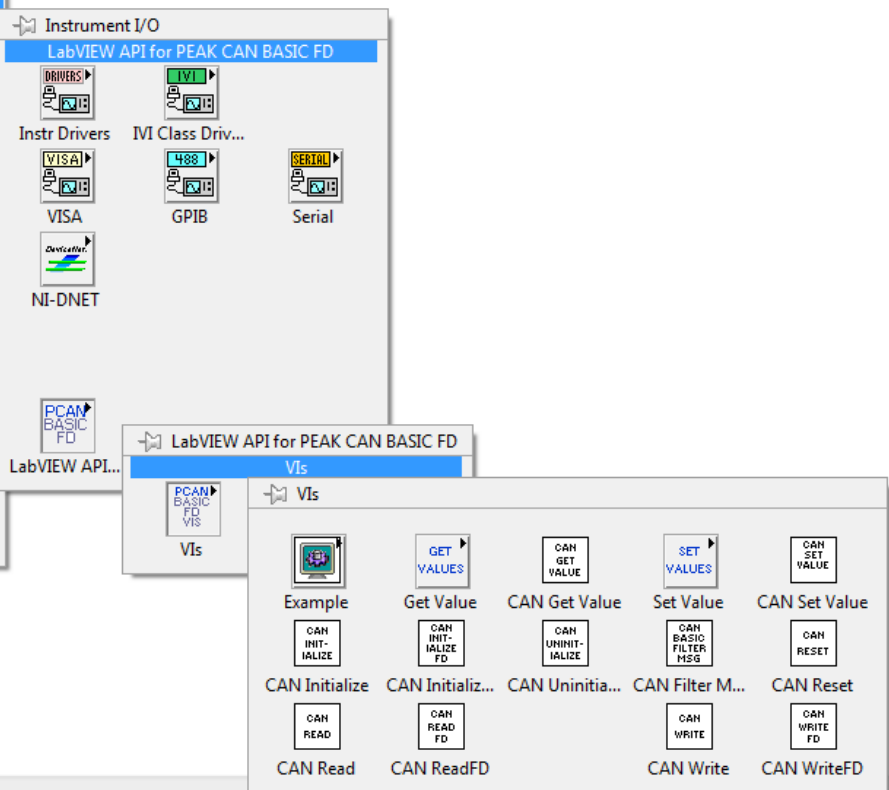

Get and Set Value VIs are accumulated in the VIs CAN Get Value.vi and CAN Set Value.vi. Both VIs are polymorphic to make programming comfortable.

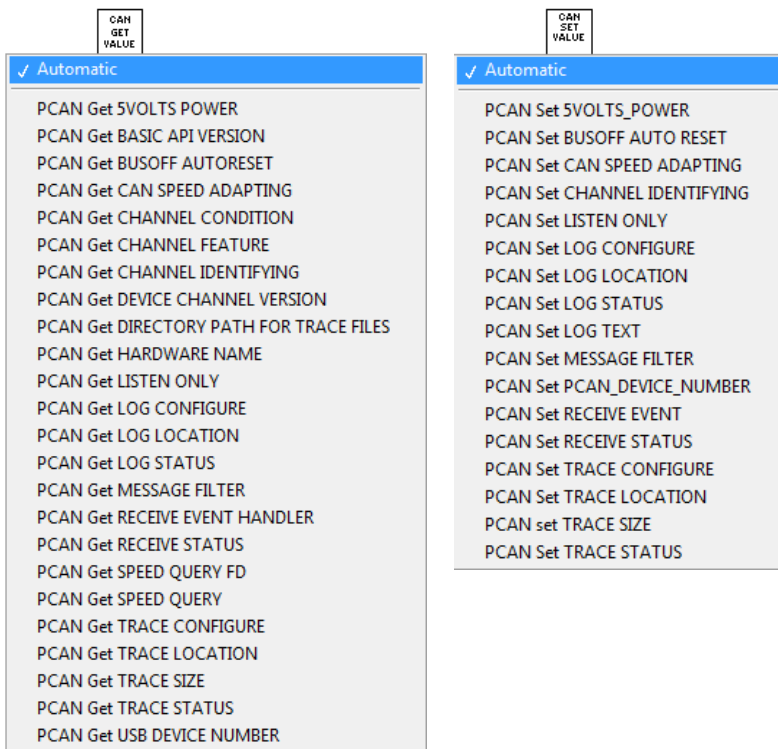


Nevertheless, you can access the Get and Set Value VIs from the VI palette using the sub palettes GET VALUE and SET VALUE.

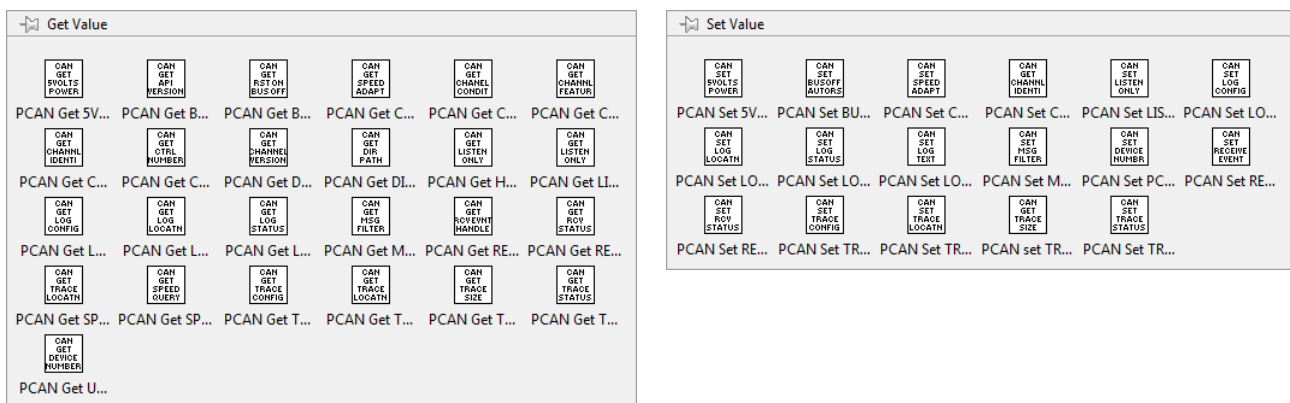

CONTROLS

All controls reside within the LabVIEW® controls palette, too.


Access the controls via the controls palette to use them on the front panel:

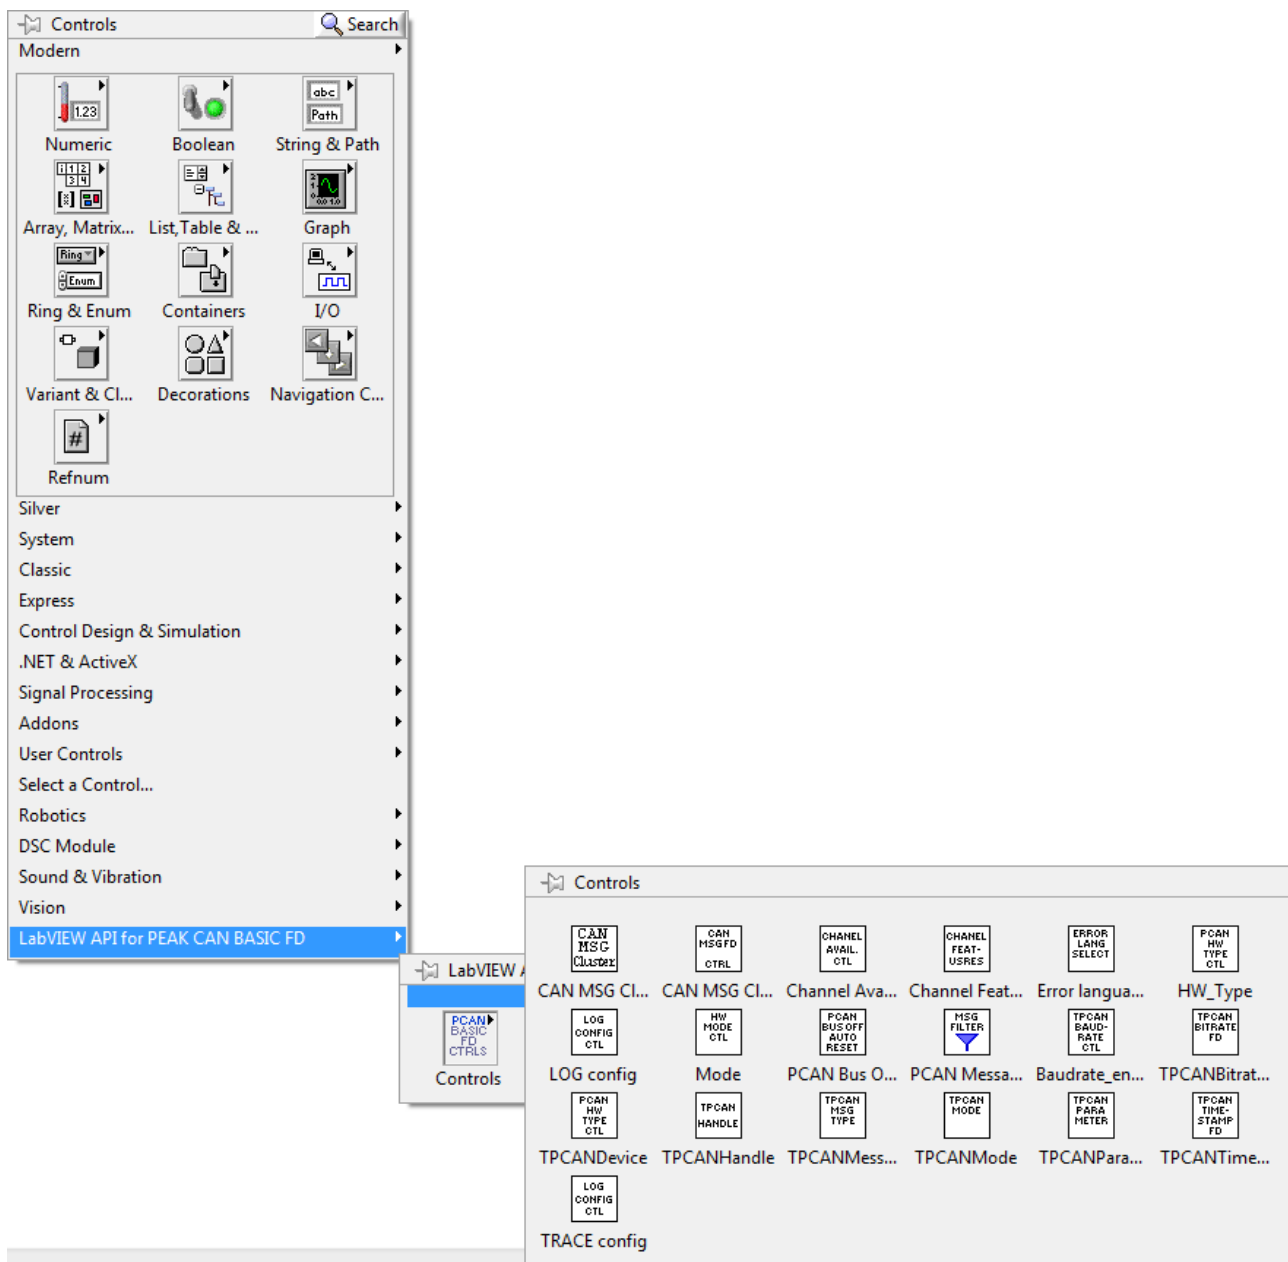


EXAMPLES FOR CAN FD AND CAN 2.0B

Get a first impression of the functionality by having a look into the examples coming with the LabVIEW® API for PCAN®-Basic 4.0 (Instrument I/O >> LabVIEW® API for PCAN®-BASIC FD >> VIs >> EXAMPLES).

On the left hand side of the front panel is the TPCANHandle control. TPCANHandle must be used to specify the interface, while the two arrays on the right hand side cyclically show the content of the received CAN messages once the VI is running. Since this VI is an FD example, we have to take a look on the block diagram, too, in order to see what is different to CAN 2.0B. The block diagram (from left to right) shows a disabled part of code. This is just an example how to use the log function of the PCAN®-Basic 4.0 driver. You can enable this function if needed.

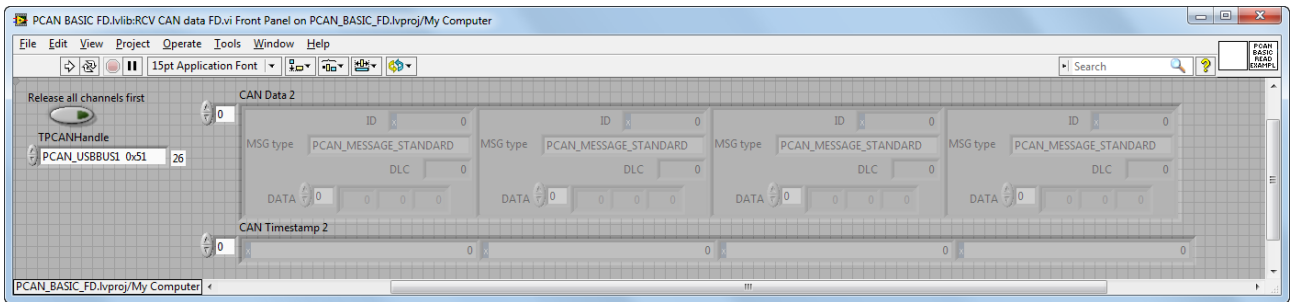


The front panel shows the TPCANHandle (channel) and two arrays for messages and timestamps.

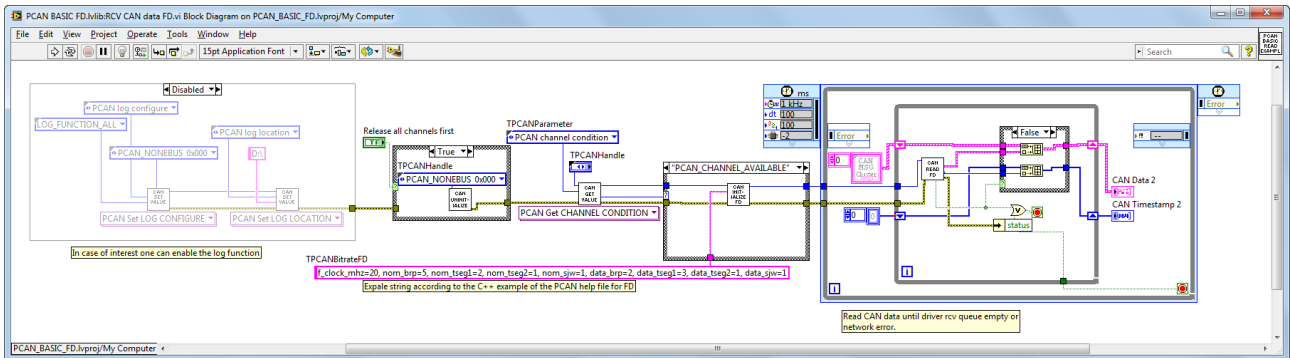

The disabled code segment is followed by the initialisation of the TPCANHandle (channel) and the hardware initialisation. Here is the biggest difference between CAN 2.0B and FD. FD is initialised by a string and not by API VIs.

The initialisation is followed by a timed loop. The outer timed loop displays the received CAN messages and according timestamps in two arrays while the inner loop polls the driver queue until its empty. The implemented build array function with shift registers can be replaced by auto indexing. In this case the last array element is always empty. The example just demonstrates how to avoid that the last array element is empty. Other solutions are possible, too.


The functionality of the SEND CAN data FD.vi is slightly similar to the Receive CAN data FD.vi.

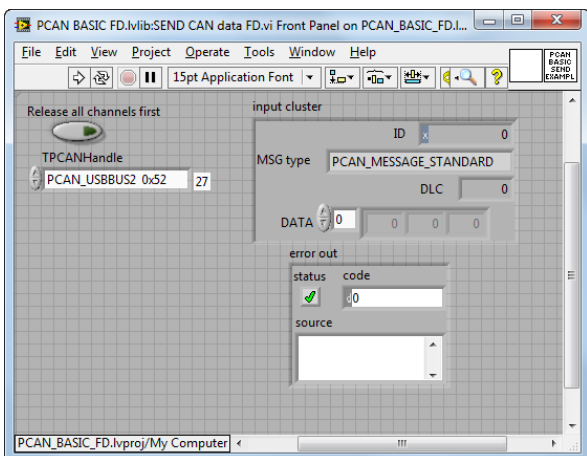

On the front panel, you can see the TPCANHandle Enum, the send cluster and an error cluster.

The block diagram includes the TPCANHandle initialisation for CAN FD, too, followed by a timed send loop. This loop sends the loop counter value and some additional bytes. As you can see in this case, the CAN message data is nine bytes long while CAN FD messages can be as long as 64 Bytes.

Using two FD devices or one PCAN®-USB Pro FD device from PEAK-System allows you to test the example VIs by creating a network to send and receive CAN FD data. Don't forget a proper termination to ensure good results.

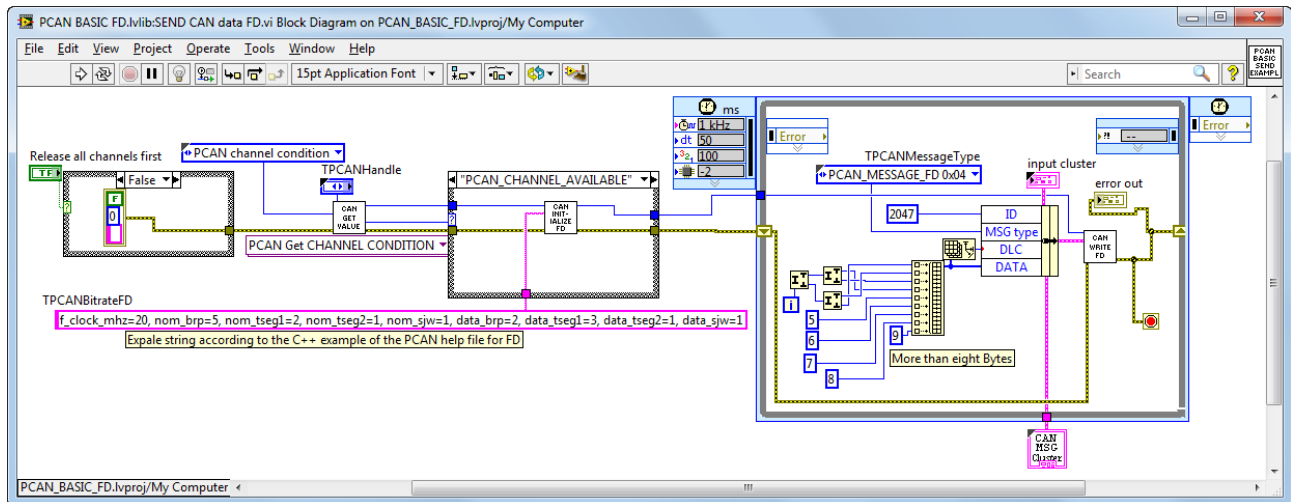

The other two examples for CAN 1.0/2.0B are similar except the initialisation and the CAN Read and CAN Write functionality. Have a look into these examples, too. They look like the VIs for the previous PCAN®-Basic API but they aren't compatible!

Remark:

Setting the Boolean button TRUE, releases all channels first. This can be useful but should not be set to TRUE in both VIs. Doing this will remove one of the VIs from the connected bus.

Starting and Connecting PCAN®-View before the VIs are running may cause a 'Channel occupied error'. To avoid this, connect PCAN®-View when the VIs are already running.

MIGRATION FROM LABVIEW® PCAN®-BASIC API TO LABVIEW® PCAN®-BASIC 4.0 API

Remark:

Skip this if you never have used the PCAN®-Basic API before. All the described changes are just related to the LabVIEW® API. The changes have been implemented to achieve compatibility between the LabVIEW® API and the PCAN®-Basic 4.0 API.

Implementation of the PCAN®-Basic API was done in 2010 with LabVIEW® 2009. Since this time there have been made some minor changes.

The new PCAN®-Basic 4.0 API for LabVIEW® 2014 or higher works with CAN 1.0/2.0B and CAN FD devices. The current version is very strongly related to the PEAK-System documentation. All VI names and control names are similar to the PEAK-System documentation. Implementing the PCAN® FD functionality forces some changes. According to these changes it is required to change VIs. Unfortunately this leads to incompatibility to the former version of the LabVIEW® API.




















Main differences are:

- Controls
- VIs
- Wrappers (Enum to numeric value)
- Addition of CAN FD VIs













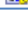
CHANGED CONTROLS

Many controls have been changed or renamed. Only the changes are described in the following.

New CAN FD Controls:

 CAN MSG Cluster.ctl	CAN MSG Clusters for CAN 2.0B and CAN FD are new implemented. They have several changes compared to the old CAN Basic Controls.
 CAN MSG ClusterFD.ctl	
 Channel Availability.ctl	Channel Availability: Not changed
 Channel Features.ctl	Channel Features: Return value available in CAN FD
 Error language selector.ctl	Error language selector: Not changed
 HW_Type.ctl	HW_Type: Not changed
 LOG config.ctl	LOG config: Not changed
 Mode.ctl	Mode: Not changed
 PCAN Bus Off Auto Reset.ctl	PCAN [®] Bus Off Auto Reset: Not changed
 PCAN Message Filter.ctl	PCAN [®] Message Filter: Not changed
 TPCANBaudrate.ctl	TPCANBaudrate: Previously BaudrateEnum, changed
 TPCANBitrateFD.ctl	TPCANBitrateFD: New
 TPCANDevice.ctl	TPCANDevice: Previously called HW_Type, changed
 TPCANHandle.ctl	TPCANHandle: Previously called channel, changed
 TPCANMessageType .ctl	TPCANMessageType: Prev. in CAN MSG Cluster, new, changed
 TPCANMode.ctl	TPCANMode: New
 TPCANParameter.ctl	TPCANParameter: Prev. called Parameter, enhanced
 TPCANTimestampFD.ctl	TPCANTimestamp: New, format changed to U64
 TRACE config.ctl	TRACE config: New

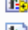Old CAN Basic Controls:

 BaudrateEnum.ctl	
 CAN MSG Cluster.ctl	
 Channel Availability.ctl	
 Channel.ctl	
 Error language selector.ctl	
 HW_Type.ctl	
 LOG config.ctl	
 Mode.ctl	
 Parameter.ctl	
 PCAN Bus Off Auto Reset.ctl	
 PCAN Message Filter.ctl	
 PCAN Mode.ctl	
 Timestampbuffer.ctl	Timestampbuffer: Array, U16 micros, U32 millis, U16 millis overflow

RECOMMENDATIONS

Migrating from an existing PCAN[®]-Basic LabVIEW[®] API project to the PCAN-Basic FD LabVIEW[®] API can be achieved by:

- Uninstall the LabVIEW[®] API for PCAN[®]-Basic.
- Be sure that no old PCAN[®]-Basic DLL resides on your system.
- Install LabVIEW[®] API for PCAN[®]-Basic 4.0.
- Install PCAN[®]-Basic 4.0 and copy the DLLs into the right folders:
 - o Windows 64-bit: put the 32-bit DLL into the Windows/SysWOW64/ folder.
 - o Windows 64-bit: put the 64-bit DLL into the Windows/System32/ folder.
 - o Windows 32-bit: put the 32-bit DLL into the Windows/System32/ folder.
- Start LV and load your project.
- Replace all the old VIs and controls by the new ones.

May be easier:

- Uninstall the LabVIEW[®] API for PCAN[®]-Basic.
- Be sure that no old PCAN[®]-Basic DLL resides on your system.
- Install PCAN[®]-Basic 4.0 and copy the DLLs into the right folders.
 - o Windows 64-bit: put the 32-bit DLL into the Windows/SysWOW64/ folder.
 - o Windows 64-bit: put the 64-bit DLL into the Windows/System32/ folder.
 - o Windows 32-bit: put the 32-bit DLL into the Windows/System32/ folder.
- Load your project and don't try to find the uninstalled VIs.
- Open the examples and copy the required VIs and Controls into your project to replace the old ones.

REVISION CHANGES

Revision 2018/03/23

- Changed to LabVIEW[®] 2014 due to VIP installation problems with LabVIEW[®] 2011
- Disconnected all VIs from VI lib due to problems with VIP

REFERENCES

LabVIEW® is a Trademark of National Instruments

PCAN® is a registered Trademark of PEAK-System Germany

COPYRIGHT

All rights reserved by:

Dipl.-Ing. (FH) Martin Kunze

Fröbelstraße 11

D-26127 Oldenburg

E-Mail: <mailto:support@diginst.de>