

# **Ultra Small 18mm 3-Wire Voltage Output** Load Cell Amplifier / Strain Gauge Amplifier AS200507

The AS200507 is a ultra miniature circular board for **3-wire** systems providing five voltage output options (0V-5V, 0V-10V, 2.5V-7.5V, -5V to +5V and -10V to +10V), designed to fit inside a load cell or other transducer. The unit has individual multi-turn potentiometers for the precise setting of Zero and Span. The inputs provide EMI-/RF-suppression. Transducer wires can be easily soldered onto the board.

#### **Features**

- Wide range power supply 13V-32V
- 10V stabilised bridge excitation
- Bridge resistance 350 Ohm (or greater)
- Bridge sensitivity 0.3mV/V 3mV/V
- Size 18mm diameter, 8.7mm height
- Fast calibration procedure
- Reverse-polarity protection

### **Applications**

- Industrial Weighing
- Load Testing & Monitoring
- Overload Protection Systems






## **Ordering**


Part number:   A	S200507-*
------------------	-----------

\*Please specify required input range, between 0.3mV/V - 3mV/V See Standard parts below. Other configurations available. Customer specific electrical / mechanical changes are possible - please contact us with your individual requirements.

#### **Board Connections**

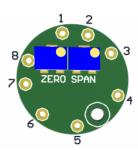

# Schematic Diagram

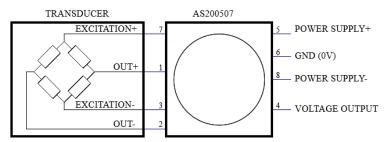

### Specifications

Specifications				
Parameter	Min	Typical	Max	Unit
Supply Voltage Vin (unipolar voltage)	13	24	32	V
Supply Voltage Vin (bipolar voltage output)	-13 to -18		+13 to +18	V
Voltage Output – Zero (adjustable control)		0.01/2.5		V
Voltage Output – Span (adjustable control)		5.0/7.5/10.0	Vin	V
Bridge Sensitivity	0.3		3	mV/V
Bridge Resistance	350			Ohms
Bridge Excitation Voltage		10.0		V
Output Temp. Coefficient – Zero		1.5		uV/°C
Output Temp. Coefficient – Span		0.01		%/°C
Operating Temperature	-20		85	°C

Copyright © 2024

www.aieng.co.uk

April 2024, Rev. 1.1, Page 1/3



## Installation, Calibration and Sensitivity:

### 1. Installation

The unit is provided with 8 pads around its periphery for the soldering of external wires. The holes in the pads are 1mm diameter (Pad size 1.8mm). The mounting hole has a diameter of 2.1mm (Pad size 4mm).

Default settings are:

Unipolar supply (24V, Assembled R16) Output sensitivity: 2mV/V (R12=220R)

Output range: 0-10V (1. Assembled R7, R17, R21, 2. Removed R18, R19)

Normally we will set-up the unit to the requirements indicated in your order. If alternative settings are required later, follow the procedures detailed below.

Power Suppy	Board changes – see diagram end of datasheet
Unipolar supply (13 – 32V)	Assemble R16 (alternatively connect pin 6 to pin 8 if the board was previously configured for bipolar supply operation)
Bipolar supply (+/-13 to +/-18V)	Remove R16

Output Range	Board changes	
2.5-7.5V	Assemble R7, R18, R19	Remove R17, R21
0-5V, 0-10V	Assemble R7, R17, R21	Remove R18, R19
+/-5V, +/-10V	Assemble R17, R21	Remove R7, R18, R19

## 2. Calibration

At zero load use ZERO potentiometer to set 0.01 V (or 2.5V)
At full load use SPAN potentiometer to set 10.00 V (or 5.0V or 7.5V)

Repeat above procedure several times until both settings are reached.

## 3. Sensitivity

The amplifier is matched to the load-cell full scale sensitivity (mV/V) by the value of resistor R12 (Top side THT) or R1 (Bottom side SMD).

#### For 0-5V, 0+/-5V and 2.5-7.5V ranges:

R12 (or R1) =  $220 \times mV/V$  Ohms




#### For 0-10V and 0+/-10V ranges:

R12 (or R1) =  $110 \times mV/V$  Ohms

Example: load-cell is 2mV/V. Therefore when configured for 0-10V voltage output, R1 = 110 x 2 = 220 Ohms.

If the calculated resistor value is not readily available use the nearest value.

Resistor should be 1% 100ppm/C 1/8 watt grade or better. Use either THT (1/8 watt) or SMD 0805. Example: THT MF12 series from Farnell Electronics: 100R, Part MF 12 100R, Order code: 9342397. All other resistors R7, R16, R17, R18, R19, R21 are 0R (Jumper) 0402. Farnell order code: 1652737

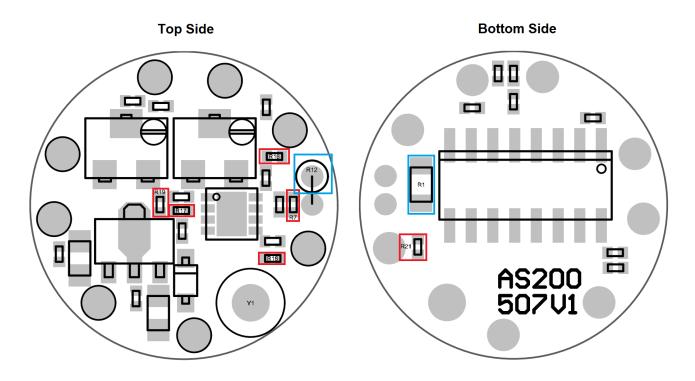

## 4. Standard Parts

Order Code	Description
AS200507-2.0MV-0-5V	Input sensitivity: 2mV/V, Output voltage 0V-5V
AS200507-2.0MV-0-10V	Input sensitivity: 2mV/V, Output voltage 0V-10V
AS200507-2.0MV-5-5V	Input sensitivity: 2mV/V, Output voltage +/-5V
AS200507-2.0MV-10-10V	Input sensitivity: 2mV/V, Output voltage +/-10V
AS200507-2.0MV-2.5-7.5V	Input sensitivity: 2mV/V, Output voltage 2.5V-7.5V