

Evaluating the AD9643/AD9613/AD6649/AD6643 Analog-to-Digital Converters

FEATURES

- Full featured evaluation board for the [AD9643/AD9613/AD6649/AD6643](#)
- SPI interface for setup and control
- External or [AD9523](#) clocking option
- Balun/transformer or amplifier input drive options
- LDO regulator power supply
- VisualAnalog and SPI controller software interfaces

EQUIPMENT NEEDED

- Analog signal source and antialiasing filter
- Sample clock source (if not using the on-board oscillator)
- 2 switching power supplies (6 V, 2 A), CUI EPS060250UH-PHP-SZ, provided
- PC running Windows® 98 (2nd ed.), Windows 2000, Windows ME, or Windows XP
- USB 2.0 port recommended (USB 1.1 compatible)
- [AD9643](#), [AD9613](#), [AD6649](#), or [AD6643](#) evaluation board
- [HSC-ADC-EVALCZ](#) FPGA-based data capture kit

SOFTWARE NEEDED

- VisualAnalog
- SPI controller

DOCUMENTS NEEDED

- [AD9643](#), [AD9613](#), [AD6649](#), or [AD6643](#) data sheet
- [HSC-ADC-EVALCZ](#) data sheet
- [AN-905 Application Note, VisualAnalog Converter Evaluation Tool Version 1.0 User Manual](#)
- [AN-878 Application Note, High Speed ADC SPI Control Software](#)
- [AN-877 Application Note, Interfacing to High Speed ADCs via SPI](#)
- [AN-835 Application Note, Understanding ADC Testing and Evaluation](#)

GENERAL DESCRIPTION

This user guide describes the [AD9643](#), [AD9613](#), [AD6649](#), and [AD6643](#) evaluation board, which provides all of the support circuitry required to operate the [AD9643](#), [AD9613](#), [AD6649](#), and [AD6643](#) in their various modes and configurations. The application software used to interface with the devices is also described.

The [AD9643](#), [AD9613](#), [AD6649](#), and [AD6643](#) data sheets provide additional information and should be consulted when using the evaluation board. All documents and software tools are available at www.analog.com/FIFO. For additional information or questions, send an email to highspeed.converters@analog.com.

TYPICAL MEASUREMENT SETUP

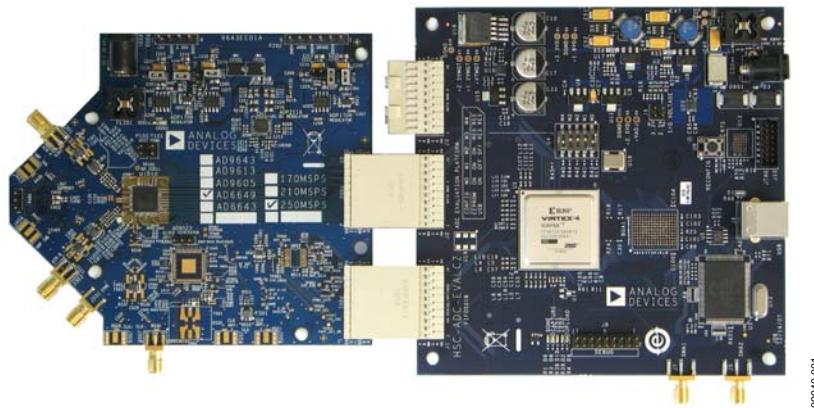


Figure 1. [AD9643](#), [AD9613](#), [AD6649](#), or [AD6643](#) Family Evaluation Board and [HSC-ADC-EVALCZ](#) Data Capture Board

TABLE OF CONTENTS

Features	1	Output Signals	4
Equipment Needed.....	1	Default Operation and Jumper Selection Settings.....	4
Software Needed	1	Evaluation Board Software Quick Start Procedures.....	6
Documents Needed.....	1	Configuring the Board	6
General Description.....	1	Using the Software for Testing.....	6
Typical Measurement Setup	1	Evaluation Board Schematics and Artwork.....	14
Revision History	2	Ordering Information.....	23
Evaluation Board Hardware	3	Bill of Materials.....	23
Power Supplies.....	3	Related Links.....	26
Input Signals.....	3		

REVISION HISTORY

11/14—Rev. 0 to Rev. A

Change to Equipment Needed Section.....	1
Changes to Configuring the Board Section	6
Changes to Setting Up the SPI Controller Software Section.....	8

11/11—Revision 0: Initial Version

EVALUATION BOARD HARDWARE

The AD9643, AD9613, AD6649, or AD6643 evaluation board provides all of the support circuitry required to operate these devices in their various modes and configurations. Figure 2 shows the typical bench characterization setup used to evaluate the ac performance of the AD9643, AD9613, AD6649, or AD6643. It is critical that the signal sources used for the analog input and the clock have very low phase noise (<1 ps rms jitter) to achieve the optimum performance of the signal chain. Proper filtering of the analog input signal to remove harmonics and lower the integrated or broadband noise at the input is necessary to achieve the specified noise performance.

See the Evaluation Board Software Quick Start Procedures section to get started, and see Figure 23 to Figure 34 for the complete schematics and layout diagrams. These diagrams demonstrate the routing and grounding techniques that should be applied at the system level when designing application boards using these converters.

POWER SUPPLIES

This evaluation board comes with a wall-mountable switching power supply that provides a 6 V, 2 A maximum output. Connect the supply to a rated 100 V ac to 240 V ac wall outlet at 47 Hz to 63 Hz. The output from the supply is provided through a 2.1 mm inner diameter jack that connects to the printed circuit board (PCB) at P201. The 6 V supply is fused and conditioned on the PCB before connecting to the low dropout (LDO) linear regulators (default configuration) that supply the proper bias to each of the various sections on the board.

The evaluation board can be powered in a nondefault condition using external bench power supplies. To do this, remove the jumpers on the P103, P104, P107, P108, and P105 header pins to disconnect the outputs from the on-board LDO regulators, which enables the user to bias each section of the board individually. Use P202 and P203 to connect a different supply for each section. A 1.8 V supply is needed with a 1 A current capability for DUT_AVDD and DRVDD; however, it is recommended that separate supplies be used for both analog and digital domains. An additional supply is also required to supply 1.8 V for digital support circuitry on the board, DVDD. This supply must also have a 1 A current capability and can be combined with DRVDD with little or no degradation in performance. To operate the evaluation board using the SPI and alternate clock options, a separate 3.3 V analog supply is needed in addition to the other supplies. This 3.3 V supply, or 3P3V_ANALOG, must have a 1 A current capability. This 3.3 V supply is also used to support the optional input path amplifier (ADL5202) on Channel A and Channel B.

INPUT SIGNALS

When connecting the clock and analog source, use clean signal generators with low phase noise, such as the Rohde & Schwarz SMA or HP 8644B signal generators or an equivalent. Use a 1 m, shielded, RG-58, 50 Ω coaxial cable for connecting to the evaluation board. Enter the desired frequency and amplitude (see the Specifications section in the data sheet of the respective device).

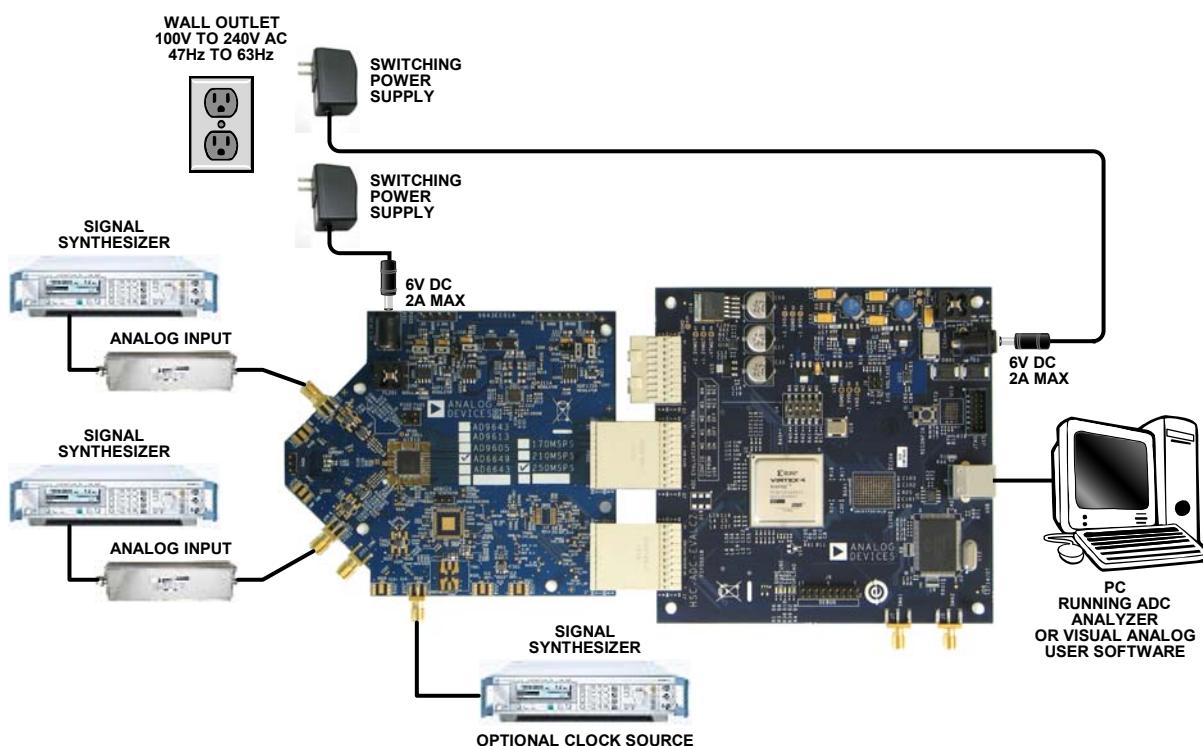


Figure 2. Evaluation Board Connection

When connecting the analog input source, use of a multipole, narrow-band, band-pass filter with $50\ \Omega$ terminations is recommended. Analog Devices, Inc., uses TTE and K&L Microwave, Inc., band-pass filters. Connect the filters directly to the evaluation board.

If an external clock source is used, it should also be supplied with a clean signal generator as previously specified. Typically, most Analog Devices evaluation boards can accept $\sim 2.8\text{ V p-p}$ or 13 dBm sine wave input for the clock.

OUTPUT SIGNALS

The default setup uses the Analog Devices high speed converter evaluation platform ([HSC-ADC-EVALCZ](#)) for data capture. The output signals from Channel A and Channel B for the [AD9643](#), [AD9613](#), [AD6649](#), and [AD6643](#) are routed through P601 and P602, respectively, to the FPGA on the data capture board.

DEFAULT OPERATION AND JUMPER SELECTION SETTINGS

This section explains the default and optional settings or modes allowed on the [AD9643/AD9613/AD6649/AD6643](#) evaluation board.

Power Circuitry

Connect the switching power supply that is supplied in the evaluation kit between a rated 100 V ac to 240 V ac wall outlet at 47 Hz to 63 Hz and P201.

Analog Input

The A and B channel inputs on the evaluation board are set up for a double balun-coupled analog input with a $50\ \Omega$ impedance. This input network is optimized to support a wide frequency band. See the [AD9643](#), [AD9613](#), [AD6649](#), and [AD6643](#) data sheets for additional information on the recommended networks for different input frequency ranges. The nominal input drive level is 10 dBm to achieve 2 V p-p full scale into $50\ \Omega$. At higher input frequencies, slightly higher input drive levels are required due to losses in the front-end network.

Optionally, the Channel A and Channel B inputs on the board can be configured to use the [ADL5202](#) digitally controlled, variable gain wide bandwidth amplifier. The [ADL5202](#) component is included on the evaluation board at U401. However, the path

into and out of the [ADL5202](#) can be configured in many different ways depending on the application; therefore, the parts in the input and output path are left unpopulated. See the [ADL5202](#) data sheet for additional information on this device and for configuring the inputs and outputs. The [ADL5202](#), by default, is held in power-down mode but can be enabled by adding $1\text{ k}\Omega$ resistors at R427 and R428 to enable Channel A and Channel B, respectively.

Clock Circuitry

The default clock input circuit that is populated on the [AD9643/AD9613/AD6649/AD6643](#) evaluation board uses a simple transformer-coupled circuit with a high bandwidth 1:1 impedance ratio transformer (T503) that adds a very low amount of jitter to the clock path. The clock input is $50\ \Omega$ terminated and ac-coupled to handle single-ended sine wave types of inputs. The transformer converts the single-ended input to a differential signal that is clipped by CR503 before entering the ADC clock inputs.

The board is set by default to use an external clock generator. An external clock source capable of driving a $50\ \Omega$ terminated input should be connected to J506.

A differential LVPECL clock driver output can also be used to clock the ADC input using the [AD9523](#) (U501). To place the [AD9523](#) into the clock path, populate R541 and R542 with $0\ \Omega$ resistors and remove C532 and C533 to disconnect the default clock path inputs. In addition, populate R533 and R534 with $0\ \Omega$ resistors, remove R522 and R523 to disconnect the default clock path outputs, and insert [AD9523](#) LVPECL Output 2. The [AD9523](#) must be configured through the SPI controller software to set up the PLL and other operation modes. Consult the [AD9523](#) data sheet for more information about these and other options.

PDWN

To enable the power-down feature, add a shorting jumper across P101 at Pin 1 and Pin 2 to connect the PDWN pin to AVDD.

OEB

To disable the digital output pins and place them in a high impedance state, add a shorting jumper across P102 at Pin 1 and Pin 2 to connect the OEB pin to AVDD.

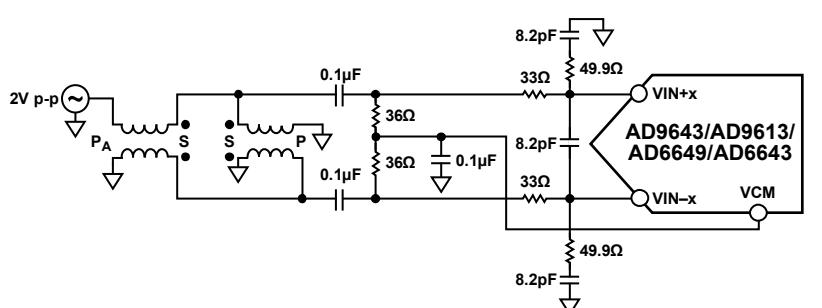


Figure 3. Default Analog Input Configuration of the [AD9643/AD9613/AD6649/AD6643](#)

Switching Power Supply

Optionally, the ADC on the board can be configured to use the [ADP2114](#) dual switching power supply to provide power to the DRVDD and AVDD rails of the ADC. To configure the board to operate from the [ADP2114](#), incorporate the following changes (see the Evaluation Board Schematics and Artwork and the Bill of Materials sections for specific recommendations for device values):

1. Install R204 and R221 to enable the [ADP2114](#).
2. Install R216 and R218.

3. Install L201 and L202.
4. Remove JP201 and JP203.
5. Remove jumpers from across Pin 1 and Pin 2 on P107 and P108, respectively.
6. Place jumpers across Pin 1 and Pin 2 of P106 and P109, respectively.

Making these changes enables the switching converter to power the ADC. Using the switching converter as the ADC power source is more efficient than using the default LDO regulators.

EVALUATION BOARD SOFTWARE QUICK START PROCEDURES

This section provides quick start procedures for using the [AD9643](#)/[AD9613](#)/[AD6649](#)/[AD6643](#) evaluation board. Both the default and optional settings are described.

CONFIGURING THE BOARD

Before using the software for testing, configure the evaluation board as follows:

1. Connect the evaluation board to the data capture board, as shown in Figure 1 and Figure 2.
2. Connect one 6 V, 2 A switching power supply (such as the CUI, Inc., EPS060250UH-PHP-SZ that is supplied) to the [AD9643](#)/[AD9613](#)/[AD6649](#)/[AD6643](#) board.
3. Connect another 6 V, 2 A switching power supply (such as the CUI EPS060250UH-PHP-SZ that is supplied) to the **HSC-ADC-EVALCZ** board.
4. Connect the **HSC-ADC-EVALCZ** board (J6) to the PC with a USB cable.
5. On the ADC evaluation board, confirm that jumpers are installed on the P105, P108, P104, P107, P110, and P103 headers.
6. Connect a low jitter sample clock to Connector J506.
7. Use a clean signal generator with low phase noise to provide an input signal to the desired channel(s) at Connector J301 (Channel A) and/or Connector J303 (Channel B). Use a 1 m, shielded, RG-58, 50 Ω coaxial cable to connect the signal generator. For best results, use a narrow-band band-pass filter with 50 Ω terminations and an appropriate center frequency. (Analog Devices uses TTE, Allen Avionics, and K&L band-pass filters.)

USING THE SOFTWARE FOR TESTING

Setting Up the ADC Data Capture

After configuring the board, set up the ADC data capture using the following steps:

1. Open VisualAnalog® on the connected PC. The appropriate device type should be listed in the status bar of the **VisualAnalog – New Canvas** window. Select the template that corresponds to the type of testing to be performed (see Figure 4 where the [AD9643](#) is shown as an example). The [AD9643](#) is given as an example in this user guide. Similar settings are used for the [AD9613](#). For the [AD6649](#) and [AD6643](#), the differences are noted where necessary in the steps that follow.

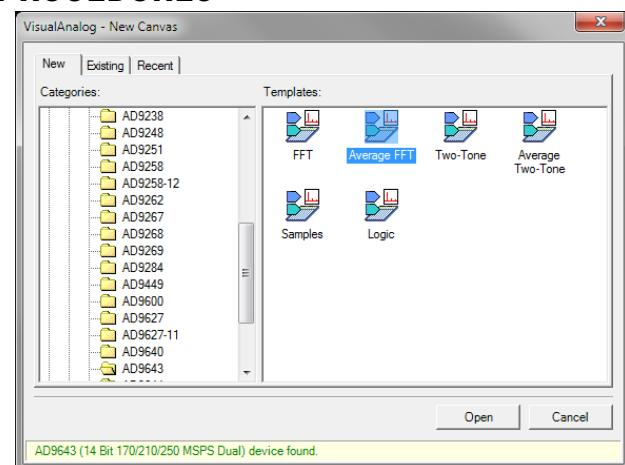


Figure 4. VisualAnalog, New Canvas Window

09940-004

2. After the template is selected, a message appears asking if the default configuration can be used to program the FPGA (see Figure 5). Click **Yes**, and the window closes.

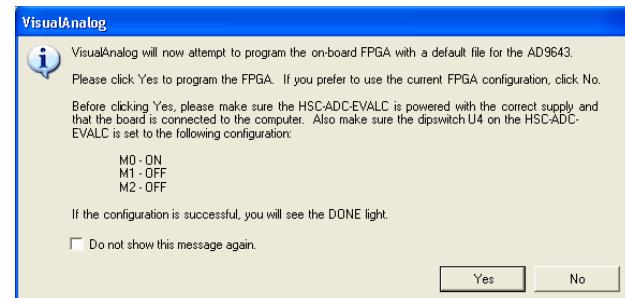


Figure 5. VisualAnalog Default Configuration Message

09940-005

3. To change features to settings other than the default settings, click the **Expand Display** button, located on the bottom right corner of the window, to see the main window that is shown in Figure 7.
4. Detailed instructions for changing the features and capture settings can be found in the [AN-905 Application Note](#), *VisualAnalog Converter Evaluation Tool Version 1.0 User Manual*. After the changes are made to the capture settings, click the **Collapse Display** button (see Figure 6).

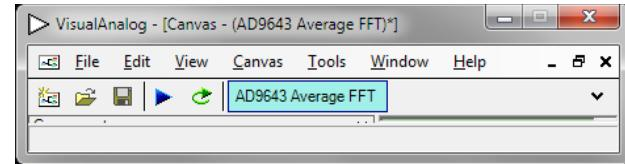


Figure 6. VisualAnalog Window Toolbar, Collapsed Display

09940-006

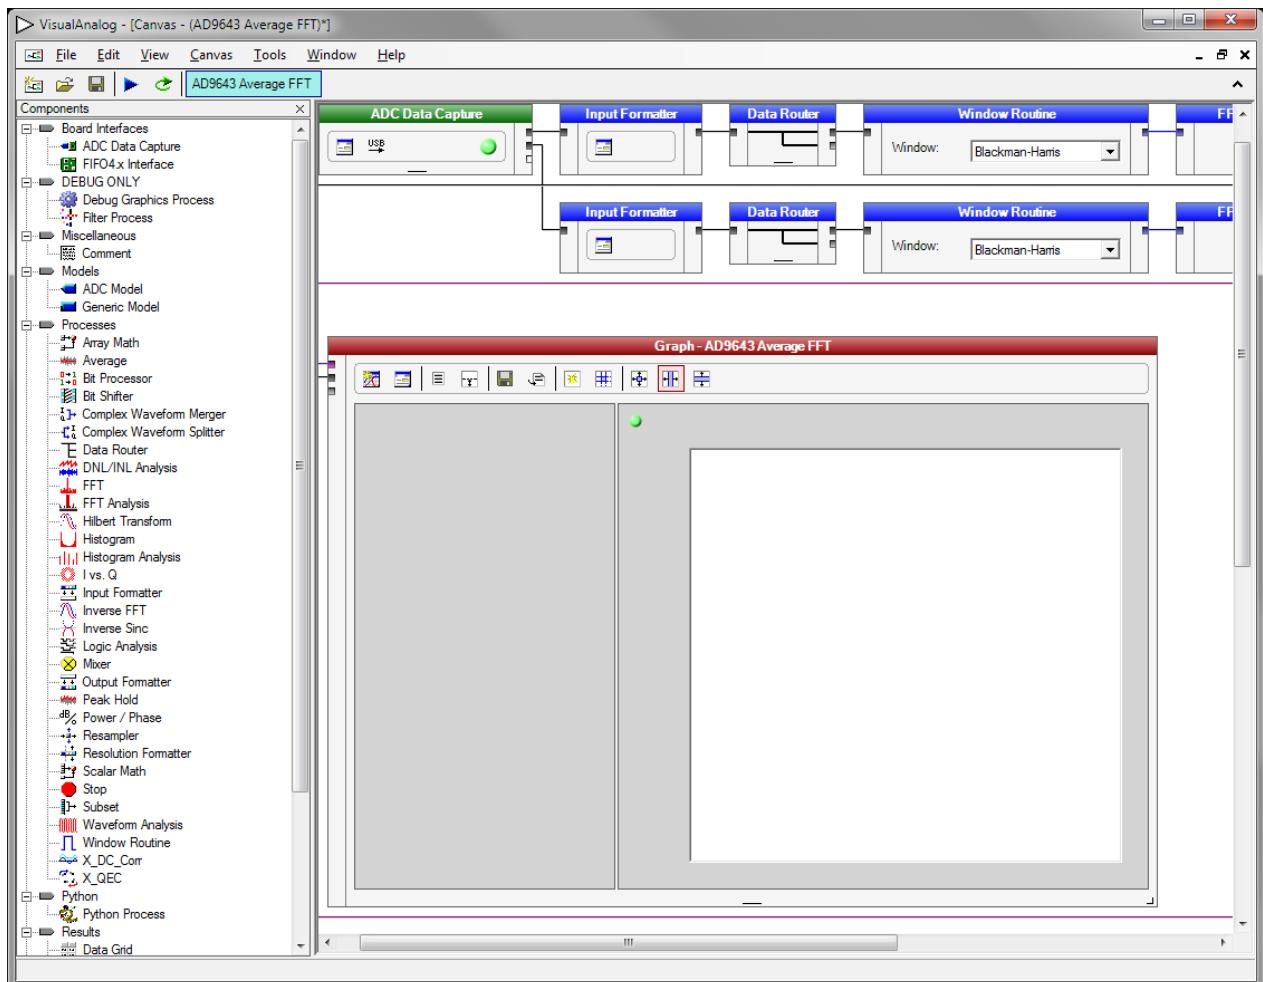


Figure 7. VisualAnalog, Main Window

Setting Up the SPI Controller Software

After the ADC data capture board setup is complete, set up the SPI controller software using the following procedure:

1. Open the SPI controller software by going to the **Start** menu or by double-clicking the **SPIController** software desktop icon. If prompted for a configuration file, select the appropriate one. If not, check the title bar of the window to determine which configuration is loaded. If necessary, choose **Cfg Open** from the **File** menu and select the appropriate file based on your device type. Note that the **CHIP ID(1)** field should be filled to indicate whether the correct SPI controller configuration file is loaded (see Figure 8).

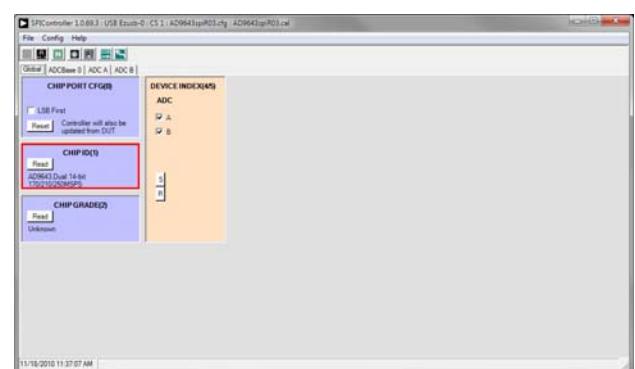


Figure 8. SPI Controller, CHIP ID(1) Section

2. Click the **New DUT** button in the **SPIController** window (see Figure 9).

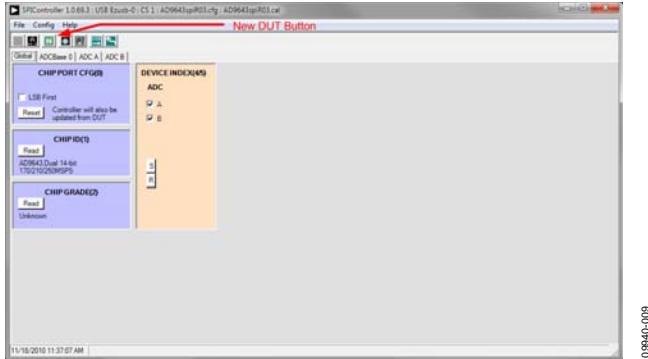


Figure 9. SPI Controller, New DUT Button

3. In the **ADCBase 0** tab of the **SPIController** window, find the **CLK DIV(B)** section (see Figure 11). If using the clock divider, use the drop-down box to select the correct clock divide ratio, if necessary. See the appropriate device data sheet; the [AN-878 Application Note, High Speed ADC SPI Control Software](#); and the [AN-877 Application Note, Interfacing to High Speed ADCs via SPI](#), for additional information.

4. Note that other settings can be changed on the **ADCBase 0** tab (see Figure 11) and the **ADC A** and **ADC B** tabs (see Figure 10) to set up the device in the desired mode. The settings on the **ADCBase 0** tab affect the entire device, whereas the settings on the **ADC A** and **ADC B** pages affect the selected channel only. See the appropriate device data sheet; the [AN-878 Application Note, High Speed ADC SPI Control Software](#); and the [AN-877 Application Note, Interfacing to High Speed ADCs via SPI](#), for additional information on the available settings.

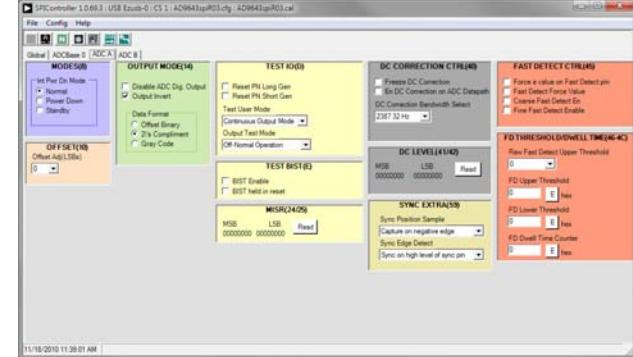


Figure 10. SPI Controller, Example ADC A Tab

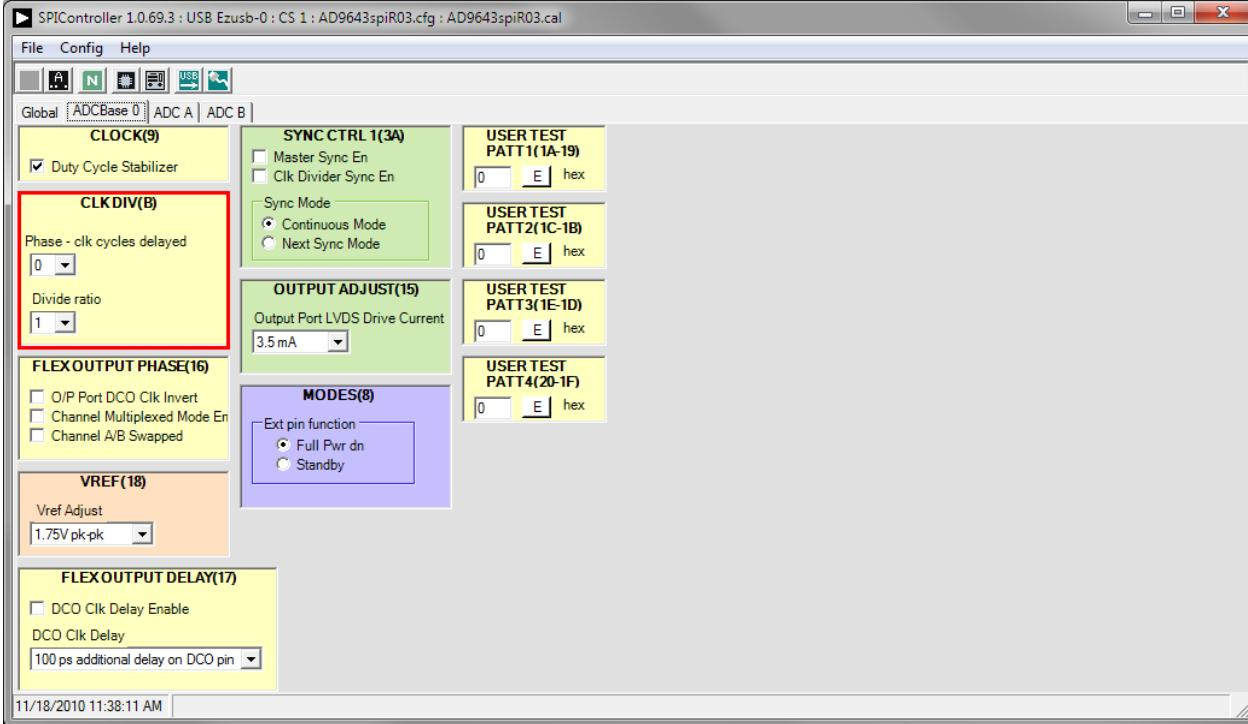


Figure 11. SPI Controller, CLK DIV(B) Section

5. If using the [AD6649](#), the device can be configured into two different modes. The default mode utilizes a 95 MHz FIR filter and fixed-frequency NCO. The SPI controller settings for this mode are shown in Figure 12. Under the **MAIN(50)** section, the **Fir Low Latency Mode En** checkbox must be selected, and the **Low Latency NCO (Fs/4 Only)** option

must be selected under the **MISC EXTRA(5A)** section. The second mode uses a 100 MHz FIR filter and a tunable-frequency NCO (see Figure 13). In this mode, the **High Latency NCO** option under **MISC EXTRA(5A)** must be selected, and the **Fir Low Latency Mode En** checkbox must be cleared under the **MAIN(50)** section.

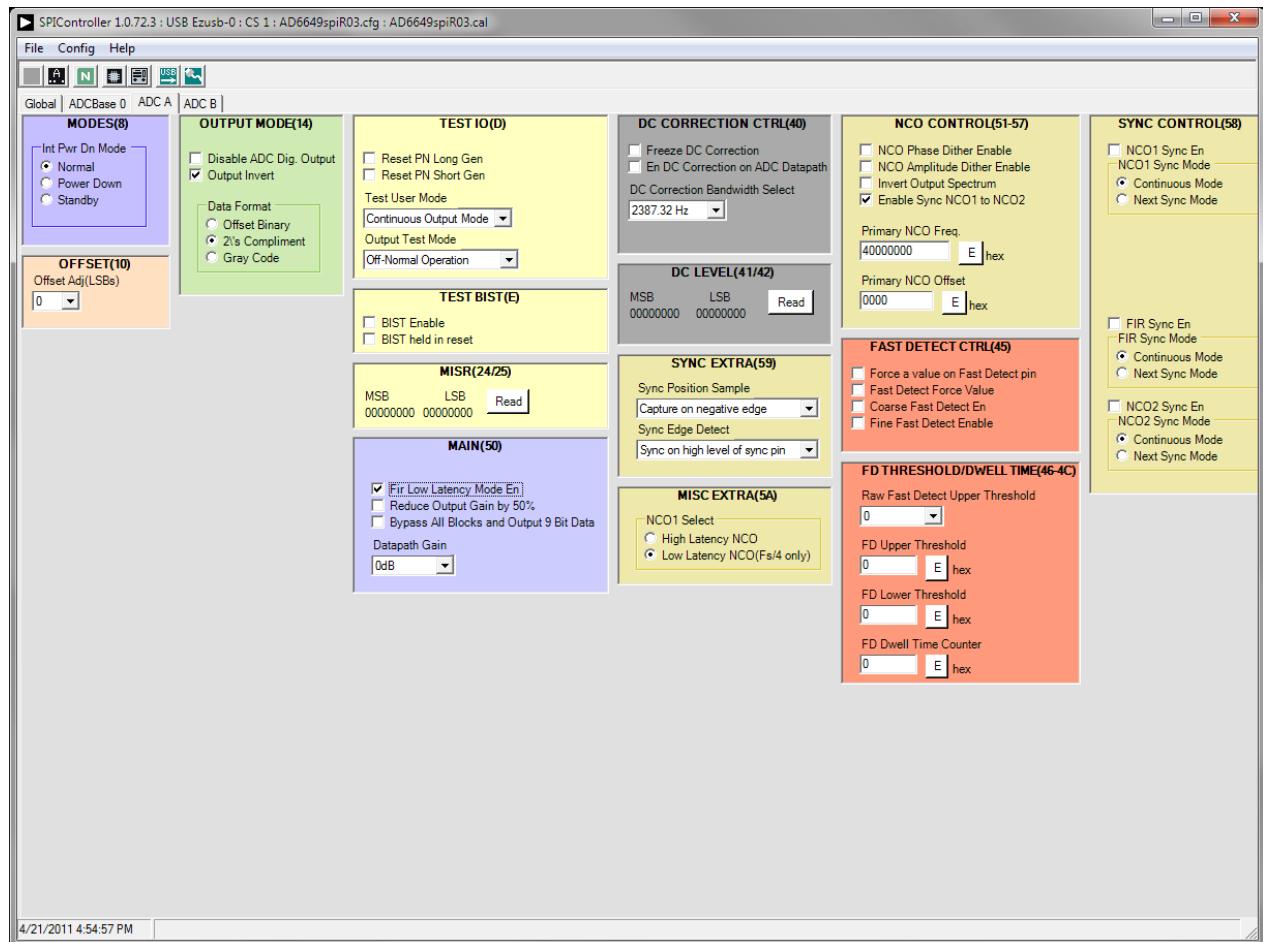


Figure 12. SPI Controller, [AD6649](#) ADC A Tab—95 MHz FIR Filter and Fixed-Frequency NCO Mode

08946-012

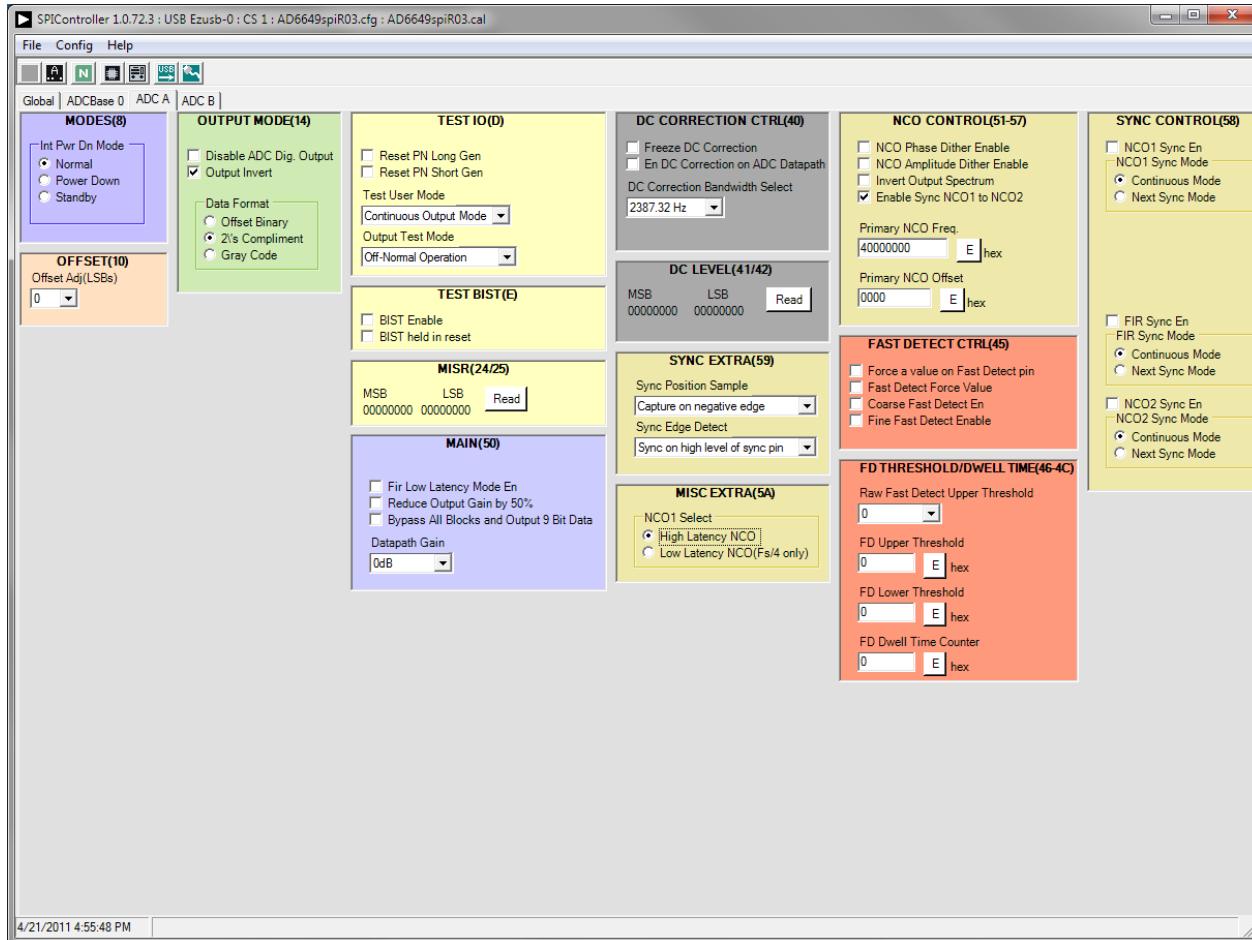


Figure 13. SPI Controller, AD6649 ADC A Tab—95 MHz FIR Filter and Fixed-Frequency NCO Mode

09940-013

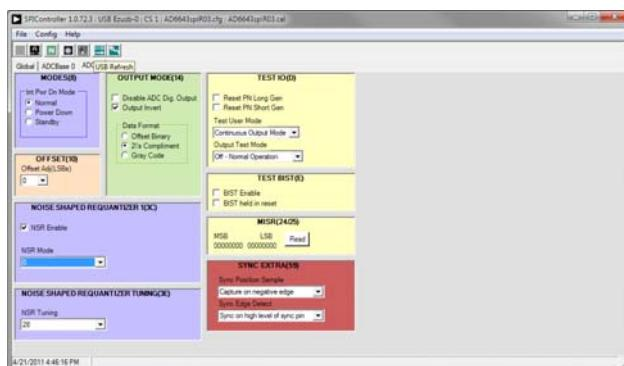


Figure 14. SPI Controller, Example ADC A Tab—NSR Settings for the AD6643

09940-014

6. If using the noise shaping requantizer (NSR) feature of the AD6643, the settings in the ADC A and/or ADC B pages must be changed (see Figure 14). The NSR Enable checkbox must be selected under the NOISE SHAPED REQUANTIZER 1(3C) section. This enables the circuitry in the AD6643. To select the bandwidth mode, select 0 for 22% and 1 for 33% under the NSR Mode drop-down box in the NOISE SHAPED REQUANTIZER 1(3C) section. Upon selecting the bandwidth mode, select the desired tuning word in the NSR Tuning drop-down box under the NOISE SHAPED REQUANTIZER TUNING(3E) section.

7. Click the Run button in the VisualAnalog toolbar (see Figure 15).

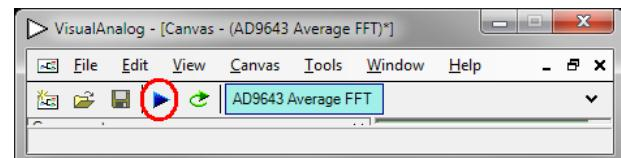


Figure 15. Run Button (Encircled in Red) in VisualAnalog Toolbar, Collapsed Display

09940-015

Adjusting the Amplitude of the Input Signal

The next step is to adjust the amplitude of the input signal for each channel as follows:

1. Adjust the amplitude of the input signal so that the fundamental is at the desired level. (Examine the **Fund Power** reading in the left panel of the VisualAnalog **Graph** window.) See Figure 17.
2. Repeat this procedure for Channel B if desired.
3. Click the **Save** disk icon within the **Graph** window to save the performance plot data as a .csv formatted file. See Figure 16 for an example.

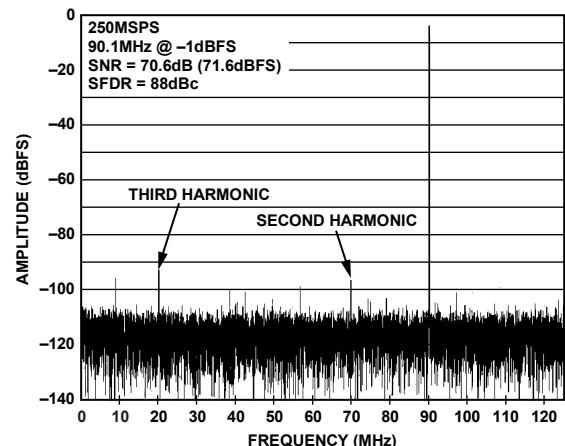


Figure 16. Typical FFT, AD9643

09940-017

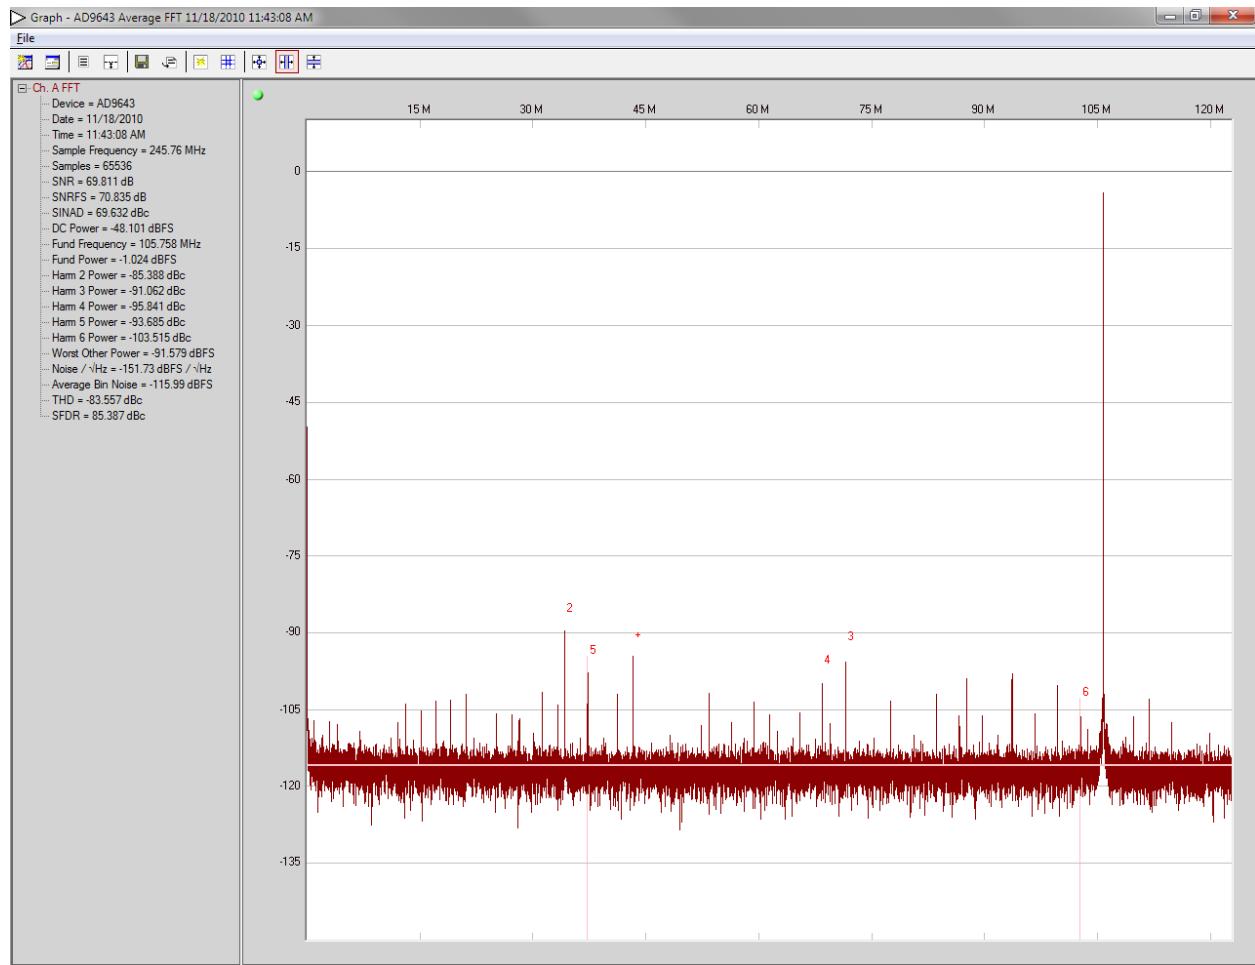


Figure 17. Graph Window of VisualAnalog (AD9643)

4. If operating the [AD6649](#) in the mode using the 95 MHz FIR filter and fixed-frequency NCO, the amplitude displayed is -2.5 dBFS for a -1.0 dBFS input signal (see Figure 18) to the desired settings. If operating the [AD6649](#) in the mode utilizing the 100 MHz FIR filter and tunable-frequency NCO, the amplitude displayed is -1.3 dBFS for a -1.0 dBFS input signal (see Figure 19).

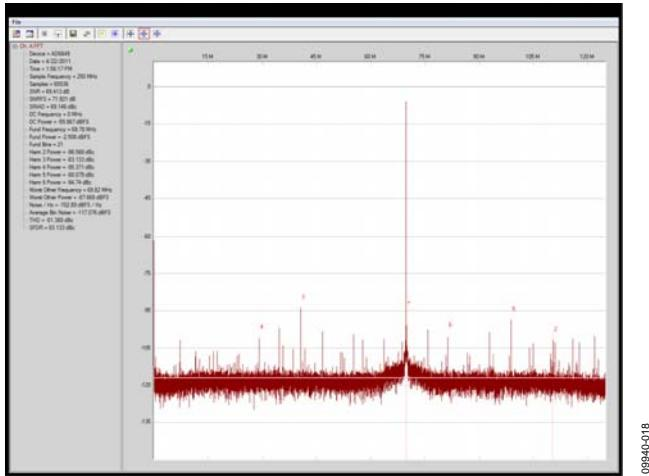


Figure 18. Visual Graph Window of VisualAnalog ([AD6649](#))—95 MHz FIR Filter and Fixed-Frequency NCO Mode

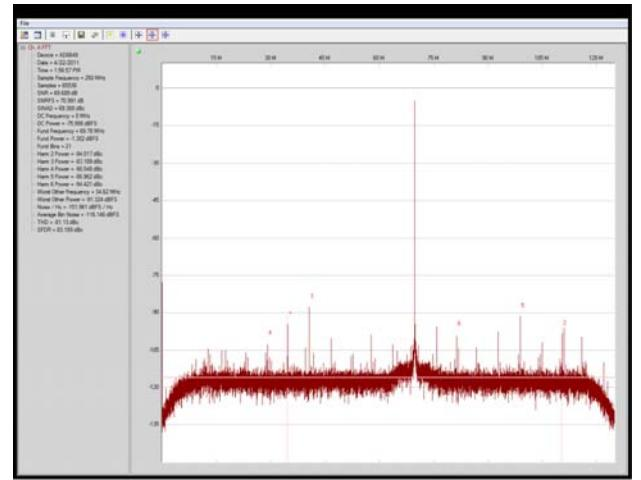


Figure 19. Visual Graph Window of VisualAnalog ([AD6649](#))—100 MHz FIR Filter and Tunable-Frequency NCO Mode

5. Repeat Step 3 to save the graph in a .csv file format.
 6. If operating the [AD6643](#) with NSR enabled, certain options in VisualAnalog must be enabled. Click the button circled in the FFT Analysis box (see Figure 20) in VisualAnalog to bring up the options for setting the NSR.

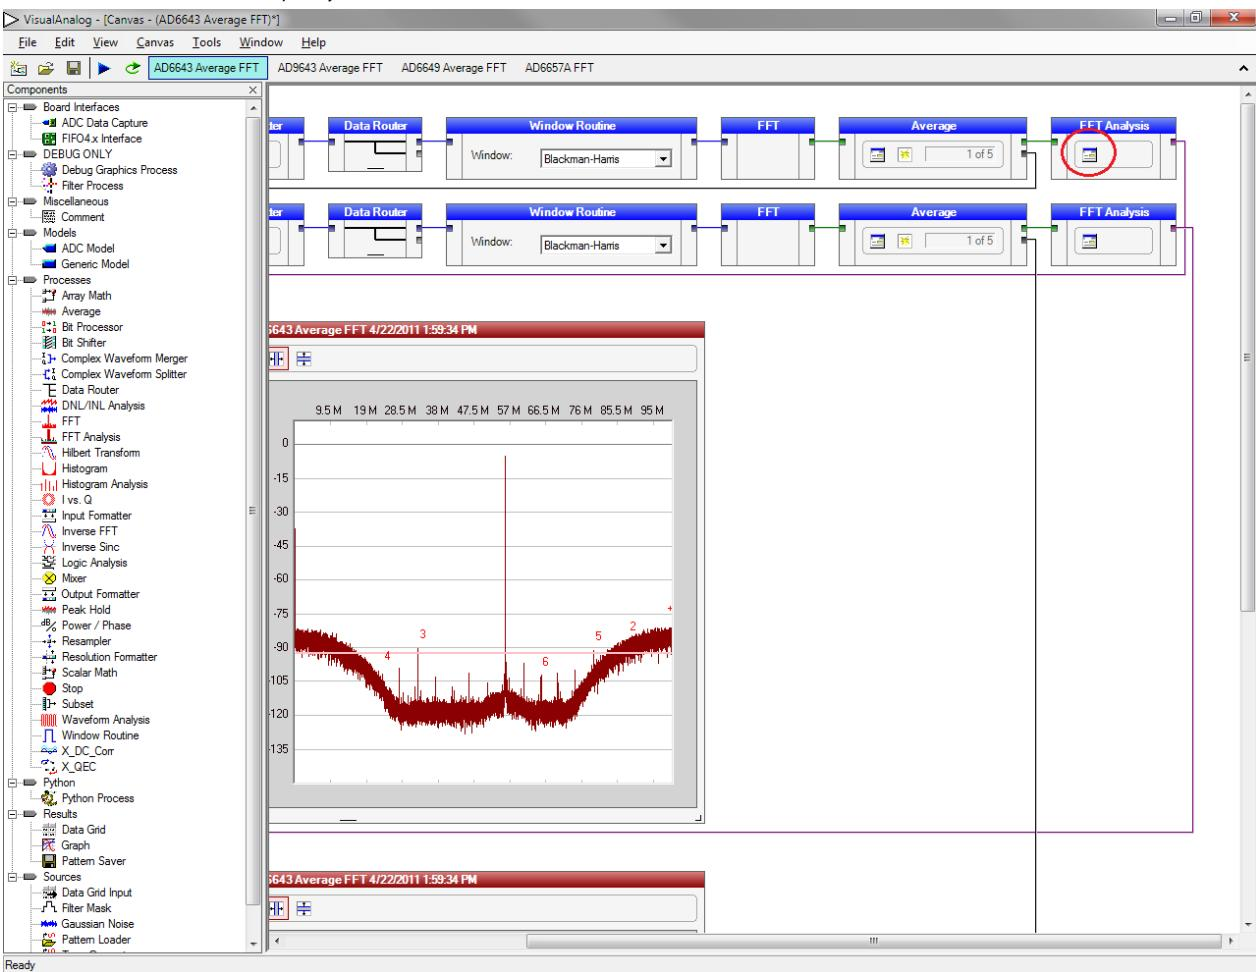


Figure 20. VisualAnalog, Main Window—Showing FFT Analysis for [AD6643](#)

- Configure the settings in the FFT analysis to match the settings selected for the NSR in the SPI controller (see Figure 21).

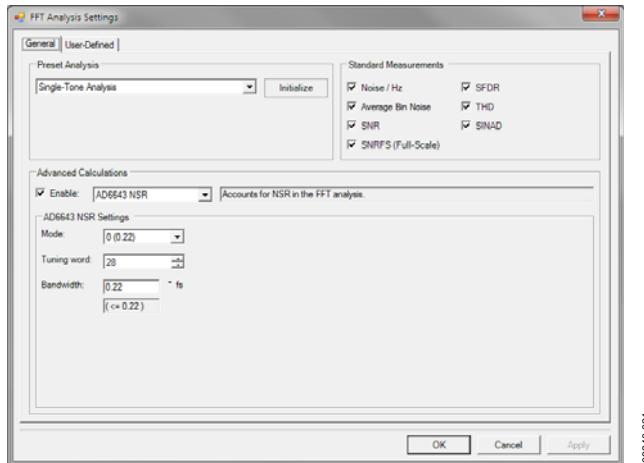


Figure 21. VisualAnalog, FFT Analysis Settings for AD6643

8. The result should show an FFT plot that looks similar to Figure 22.

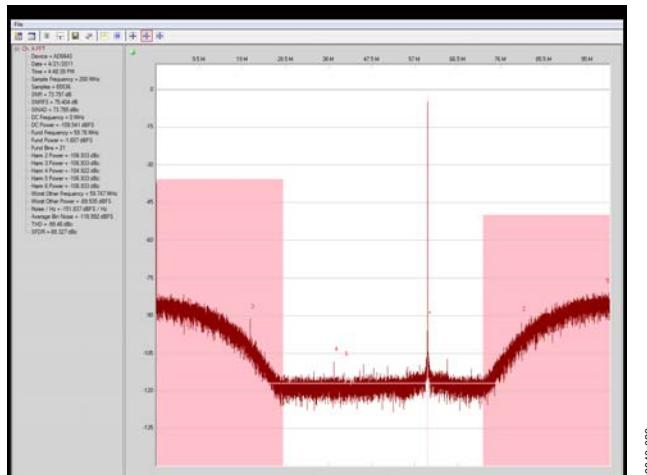


Figure 22. Graph Window of VisualAnalog, NSR Enabled, AD6643

9. The amplitude shows approximately 0.6 dB lower than when the NSR is disabled. The NSR circuitry introduces this loss. An amplitude of -1.6 dBFS with NSR enabled is analogous to an amplitude of -1.0 dBFS with NSR disabled.
 10. Repeat Step 3 to save the graph in a .csv file format.

Troubleshooting Tips

If the FFT plot appears abnormal, do the following:

- If you see a normal noise floor when you disconnect the signal generator from the analog input, make sure that you are not overdriving the ADC. Reduce the input level, if necessary.
 - In VisualAnalog, click the **Settings** button in the **Input Formatter** block (see Figure 7). Check that **Number Format** in the settings of the **Input Formatter** block is set to the correct encoding (offset binary by default). Repeat for the other channel.

If the FFT appears normal but the performance is poor, check the following:

- Make sure that an appropriate filter is used on the analog input.
 - Make sure that the signal generators for the clock and the analog input are clean (low phase noise).
 - Change the analog input frequency slightly if noncoherent sampling is being used.
 - Make sure that the SPI configuration file matches the product being evaluated.

If the FFT window remains blank after **Run** is clicked, do the following:

- Make sure that the evaluation board is securely connected to the **HSC-ADC-EVALCZ** board.
 - Make sure that the FPGA has been programmed by verifying that the **DONE** LED is illuminated on the **HSC-ADC-EVALCZ** board. If this LED is not illuminated, make sure that the U4 switch on the board is in the correct position for USB CONFIG.
 - Make sure that the correct FPGA program was installed by clicking the **Settings** button in the **ADC Data Capture** block in **VisualAnalog**. Then select the **FPGA** tab and verify that the proper FPGA bin file is selected for the device.

If VisualAnalog indicates that the data capture timed out, do the following:

- Make sure that all power and USB connections are secure.
 - Probe the DCO signal at the ADC on the evaluation board and confirm that a clock signal is present at the ADC sampling rate.

EVALUATION BOARD SCHEMATICS AND ARTWORK



AD9643/AD6649 ENG < SOCKET >

DUT




EXTRA CIRCUITRY FOR AD9258 COMPATIBILITY
NOT NEEDED FOR AD9643/AD6649

THE FOOTPRINT FOR THIS SOCKET NEEDS TO BE CHECKED AGAINST THE DRAWING

TP101.

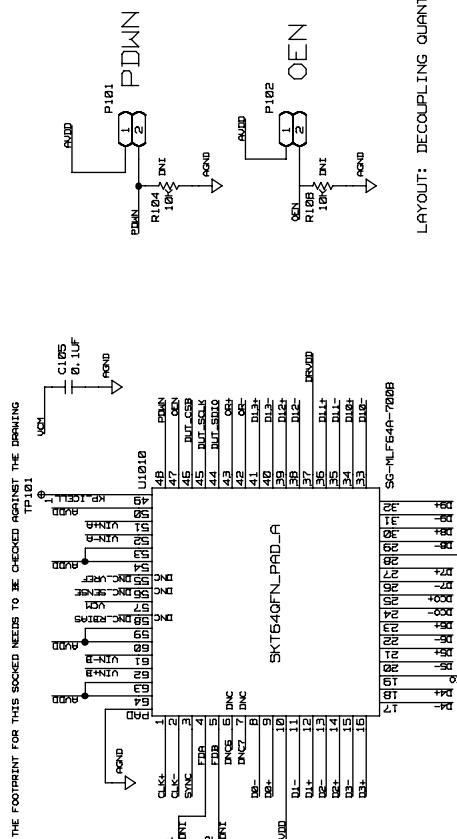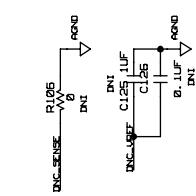

LAYOUT: DECOUPLING QUANTITY MAY VARY LAYOUT DEPENDING

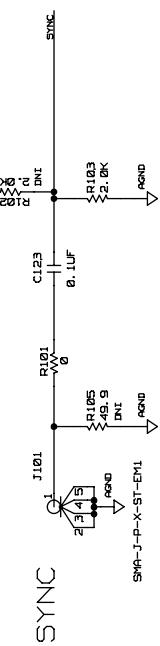

09940-023

Figure 23. DUT and Related Circuits


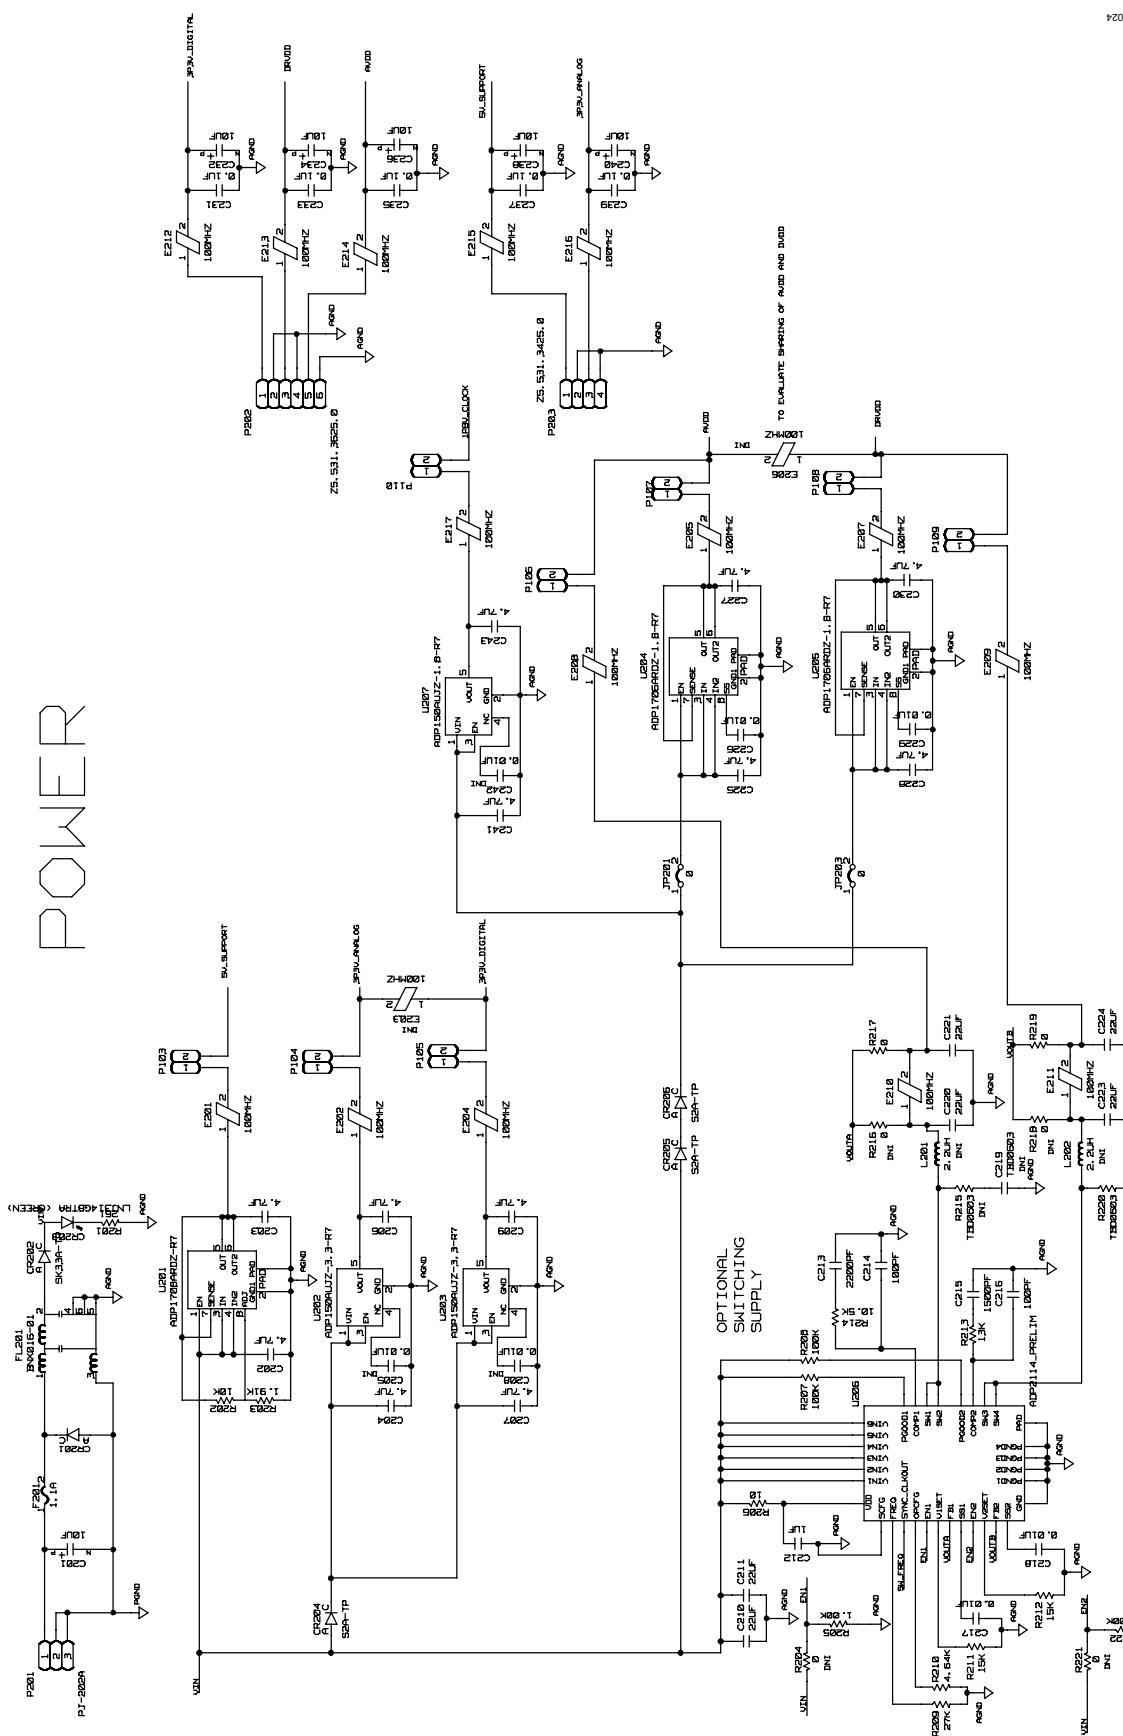


Figure 24. Board Power Input and Supply

ANALOG INPUT THIS SECTION WILL CHANGE BASED ON 9644 EXPERIMENTS

PASSIVE PATH A

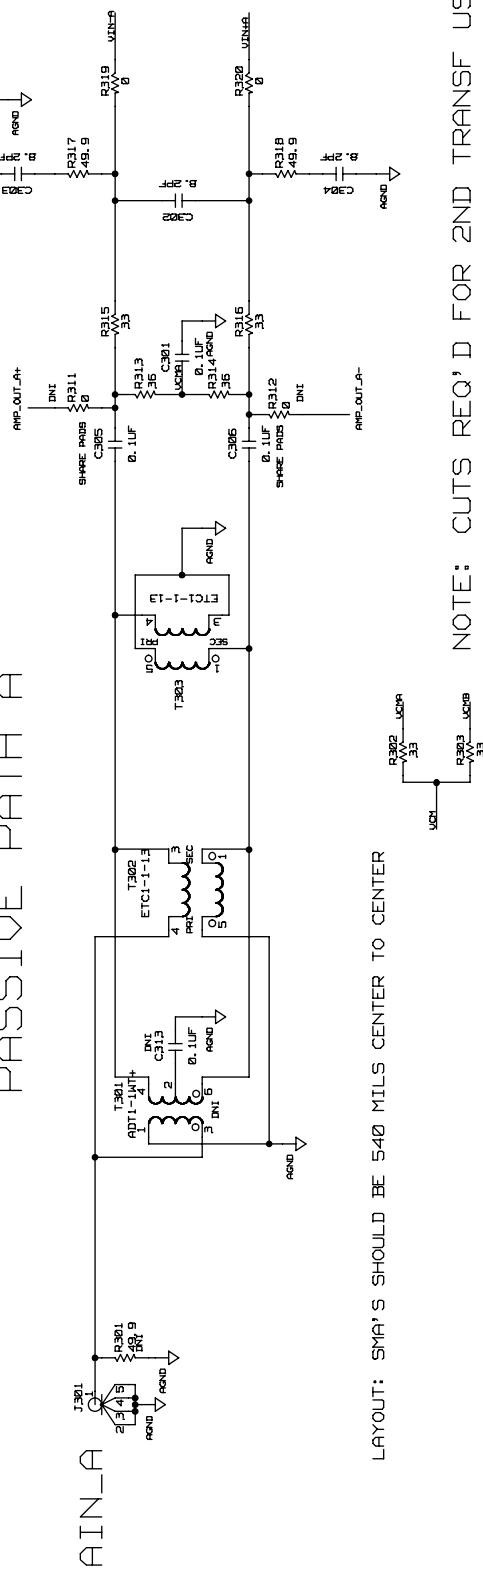

NOTE: CUTS REQ'D FOR 2ND TRANSF USE

PASSIVE PATH B

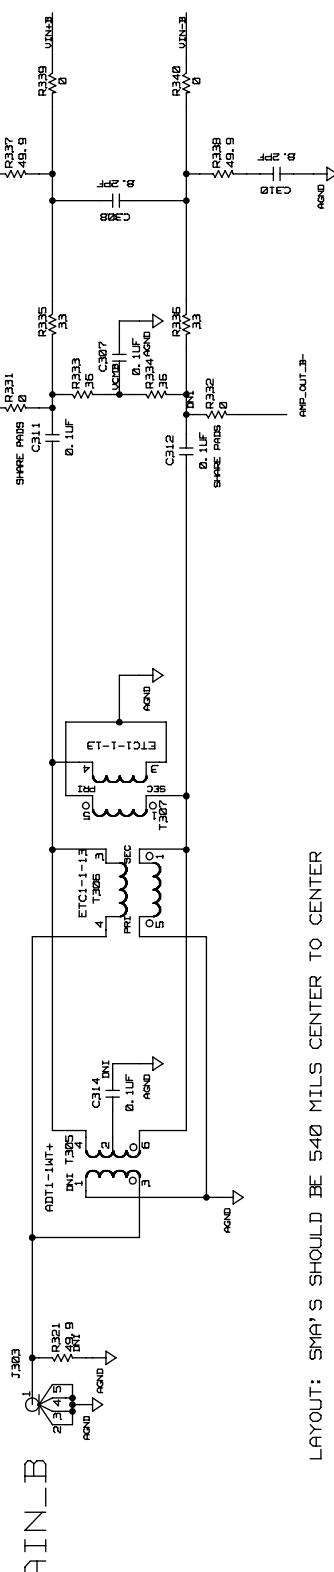


Figure 25. Passive Analog Input Circuits

ACTIVE PATH - CHANNEL A AND B

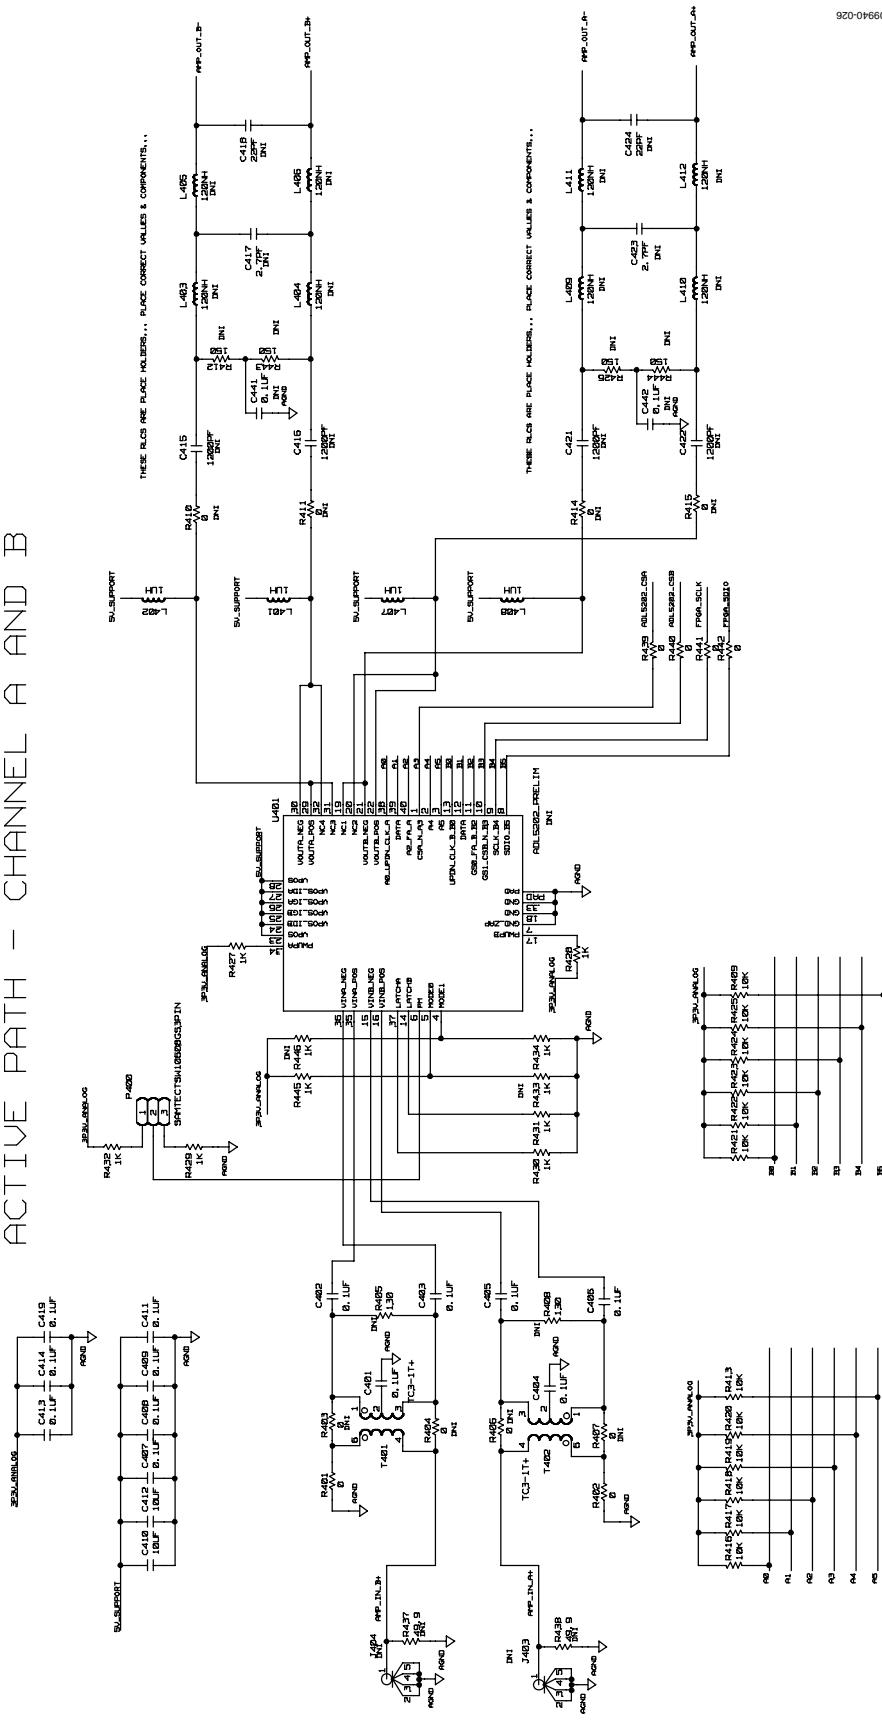


Figure 26. Optional Active Input Circuits

ACTIVE CLOCK PATH

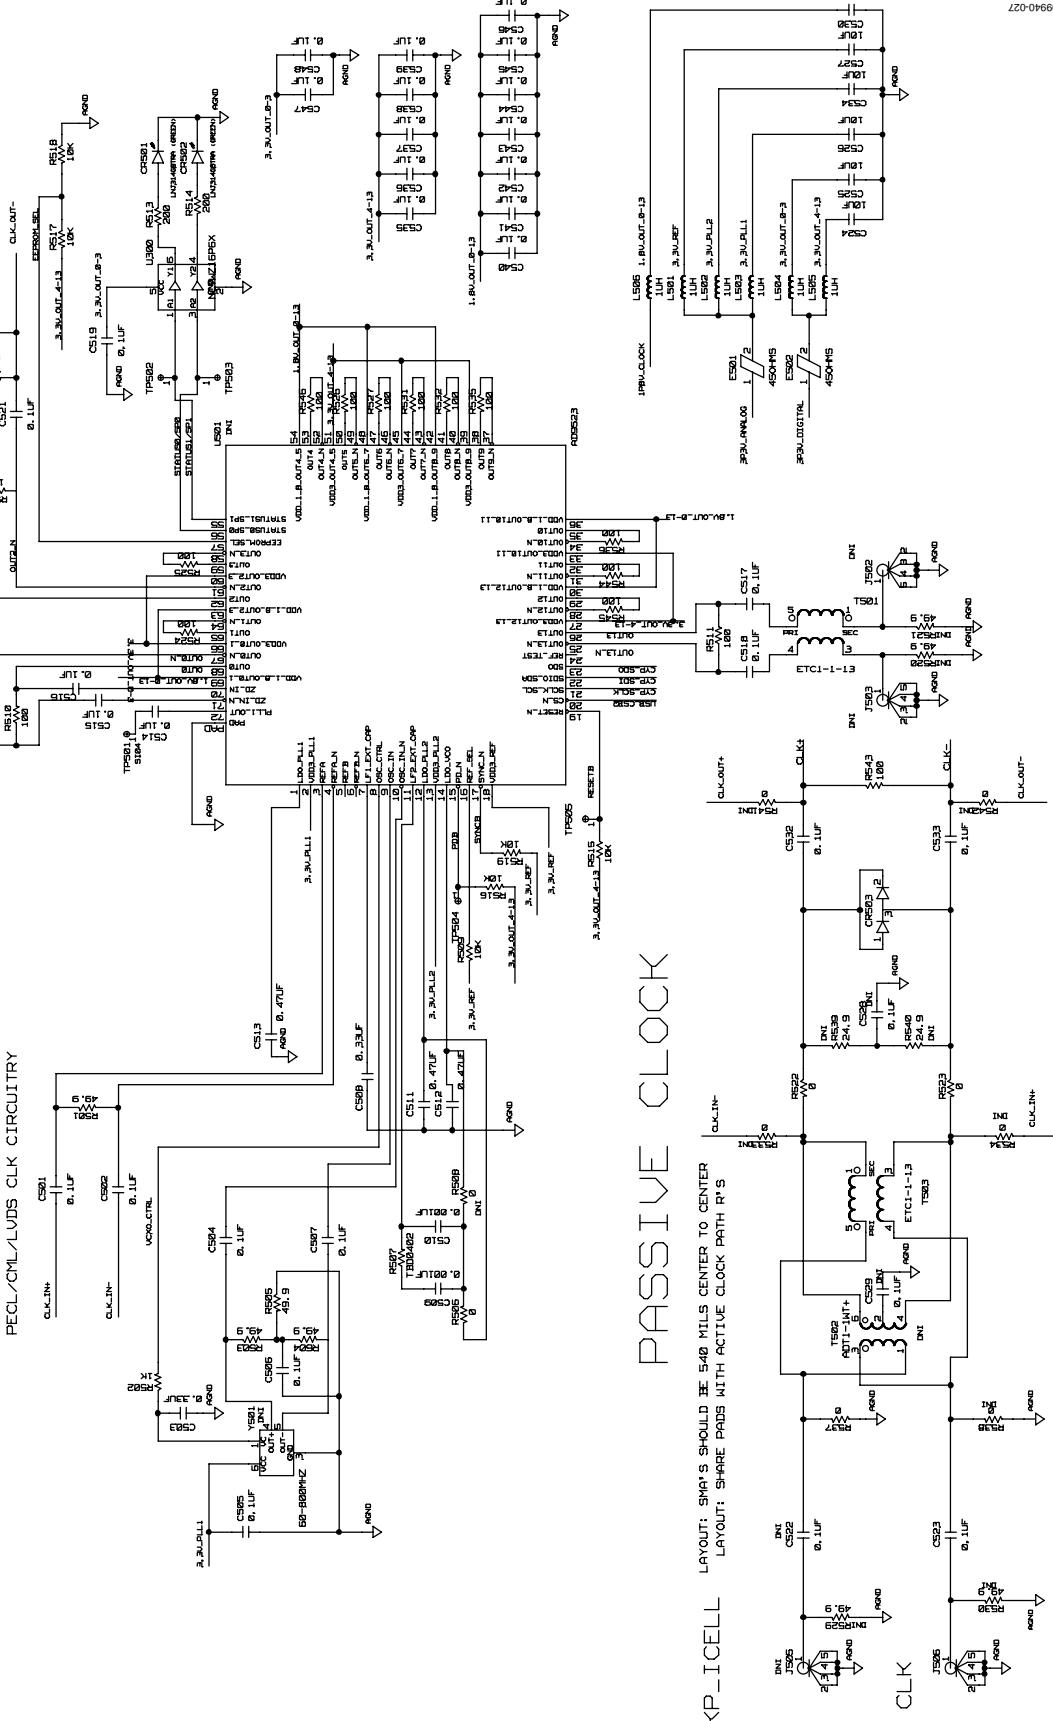


Figure 27. Default and Optional Clock Input Circuits

09940-028

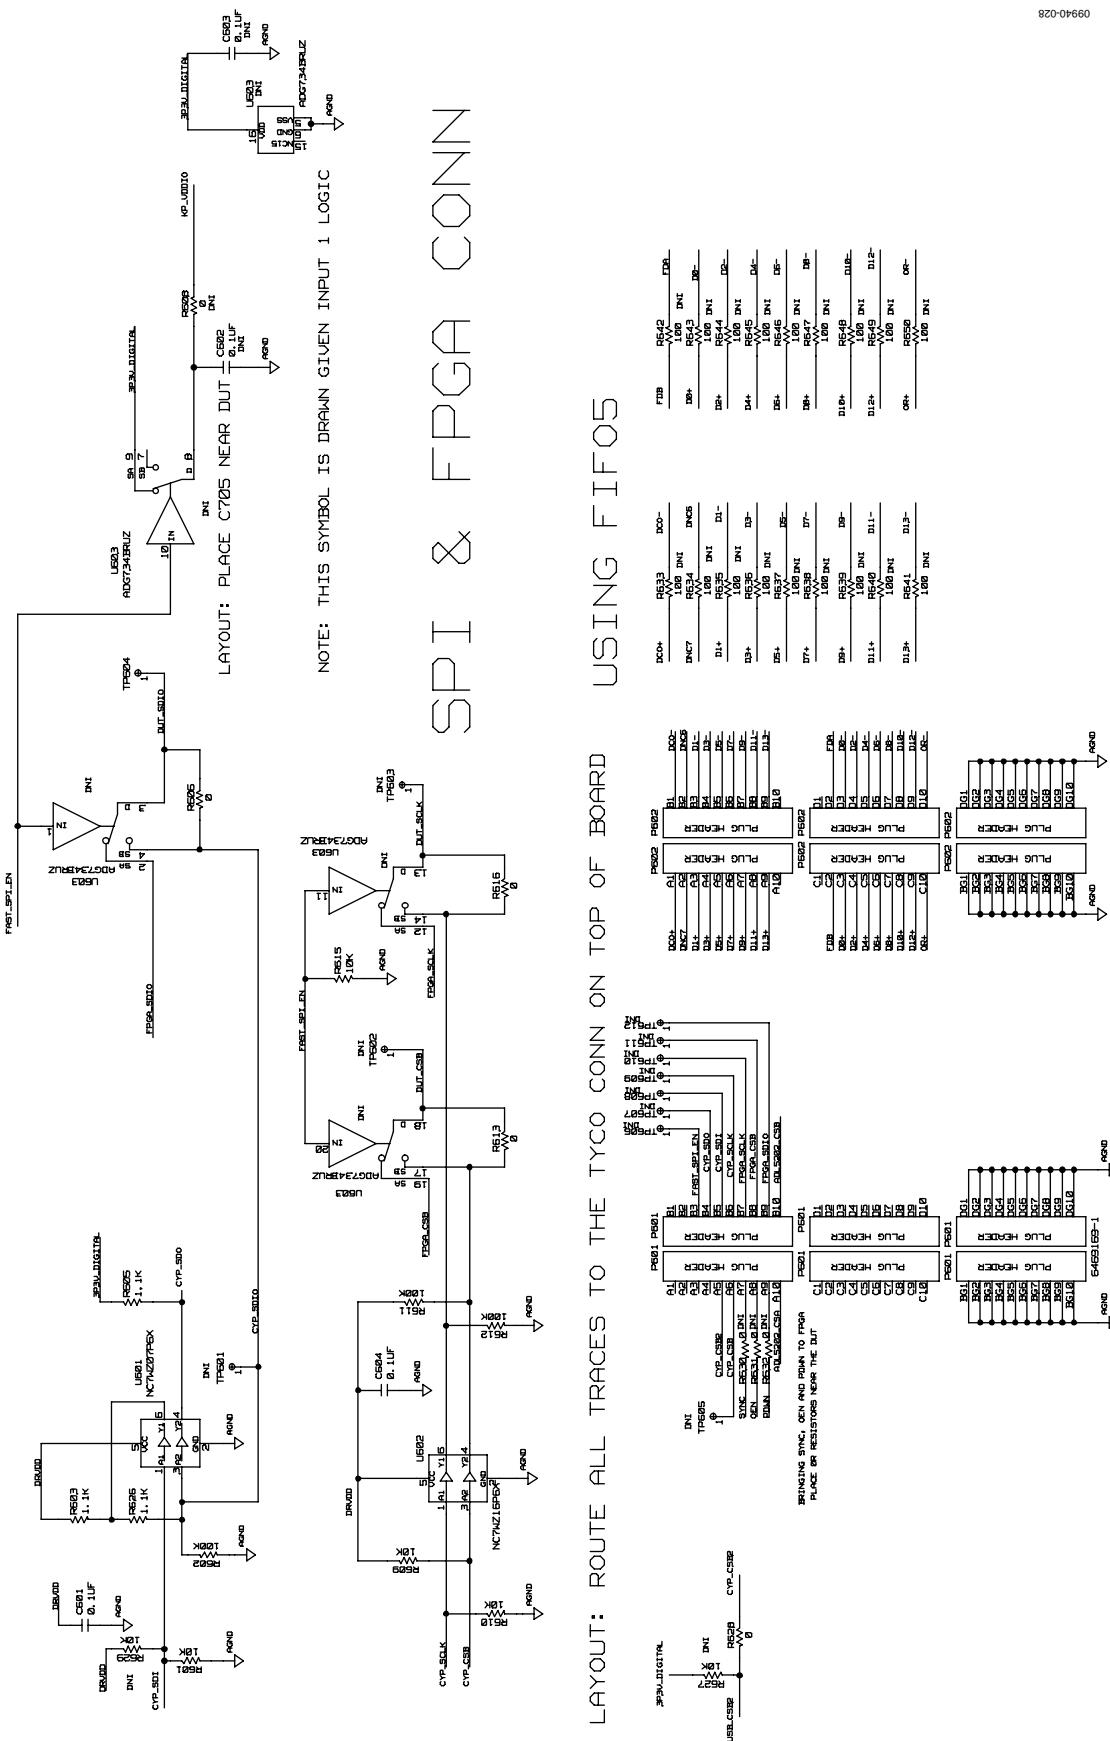


Figure 28. SPI Configuration Circuit and FIFO Board Connector Circuit

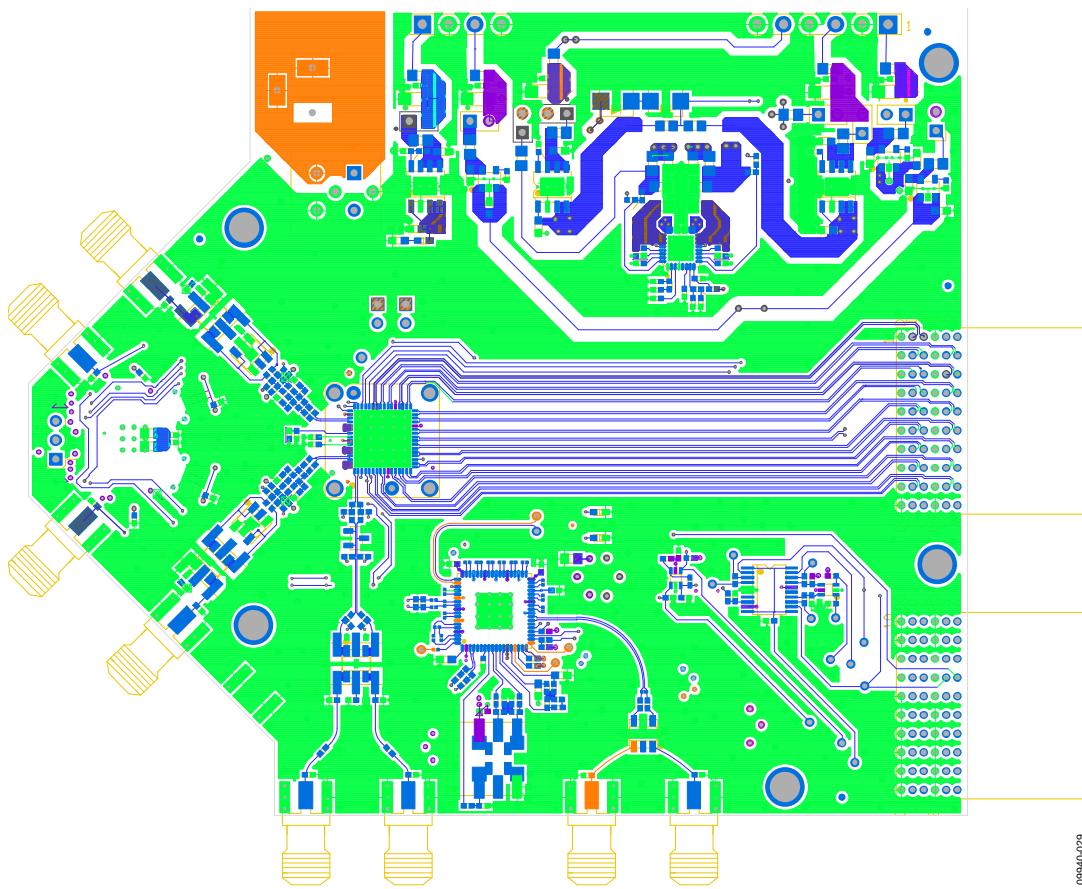


Figure 29. Top Side

09840-026

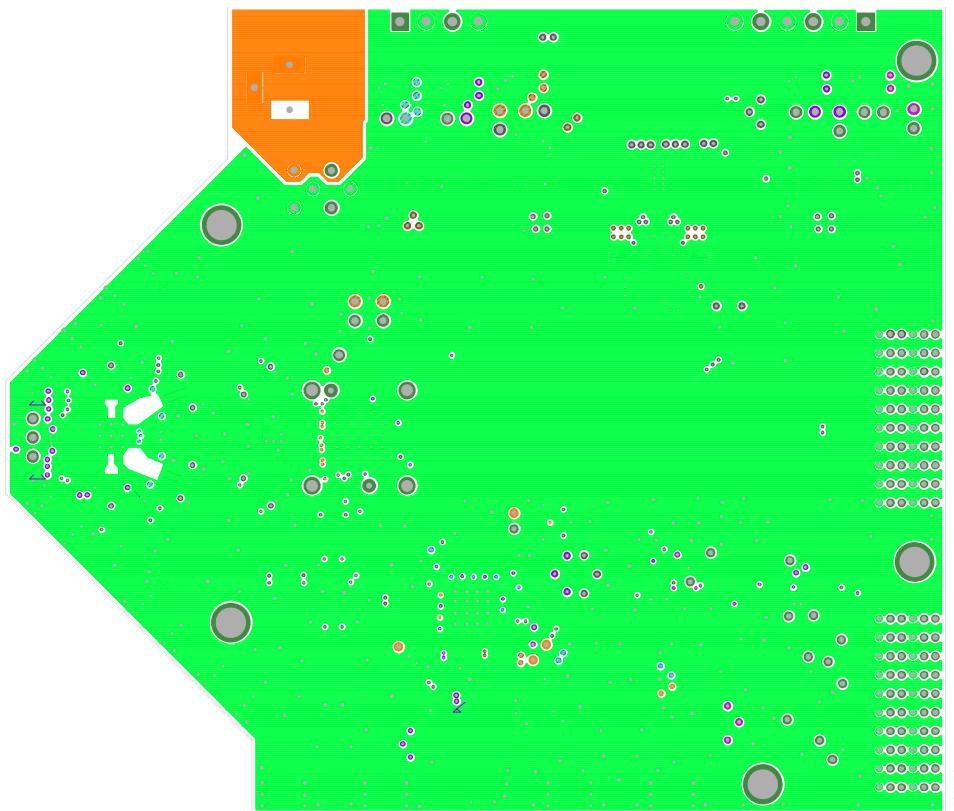


Figure 30. Ground Plane (Layer 2)

09840-026

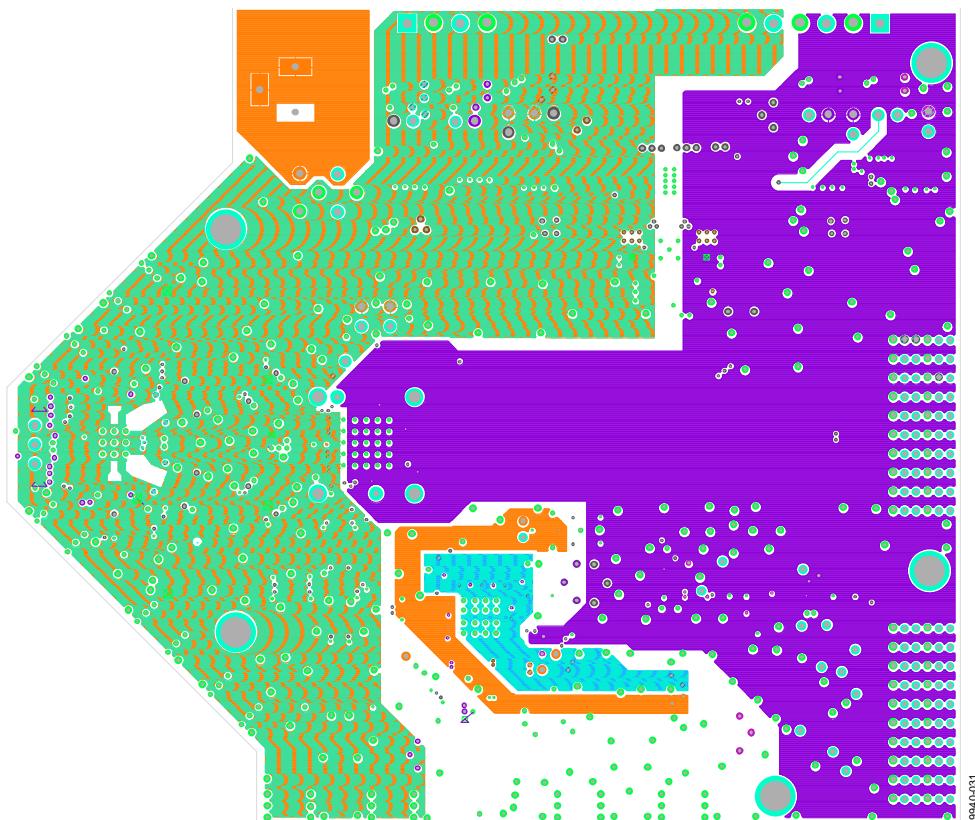


Figure 31. Power Plane (Layer 3)

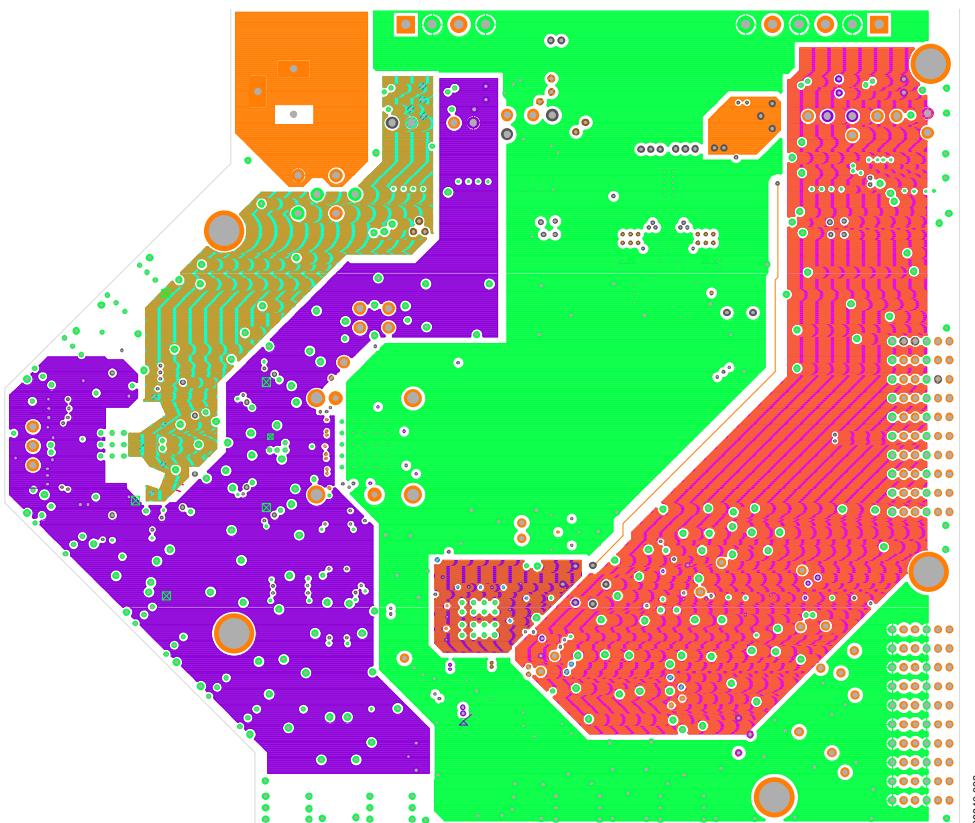


Figure 32. Power Plane (Layer 4)

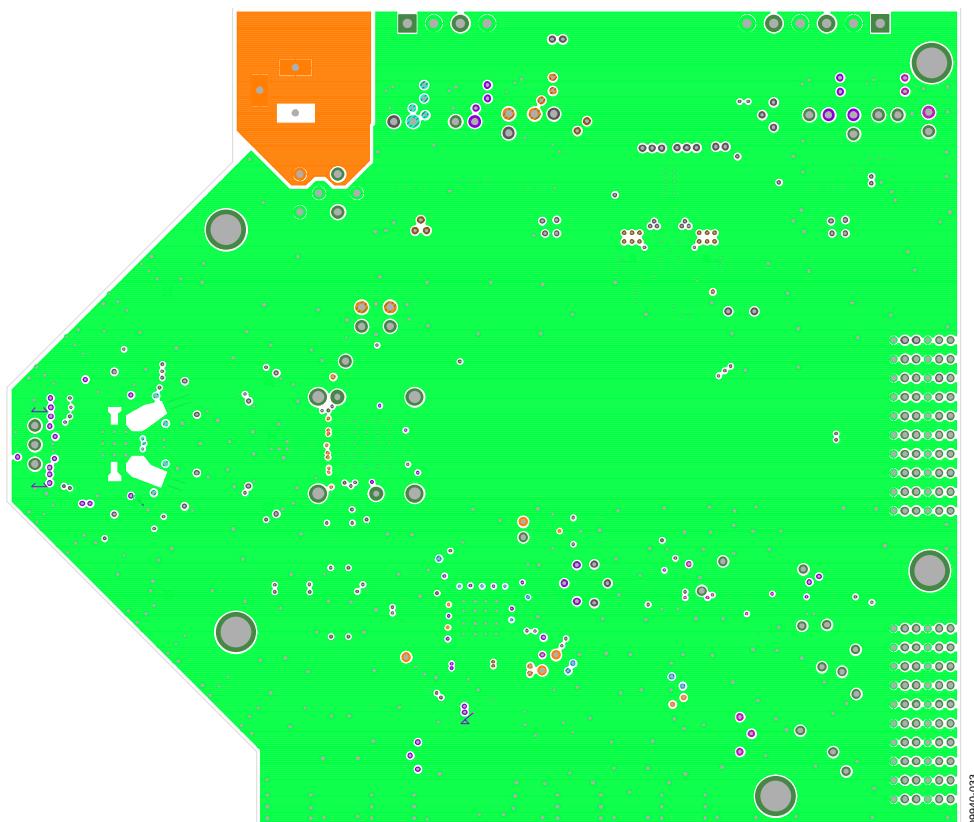


Figure 33. Ground Plane (Layer 5)

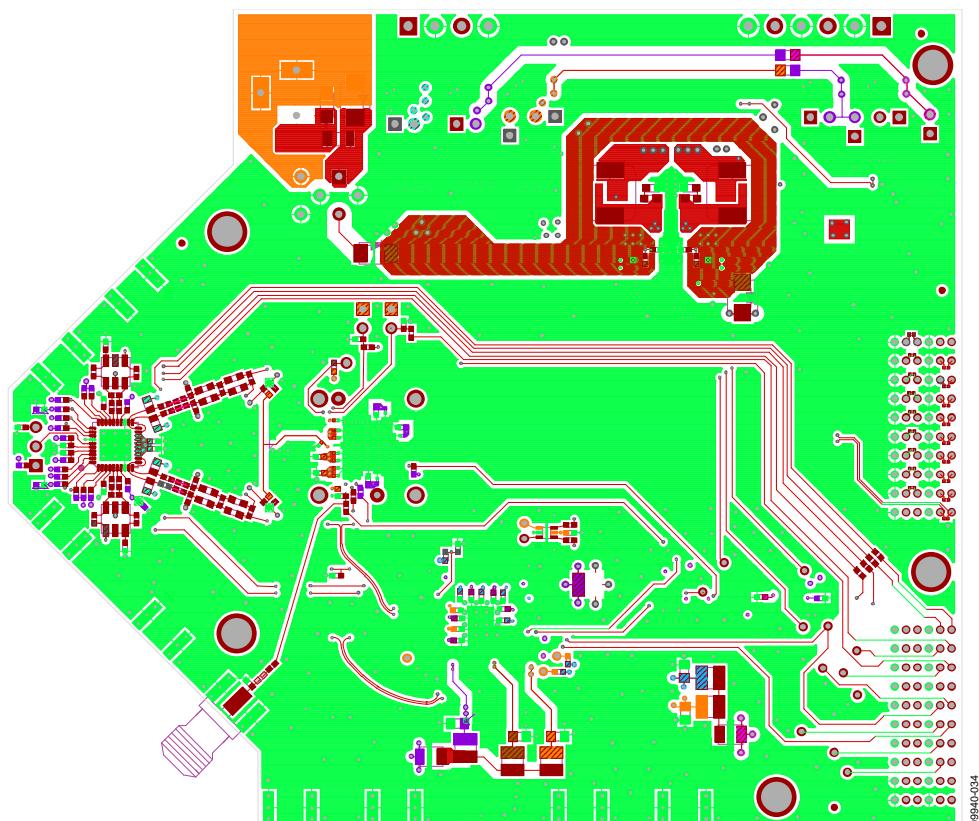


Figure 34. Bottom Side

ORDERING INFORMATION

BILL OF MATERIALS

Table 1. AD9643/AD9613/AD6649/AD6643 Bill of Materials

Item	Qty	Reference Designator	Description	Manufacturer/Part No.
1	1	Not applicable	Printed circuit board, AD9643 engineering board	9643EE01
2	16	C101, C102, C103, C105, C109, C110, C111, C112, C113, C114, C115, C514, C515, C516, C520, C521	0.1 µF capacitor ceramic X5R 0201	Murata GRM033R60J104KE19D
3	6	C107, C117, C118, C121, C122, C212	1 µF capacitor monolithic ceramic 0402	Murata GRM155R60J105KE19D
4	50	C123, C231, C233, C235, C237, C239, C301, C305, C306, C307, C311, C312, C401, C402, C403, C404, C405, C406, C407, C408, C409, C411, C413, C414, C419, C501, C502, C504, C505, C506, C507, C517, C518, C519, C535, C536, C537, C538, C539, C540, C541, C542, C543, C544, C545, C546, C547, C548, C601, C604	0.1 µF capacitor ceramic X7R 0402	Murata GRM155R71C104KA88D
5	6	C201, C232, C234, C236, C238, C240	10 µF capacitor tantalum	AVX TAJA106K010RNJ
6	12	C202, C203, C204, C206, C207, C209, C225, C227, C228, C230, C241, C243	4.7 µF capacitor monolithic ceramic X5R	Murata GRM188R60J475KE19
7	6	C210, C211, C220, C221, C223, C224	22 µF capacitor ceramic chip	Murata GRM21BR60J226ME39L
8	1	C213	2200 pF capacitor ceramic X7R 0402	Phycomp (Yageo) CC0402KRX7R9BB222
9	2	C214, C216	100 pF capacitor chip mono ceramic COG 0402	Murata GRM1555C1H101JD01D
10	1	C215	1500 pF capacitor ceramic X7R 0402	Murata GRM155R71H152KA01D
11	4	C217, C218, C226, C229	0.01 µF capacitor ceramic X7R 0402	Murata GRM155R71H103KA01D
12	2	C302, C308	3.9 pF capacitor ceramic NP0 0402	Murata GRM1555C1H3R9CZ01D
13	4	C303, C304, C309, C310	8.2 pF capacitor ceramic NP0 0402	YAGEO 0402CG829D9B200
14	8	C410, C412, C524, C525, C526, C527, C530, C534	10 µF capacitor ceramic monolithic	Murata GRM21BR61C106KE15L
15	2	C503, C508	0.33 µF capacitor ceramic X5R	Murata GRM155R61A334KE15D
16	1	C510	0.001 µF capacitor ceramic monolithic	Murata GRM155R71H102KA01D
17	3	C511, C512, C513	0.47 µF capacitor chip ceramic X7R 0603	Murata GCM188R71C474KA55D
18	3	C523, C532, C533	390 pF capacitor chip monolithic ceramic COG 0402	Murata GRM1555C1H391JA01D
19	1	CR201	Diode rectifier GPP SMD	Diode, Inc. S1AB-13
20	1	CR202	Diode Schottky 3-amp rectifier	MCC SK33A-TP
21	3	CR203, CR501, CR502	LED green surface-mount	Panasonic LNJ314G8TRA
22	3	CR204, CR205, CR206	Diode recovery rectifier	Micro Commercial Components CORP S2A-TP
23	1	CR503	Diode Schottky dual series	Avago HSMS-2812BLK
24	15	E201, E202, E204, E205, E207, E208, E209, E210, E211, E212, E213, E214, E215, E216, E217	100 MHZ inductor ferrite bead	Panasonic EXC-ML20A390U
25	2	E501, E502	45 Ω chip bead core	Panasonic EXCCL3225U1
26	1	F201	1.1 A fuse poly-switch PTC device 1812	Tyco Electronics NANOSMDC110F-2
27	1	FL201	Filter noise suppression LC combined type	Murata BNX016-01
28	4	J101, J301, J303, J506	Connector-PCB SMA ST edge mount	Samtec SMA-J-P-X-ST-EM1
29	2	JP201, JP203	0 Ω resistor jumper SMD 0805 (SHRT)	Panasonic ERJ-6GEYJ0.0
30	4	L401, L402, L407, L408	1 µH inductor SM	Coilcraft 0603LS-102XGLB
31	6	L501, L502, L503, L504, L505, L506	1 µH inductor SMT power	Coilcraft ME3220-102MLB
32	10	P101, P102, P103, P104, P105, P106, P107, P108, P109, P110	Connector-PCB header 2-position	Samtec TSW-102-08-G-S
33	1	P201	Connector-PCB DC power jack SM	CUI, Inc. PJ-202A

Item	Qty	Reference Designator	Description	Manufacturer/Part No.
34	1	P202	Connector-PCB header 6-position	Wieland Z5.531.3625.0
35	1	P203	Connector-PCB, pluggable header	Wieland Z5.531.3425.0
36	1	P400	Connector-PCB BERG header ST male 3-pin	Samtec TSW-103-08-G-S
37	2	P601, P602	Connector-PCB 60-pin RA connector	Tyco 6469169-1
38	18	C528, R101, R217, R219, R401, R402, R439, R440, R441, R442, R506, R522, R523, R537, R606, R613, R616, R628	0 Ω resistor film SMD 0402	Panasonic ERJ-2GE0R00X
39	1	R201	261 Ω resistor film chip thick	NIC Components Corp NRC06F2610TRF
40	22	R202, R409, R413, R416, R417, R418, R419, R420, R421, R422, R423, R424, R425, R509, R515, R516, R518, R519, R601, R609, R610, R615	10 kΩ resistor PREC thick film chip R0402	Panasonic ERJ-2RKF1002X
41	2	R103, R203	1.91 kΩ resistor PREC thick film chip R0402	Panasonic ERJ-2RKF1911X
42	14	R205, R222, R427, R428, R429, R430, R431, R432, R434, R445, R502, R603, R605, R626	1.00 kΩ resistor PREC thick film chip R0402	Panasonic ERJ-2RKF1001X
43	5	R206, R319, R320, R339, R340	10 Ω resistor PREC thick film chip R0402	Panasonic ERJ-2RKF10R0X
44	5	R207, R208, R602, R611, R612	100 kΩ resistor PREC thick film chip R0402	Panasonic ERJ-2RKF1003X
	1	R209	27 kΩ resistor CHIP SMD 0402	Panasonic ERJ-2RKF2702X
46	1	R210	4.64 kΩ resistor PREC thick film chip R0402	Panasonic ERJ-2RKF4641X
47	2	R211, R212	15 kΩ resistor chip SMD 0402	Panasonic ERJ-2RKF1502X
48	1	R213	13 kΩ resistor film SMD 0402	Yageo 9C04021A1302FLHF3
49	1	R214	10.5 kΩ resistor PREC thick film chip R0402	Panasonic ERJ-2RKF1052X
50	4	R302, R303, R539, R540	33 Ω resistor film SMD 0402	Panasonic ERJ-2GEJ330X
51	4	R313, R314, R333, R334	36 Ω resistor film SMD 0402	Panasonic ERJ-2GEJ360X
52	4	R315, R316, R335, R336	15.0 Ω resistor film SMD 0402	Panasonic ERJ-2RKF15R0X
53	8	R317, R318, R337, R338, R501, R503, R505, R604	49.9 Ω resistor PREC thick film chip R0402	Panasonic ERJ-2RKF49R9X
54	13	R510, R511, R524, R525, R526, R527, R531, R532, R535, R536, R544, R545, R546	100 Ω resistor PREC thick film chip R0201	Panasonic ERJ-1GEF1000C
55	2	R513, R514	200 Ω resistor PREC thick film chip R0402	Panasonic ERJ-2RKF2000X
56	6	T302, T303, T306, T307, T501, T503	XFMR RF 1:1	M/A-COM ETC1-1-13
57	1	U1010	SKT 64-pin LFCSP	Analog Devices AD6649BCPZ or AD9643BCPZ
58	1	U201	IC Analog Devices low dropout CMOS linear regulator	Analog Devices ADP1708ARDZ-R7
59	2	U202, U203	IC 150 mA ultralow noise, CMOS linear regulator	Analog Devices ADP150AUJZ-3.3-R7
60	2	U204, U205	IC Analog Devices low dropout CMOS linear regulator	Analog Devices ADP1706ARDZ-1.8-R7
61	1	U206	IC Analog Devices dual configurable synchronous PWM step-down regulator	Analog Devices ADP2114ACPZ
62	1	U207	IC 150 mA ultralow noise, CMOS linear regulator	Analog Devices ADP150AUJZ-1.8-R7
63	2	U300, U602	IC tiny logic UHS dual buffer	Fairchild NC7WZ16P6X
64	1	U601	IC tiny logic UHS dual buffer	Fairchild NC7WZ07P6X
65 ¹		C125	1 μF capacitor monolithic ceramic 0402	Murata GRM155R60J105KE19D
66 ¹		C126, C313, C314, C441, C442, C522, C529, C602, C603	0.1 μF capacitor ceramic X7R 0402	Murata GRM155R71C104KA88D
67 ¹		C205, C208, C242	0.01 μF capacitor ceramic X7R 0402	Murata GRM155R71H103KA01D
68 ¹		C219, C222	TBD_C0603	
69 ¹		C415, C416, C421, C422	1200 pF capacitor ceramic X7R 0402	Murata GRM155R71H122KA01D
70 ¹		C417, C423	2.7 pF capacitor ceramic	Samsung CL05C2R7CBNC
71 ¹		C418, C424	22 pF capacitor ceramic	Phycomp (YAGEO) 0402CG220J9B200
72 ¹		C509	0.001 μF capacitor ceramic monolithic	Murata GRM155R71H102KA01D

Item	Qty	Reference Designator	Description	Manufacturer/Part No.
73 ¹		C531	12 pF capacitor ceramic C0G 0402	Murata GRM1555C1H120JZ01D
74 ¹		E203, E206	100 MHZ inductor ferrite bead	Panasonic EXC-ML20A390U
75 ¹		J403, J404, J502, J503, J505	Connector-PCB SMA ST edge mount	Samtec SMA-J-P-X-ST-EM1
76 ¹		L201, L202	2.2 μ H inductor SM	Toko FDV0630-2R2M
77 ¹		L403, L404, L405, L406, L409, L410, L411, L412	120 nH inductor SM	Panasonic ELJ-RER12JF3
78 ¹		L507	3.9 nH inductor SM	Toko LL1005-FN3N9K
79 ¹		R102	2.0 k Ω resistor film SMD 0402	Multicomp CR10B202JT
80 ¹		R104, R107, R108, R517, R627, R629	10 k Ω resistor PREC thick film chip R0402	Panasonic ERJ-2RKF1002X
81 ¹		R105, R301, D55R321, R437, R438, R520, R521, R529, R530	49.9 Ω resistor PREC thick film chip R0402	Panasonic ERJ-2RKF49R9X
82 ¹		R106, R109, R110, R111, R112, R204, R216, R218, R221, R311, R312, R331, R332, R403, R404, R406, R407, R410, R411, R414, R415, R508, R533, R534, R538, R541, R542, R608, R630, R631, R632	0 Ω resistor film SMD 0402	Panasonic ERJ-2GE0R00X
83 ¹		R215, R220	TBD_R0603	
84 ¹		R405, R408	130 Ω resistor PREC thick film chip R0402	Panasonic ERJ-2RKF1300X
85 ¹		R412, R426, R443, R444	150 Ω resistor ultra-PREC ultrareliability MF chip	Susumu RG1005P-151-B-T5
86 ¹		R433, R446	1 k Ω resistor ultra-PREC ultrareliability MF chip	Susumu RG1005P-102-B-T5
87 ¹		R507	TBD_R0402	
88 ¹		R512, R633, R634, R635, R636, R637, R638, R639, R640, R641, R642, R643, R644, R645, R646, R647, R648, R649, R650	100 Ω resistor PREC thick film chip R0201	Panasonic ERJ-1GEF1000C
89 ¹		R543	100 Ω resistor film SMD 0402	Venkel CR0402-16W-1000FPT
90 ¹		T301, T305, T502	XFMR RF	Mini-Circuits ADT1-1WT+
91 ¹		T401, T402	XFMR RF	Mini-Circuits TC3-1T+
92 ¹		U401	IC Analog Devices ADL5202	Analog Devices ADL5202
93 ¹		U501	IC Analog Devices AD9523-1	Analog Devices AD9523-1BCPZ
94 ¹		U603	IC Analog Devices CMOS, quad SPDT switches	Analog Devices ADG734BRUZ
95 ¹		Y501	60 MHz to 800 MHZ IC oscillator voltage controlled oscillator	Epson Toyocom TCO-2111

¹ Do not install.

RELATED LINKS

Resource	Description
AD6643	Product Page, 14-Bit, 170/210/250 MSPS, 1.8 V Dual Analog-to-Digital Converter (ADC)
AD6649	Product Page, IF Diversity Receiver
AD9613	Product Page, 12-bit, 170/210/250 MSPS, 1.8 V Dual Analog-to-Digital Converter (ADC)
AD9643	Product Page, 14-Bit, 170/210/250 MSPS, 1.8 V Dual Analog-to-Digital Converter (ADC)
ADP2114	Product Page, Configurable, Dual 2 A/Single 4 A, Synchronous Step-Down DC-to-DC Regulator
AD9523	Product Page, 14-Output, Low Jitter Clock generator
ADG734	Product Page, CMOS, 2.5 Ω Low Voltage, Quad SPDT Switch
AN-878	Application Note, <i>High Speed ADC SPI Control Software</i>
AN-877	Application Note, <i>Interfacing to High Speed ADCs via SPI</i>
AN-835	Application Note, <i>Understanding ADC Testing and Evaluation</i>
AN-905	Application Note, <i>VisualAnalog Converter Evaluation Tool Version 1.0 User Manual</i>

**ESD Caution**

ESD (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

Legal Terms and Conditions

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. ("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board; and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer; all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. CONFIDENTIALITY. This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. ADDITIONAL RESTRICTIONS. Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the RoHS Directive. TERMINATION. ADI may terminate this Agreement at any time upon giving written notice to Customer. Customer agrees to return to ADI the Evaluation Board at that time. LIMITATION OF LIABILITY. THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTEES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100.00). EXPORT. Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. GOVERNING LAW. This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.