

Tunnel Series Thermoelectric Cooler Assembly

The DAT-040-12-02 is a thermoelectric based air conditioner designed to temperature control small chambers used in analytical and medical diagnostic instruments. The unique design offers premium fans pushing air across-high density heat sinks to minimize the number of air flow paths required to operate. The design utilizes custom thermoelectric modules to maximize cooling capacity with a high coefficient of performance. Moisture resistant insulation is used to keep condensation from penetrating the thermoelectric module cavity. The unit operates on DC and is designed for an indoor lab use environment. It has a maximum Qc of 40 Watts when $\Delta T = 0$ and a maximum ΔT of 40 °C at Qc = 0.




Features

- Compact design
- Precise temperature control
- Reliable solid-state operation
- DC operation
- RoHS-compliant


Applications


- Thermoelectric Coolers and Assemblies for Medical Applications
- Liquid Cooling Options for PET and SPECT Scanners
- Peltier Cooling for Refrigerated Centrifuges
- High-Performance Liquid Chromatography (HPLC)
- Thermal Management Solutions for Beverage Cooling
- Heating and Cooling for Liquid Chromatography Systems

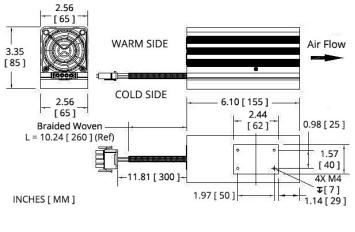





ELECTRICAL AND THERMAL PERFORMANCE

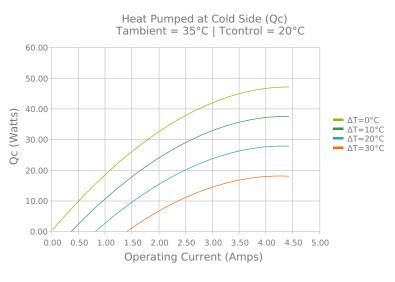


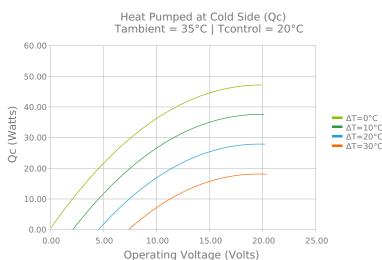





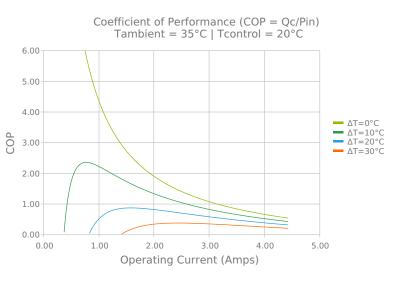


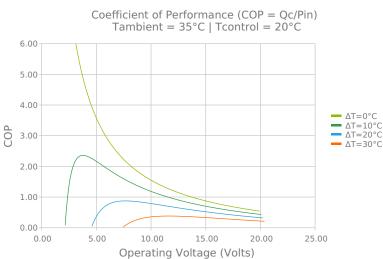

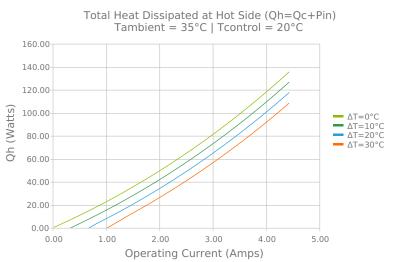

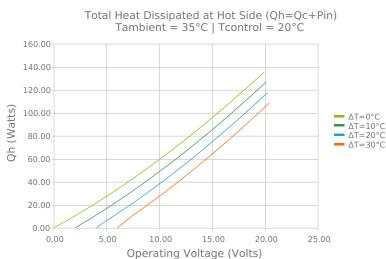

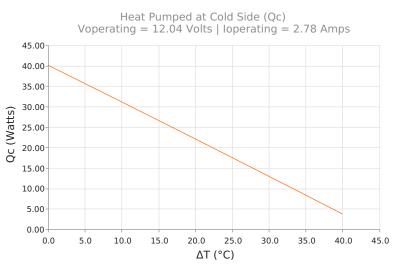

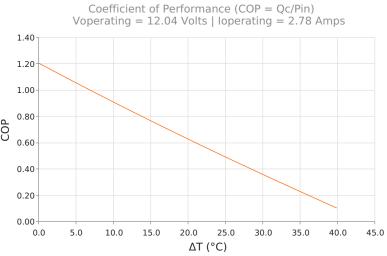



SPECIFICATIONS

Operating Temperature Range

Supply Voltage

Current Draw


Power Supply

Performance Tolerance

Fan MTBF

Weight

MOUNTING HOLE LOCATION

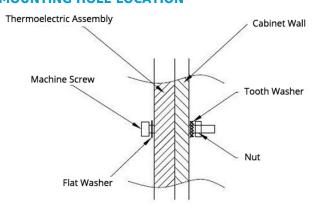

	-10°C to 50°C	
12.0) VDC nominal / 15.0 VDC maximum	
	2.9 A running / 3.4 A startup	
	38.0 Watts	
	10%	
	50,000 hours	
	0.80 kg	

WIRING SCHEMATIC

				SUPPLIED CONNECTOR		MATING CONNECTOR	
PIN#	OBJECT	WIRE SIZE	COLOR	PLUG	PIN	RECEPTACLE	SOCKET
1	TEM +	- AWG #20	Red	5000	TE Connectivity 350547-1	TE Connectivity	TE Connectivity 350550-1
2	TEM -		Black				
3	FAN HOT SIDE +		White	TE Connectivity 350779-1			
4	FAN HOT SIDE -		Green				

NOTES

¹For indoor use only

²Units are generally maintenance free, however occasionally it is recommended to clean the heat sinks and fans of debris. This is best done with compressed air.

Any information furnished by Laird and its agents, whether in specifications, data sheets, product catalogues or otherwise, is believed to be (but is not warranted as being) accurate and reliable, is provided for information only and does not form part of any contract with Laird. All specifications are subject to change without notice. Laird assumes no responsibility and disclaims all liability for losses or damages resulting from use of or reliance on this information. All Laird products are sold subject to the Laird Terms and Conditions of sale (including Laird's limited warranty) in effect from time to time, a copy of which will be furnished upon request.

© Copyright 2019-2021 Laird Thermal Systems, Inc. All rights reserved. Laird™, the Laird Ring Logo, and Laird Thermal Systems™ are trademarks or registered trademarks of Laird Limited or its subsidiaries.

Date: 12/14/2021