

## Installation Instructions for the MICRO SWITCH Z Series Basic Switches (ZD, ZM, ZM1, ZW, ZX Series)

#### **⚠ WARNING**

##### **IMPROPER INSTALLATION**

**DO NOT USE** these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

**Failure to comply with these instructions could result in death or serious injury.**

#### **STOP CAUTION**

##### **SWITCH DAMAGE**

- Wiring must be rated to meet or exceed circuitry requirements.
- Connecting circuitry must not exceed switch rating.
- Wiring connections must be properly secured.
- Do not exceed recommended soldering time or temperature.
- Do not contact switch housing with soldering device.
- Do not exceed recommended mounting screw tightening torques.
- Discontinue use if switch has been damaged or cover removed.
- Do not apply side loads to actuator or exceed specified travel limits.
- Do not operate or store in areas where corrosive gases such as hydrogen sulfide are present.

**Failure to comply with these instructions could result in death or serious injury.**

#### **⚠ DANGER**

##### **IMPROPER USE**

**DO NOT USE** these products in hazardous environments where flammable or explosive gases or liquids such as gasoline or thinners, etc., are present.

**Failure to comply with these instructions could result in death or serious injury.**

#### **GENERAL INFORMATION**

MICRO SWITCH Z Series switches are precision snap-action contact mechanisms enclosed in molded plastic cases. Switch actuation triggers the mechanical closure of the switch's contacts. A small amount of arcing between the contacts during contact closure occurs during normal operation. In order to obtain desired switch performance, the switch must be chosen based on the mechanical, electrical and environmental conditions of the application.

Z Series switches are designed for use in a wide range of applications. Typical applications include:

- Computer mouse
- Tape systems
- Printers
- Copiers

#### **MOUNTING INFORMATION**

Switch series	Screw type*	Screw size	Tightening torque max.
ZX	Pan head	2,0 mm	1,6 kg-cm [1.4 lb-in]
ZM, ZM1, ZW	Pan head	2,0 mm	1,6 kg-cm [1.4 lb-in]
ZD	Pan head	3,0 mm	4,8 kg-cm [4.2 lb-in]


\*To prevent loosening of screws, use spring washers under screw heads and thread lock adhesive.

- Position the operating device perpendicular to the actuator/pushbutton to prevent side loading of the switch actuator or pushbutton.
- Position the operating device so that no force is applied to the pushbutton/actuator when the switch is in the free (open) position.
- The operating device should be positioned so that when the switch is in the operating position it should move the actuator no less than 70 % of the total travel. Setting the travel position so that less than 70 % of the total travel is used may cause poor contact or welding conditions due to an insufficient contact switching force.
- The operating device should never force the actuator/pushbutton to exceed the total travel position.
- For switches with angled terminals, insert an insulator separator between the switch body and the PC board (insulator separator thickness 0,2 mm to 0,4 mm [0.008 in to 0.016 in]).

#### **WIRING INFORMATION**


- Connect wires firmly to terminals.
- Replace wires that have damaged insulation.
- Use properly sized spade terminals.
- Provide strain relief when a potential exists for forces to be transferred from the lead wires to the switch terminals.

#### **PIN LOCATION**

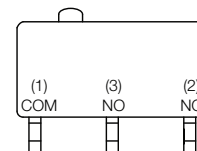

**Note:** The common pin is identifiable by its position on the end of the switch closest to the actuator/pushbutton. The normally open and normally closed contact positions are relative to the common pin, as shown.

#### **SPDT CIRCUITRY**

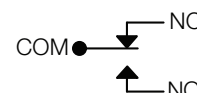

## SOLDERING GUIDELINES

When hand soldering switch terminals, do not exceed five seconds at 350 °C [662 °F] (exception for ZD Series switches: Do not exceed five seconds at 300 °C [572 °F] or three seconds at 350 °C [662 °F]). Contacting the switch housing with the soldering device may damage the switch housing. Solder joints must not be moved for at least one minute after soldering.

When wave soldering, do not exceed five seconds at 260 °C [500 °F] or subject to aqueous wash. Use alcohol and swab to clean terminals. Use of no-clean flux is recommended.

## ENVIRONMENTAL OPERATING CHARACTERISTICS

Switch series	Operating temperature range
ZX, ZD	-40 °C to 85 °C [-40 °F to 185 °F]
ZM, ZM1	0 °C to 120 °C [32 °F to 248 °F]
ZW	-40 °C to 120 °C [-40 °F to 248 °F]* -40 °C to 70 °C [-40 °F to 158 °F]**

\*Terminal types or pre-wired with high heat-resistant cables.

\*\* Pre-wired with PVC cables.

## WARRANTY/REMEDY

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgment or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items that Honeywell, in its sole discretion, finds defective. **The foregoing is buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.**

While Honeywell may provide application assistance personally, through our literature and the Honeywell web site, it is customer's sole responsibility to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, Honeywell assumes no responsibility for its use.

Honeywell serves its customers through a worldwide network of sales offices, representatives and distributors. For application assistance, current specifications, pricing or name of the nearest Authorized Distributor, contact your local sales office or:

E-mail: [info.sc@honeywell.com](mailto:info.sc@honeywell.com)

Internet: [sensing.honeywell.com](http://sensing.honeywell.com)

Phone and Fax:

USA/Canada +1-800-537-6945

International +1-815-235-6847; +1-815-235-6545 Fax